


USER MANUAL

AIR FRYER

DM0348 DM0349 DM0350

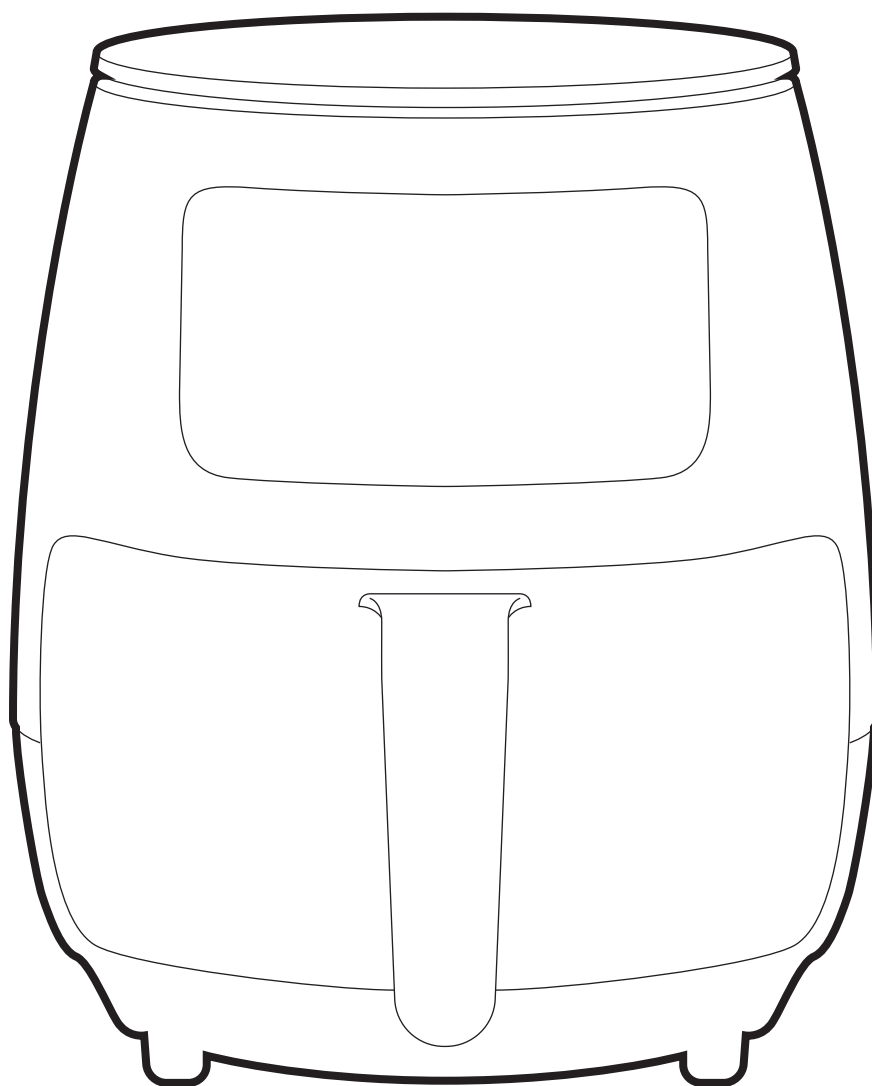

Please read this manual carefully before use and keep it properly.

SAFETY INFORMATION

HAZARD

1. Do not immerse in or rinse in water as the housing contains electronic and heating elements.
2. Ensure that no liquid enters the product to prevent electric shock and short circuits.
3. Place all materials below the highest indicated line in the frying basket to avoid contact with the heating components. Burnt materials can produce odours and fumes.
4. Do not block the air inlet and outlet when the product is in operation.
5. Avoid pouring oil into the frying basket to prevent fire.
6. Do not touch the inside of the product during operation to avoid burns.

CAUTION

1. Make sure the product voltage is the same as the local power supply voltage.
2. Do not use the air fryer if the internal coating is peeling off badly.
3. Do not use if the plug, mains cord or other parts are damaged.
4. If the cord or plug is damaged, it should only be replaced by the manufacturer or its professional service personnel to avoid danger.
5. Keep the product and its cord out of the reach of children.
6. The air outlet will become hot during use. Keep away from heat sources.
7. Do not operate or touch the control panel with wet hands when the power is on.
8. Make sure the product is plugged into a grounded outlet.
9. Do not connect an external timer switch.
10. Avoid placing near flammable materials such as tablecloths or curtains.
11. Keep a distance of at least 10 cm from walls or other electrical appliances.
12. Do not place anything on top of the product.
13. Use the product only in accordance with the instructions in the manual.
14. Ensure that the product is supervised when in use.
15. Be careful of heat and steam, especially when removing the frying basket.
16. Unplug the appliance immediately when black smoke is detected.
17. Do not move product or frying basket until smoke has completely dissipated.

NOTICE

1. Use the product in accordance with the instructions. Failure to do so may render the product ineffective or create a hazard. Keep this manual in a

safe place for future reference.

2. This product is designed for home use and may not be suitable for non-residential environments such as staff kitchens, farms or motels.
3. Ensure that the product is placed on a balanced, heat-resistant surface.

BEFORE USE

1. Remove all packing materials, stickers or labels.
2. Clean frying baskets and steam racks with hot water, liquid detergent and a sponge.
3. Wipe the product inside and out with a clean cloth.

IN USE

1. Do not add oil or any liquid to the frying basket.
2. Be careful when removing the frying basket from the air fryer.
3. Place the Steam Rack into the Frying Basket, add food to the Steam Rack, and slide the Frying Basket back into the Air Fryer.
4. Some ingredients need to be constantly turned during cooking. Pull the frying basket out of the product and shake or turn the ingredients. Then, slide the fry basket back into the air fryer.
5. To prevent burns, avoid touching the air fryer body, frying basket, etc. during shaking.
6. For specific operating instructions, refer to the "Operating Guide".

OPERATION GUIDE



1. BASIC OPERATION

- After plugging in, press the Power Button to switch on, then press the corresponding Menu Button to select the cooking preset. There are 4 cooking modes to choose from.
- If there is no mode available for your ingredients, you can choose any preset and then manually adjust the desired time and temperature.
- Long press the Power Button to switch off the product.

2. TEMPERATURE SETTING

- Press the Temperature Button to adjust. Each press increases 5 °C, accompanied by a beep.
- Long press to increase the temperature by 10°C each time, from 80 to 210°C.
- This function is cyclically adjustable, when the temperature has been adjusted to the highest, press the button again to return to the lowest.

3. TIME SETTING

- Press the Time Button to adjust. Each time increases 5 minutes, accompanied by a beep.
- Long press to increase the time by 10 minutes each time, from 5 to 90 minutes.
- This function is cyclically adjustable, when the time has been adjusted to the maximum, press the button again to return to the minimum.

4. WARM FUNCTION

- After plugging in, press the Power Button to switch on. Then press the Warm Button; it will be activated automatically after 3 seconds.

5. RESERVATION FUNCTION

- After plugging in, press the Power Button to switch on. Then press the Timing Button to set the reservation time. Next, press the corresponding Menu Button to select the cooking preset. It will be activated automatically after 3 seconds.

CARE & MAINTENANCE

CLEANING

- The product requires approximately 30 minutes to cool down before cleaning.
- Clean the product after each use, and remember to remove the steam rack. Do not use metal tools or abrasive cleaning materials to clean the product, the internal frying basket and steam rack, as this may damage their non-stick spray paint.

STORAGE

- Unplug the product and make sure it is completely cooled.
- Make sure the parts are clean and dry.

FAQs

PROBLEMS	PROBABLE CAUSES	SOLUTIONS
Product does not operate	Product is not plugged in	Plug the power supply into the socket.
Ingredients not cooked	Ingredients in the fryer are too large	Put small pieces of ingredients in the fryer basket. Small pieces of ingredients in the fryer are easy to cook.
	The temperature setting is too low	Set the right temperature and time according to the ingredients.
	The cooking time is too short	
	Ingredients not turned during cooking	If there are a large number of ingredients or overlapping sections, the ingredients need to be fully turned during cooking.
Frying basket cannot be pushed into the air fryer	Too many ingredients in the basket	Ensure that the basket is not overflowing its maximum capacity.
White smoke coming out of the pan	Ingredients are greasy	When cooking greasy ingredients, a lot of grease seeps out and the fryer heats up, causing smoke, but this does not affect the cooking result.
	Grease from previous cooking remains in the pan.	The product needs to be cleaned after each use.

Individuals with weakened physical, sensory or mental abilities, including children, or individuals lacking experience and knowledge must not use the equipment unless supervised or instructed.

Children must be supervised to prevent them from playing with the equipment.

The symbol  indicates a hot surface; do not touch.

Do not use the air fryer if the internal coating is peeling off badly.

MADE IN CHINA
-2024-