



SWING AND SLIDE

SAFETY & WARNINGS

Warning

- ADULT ASSEMBLY REQUIRED. Keep these instructions for future reference.
- Prior to assembly, this package contains small parts: hardware which is a choking hazard and may contain sharp edges and sharp points. Keep away from children until assembled.
- To prevent serious injury, children must not use the equipment until properly installed.
- Falls onto hard surfaces can result in head or other serious injuries. Never place on concrete, asphalt, wood, packed earth, grass or other hard surfaces.
- Carpet over hard floors may not prevent injury. Always use protective surfacing on the ground under and surrounding the playground equipment.
- Adult supervision required. Do not leave children unattended.
- Limit 2 children on climber. Limit 1 child on swing.
- Shoes must be worn at all times.
- This product is intended for outdoor domestic family use only. Observing the following statements and warnings reduces the likelihood of serious or fatal injury.
- Place this product on level ground and at least 6' (2 m) away from any object. Objects to be avoided include, but are not limited to, fences, buildings, overhead branches, laundry lines or electrical wires.
- It is recommended that the orientation of the assembled product be such that direct sunlight is minimized on surfaces intended for standing or sitting.

- Instruct children on proper use of this product, only after properly placed, and not in a manner other than intended.
- Instruct children to remove their bike or other sports helmet before playing on this product.
- Dress children appropriately: do not allow children to wear loose-fitting clothing including ponchos, scarves and garments with drawstrings. Well-fitting shoes must be worn at all times.
- Instruct children on proper swing use for their safety:
- Do not twist chains. Do not swing empty seats. Children should keep hands free of objects, inside of swing, and hold onto the ropes.
- Do not get off the swing while it is in motion.
- Do not walk too close to, in front of, behind, or between moving items.

COMPONENTS



A x 3PCS



B x 1PC



C x 1PC



D x 1PC



E x 2PCS



F x 1PC



G x 2PCS



H x 1PC



I x 1PC



J x 1PC



K x 1PCS



L x 2PCS



M x 13PCS




N x 1PC

INSTALLATION


Step 1

Attach B to C with two screws.

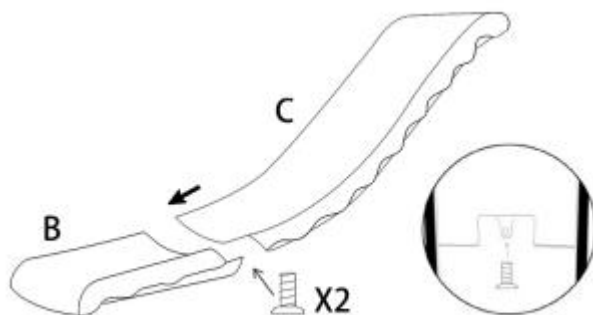


Step 2

Attach B and C to A with G.

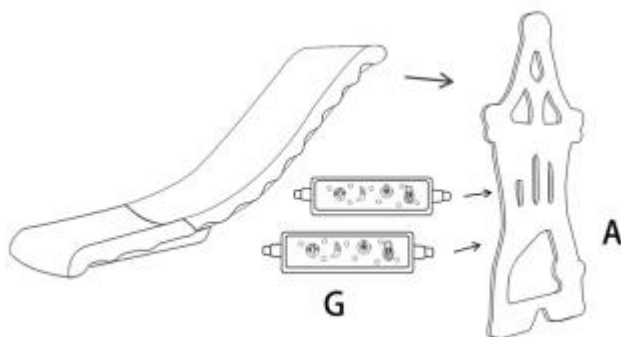


Step 3

Attach A to C as shown in the picture.

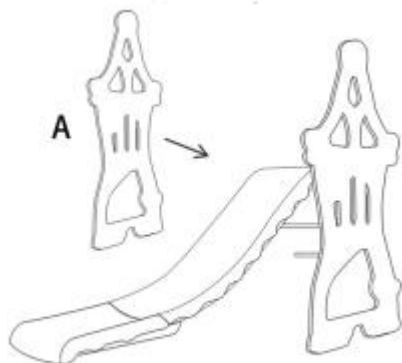


Step 4

Insert L and M into two A.

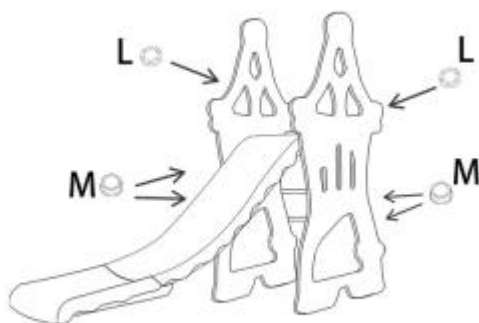


Step 5

Attach H and I to D.

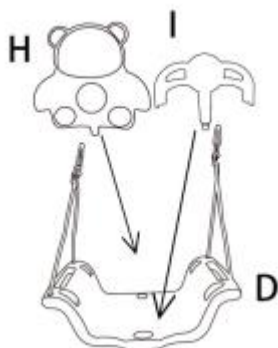


Step 6

Attach J to two A with M. Attach two E to two A with M as the picture shows.

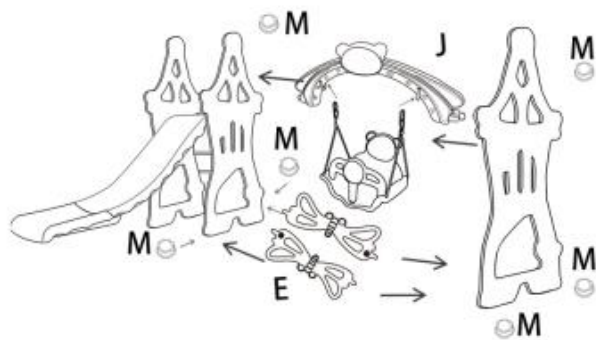


Step 7

Attach K to I.

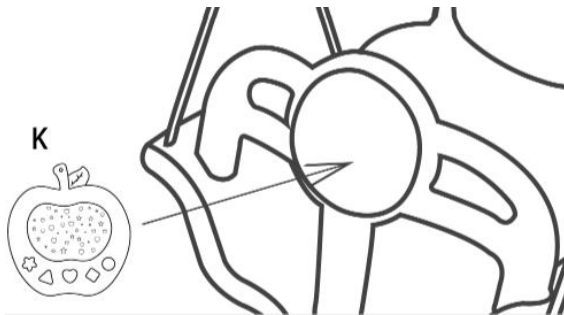

Step 8

Attach F to A with M.

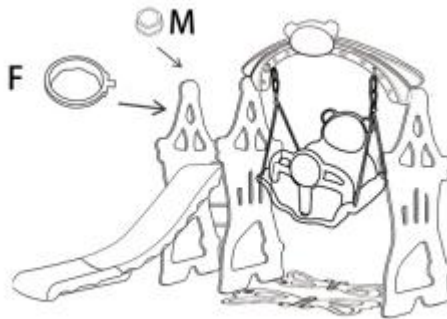

Step 9

Finished.



CLEANING & CARE

- Wipe off this product with washing cloth after squeezed firmly using a mild detergent and water.
- Do not use a scrub brush and/or a polishing powder as these may cause scratched, rust and discolor to the product. When using creosol or other disinfectants, make sure to dilute them, otherwise damage to the finish or discoloration may occur.
- Do not use harsh chemicals such as thinner, benzene or alcohol as these may cause damage/discoloration to the finish.
- After cleaning, wipe dry with soft cloth or place in a shaded area to air dry; do not place product in direct sunlight.
- Failure to perform periodic checks could cause this product to overturn or cause a fall.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Tighten all hardware.
- Lubricate all metallic moving parts at the beginning of the play season and twice per month during the play season.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats for wear, rust, or other deterioration. Replace if any of these conditions exist.

Living and Home

A Home is for Living in

For comfort and style update your living space.

Browse contemporary and classic designs and find the perfect home to your look and the perfect spot to lounge.

Put your feet up and sink into our stylish home decor.

We are mainly engaged in home, outdoor, home appliances, office, bathroom, provided high quality and affordable products for you. We value every one of our customers and our professional service team is always available to help you.

livingandhome.co.uk