


### Using double-sided adhesive foam (wood, plastic or metal surfaces):

First, peel one side of the adhesive foam and adhere it to the back of the metal bracket. Peel the other side and adhere the metal bracket to the fixing surface. See fig. 2 for reference.

NOTE: It is not advised to install the camera unit on a metal surface as it may interfere with the reception.

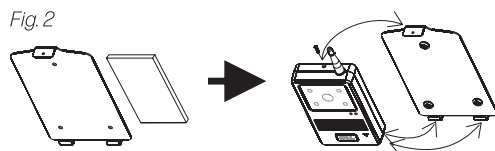

## Warranty Information

Your Lifemax product is guaranteed for one year against defective parts or construction. This guarantee is from the date of purchase and is only valid with proof of purchase. Please note this guarantee does not cover normal wear and tear or damage caused by accident or maltreatment. The extended right of this guarantee are in addition to the consumer statutory rights and do not limit the effect of these statutory rights.

Please register your product at <https://www.lifemaxuk.co.uk/warranty>

## Technical Specification

<b>Model No</b>	1271	<b>Wireless Frequency</b>	2.4GHz
<b>Transmitter Power</b>	4 x AA/LR6 6V	<b>Battery Type</b>	Lithium Polymer
<b>Receiver Power</b>	3.7V 900mAH	<b>Adapter Input</b>	100-240V 50/60Hz 0.2A
<b>Adapter Output</b>	5.0V 1.0A		



This is a WEEE symbol. It indicates that when the end-user discards this product, it must be sent to separate collection facilities for recovery and recycling. By separating this product from other household-type waste, the volume of waste sent to incinerators or land-fills will be reduced and natural resources will thus be conserved. Lifemax Ltd provide an end-of-life solution for this product when sold in the UK by accepting back any end of life items for processing by a local registered waste disposal company.



Lifemax Limited, 1 Pipers Court,  
Thatcham, Berkshire, RG19 4ER

Lifemax (Ireland), 51 Bracken Road,  
Sandyford, Dublin, D18 CV48

[www.lifemaxuk.co.uk](http://www.lifemaxuk.co.uk)



# Lifemax Wireless Video Door Phone

## Instruction Manual

SKU: 1271



Thank you for purchasing a Lifemax Wireless Video Door Phone. We hope you'll get many years of use from this product. We recommend you read this document thoroughly to familiarise yourself with how your product works, how you should use it safely and effectively and how to look after your product to ensure it continues working as it should.


Document Version No

[www.lifemaxuk.co.uk](http://www.lifemaxuk.co.uk)

# Product Information

Our full colour video door phone allows you to clearly see who is at the door using inbuilt wire-free technology. As well as live video, the door phone takes pictures of your last 20 visitors so you know who has called while you were out.

# What's included...?

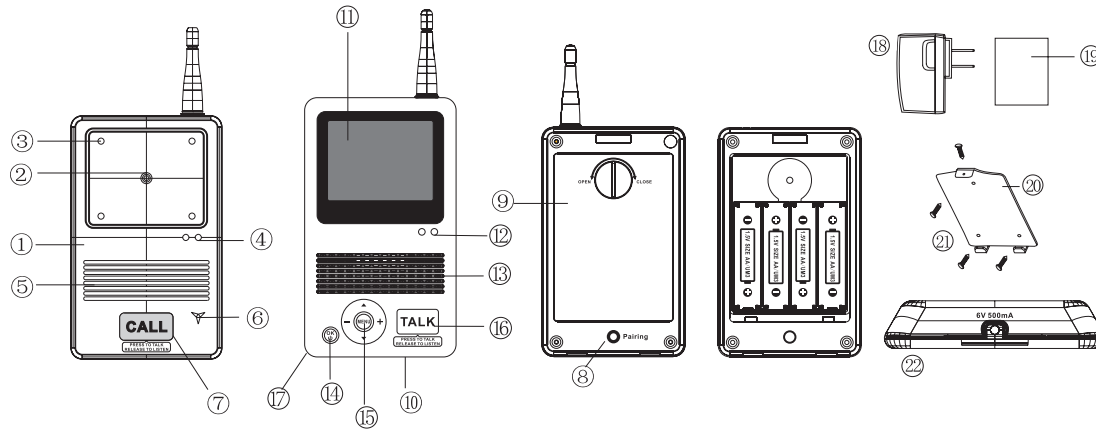

- |                          |                          |  |
|--------------------------|--------------------------|--|
| 1. Camera Unit           | 9. Battery Door          | 17. Lithium Polymer Battery (built-in) |
| 2. Camera Sensor         | 10. Receiver Unit        | 18. AC Adapter                         |
| 3. Infrared LED          | 11. 2.4" TFT LCD Display | 19. Double Sided Adhesive Foam         |
| 4. Indicator LED         | 12. Indicator Light      | 20. Metal Wall Bracket                 |
| 5. Speaker               | 13. Speaker              | 21. Screws                             |
| 6. Microphone            | 14. Power Button         | 22. Charging Dock                      |
| 7. Call button           | 15. Menu Button          |  |
| 8. Sync (Pairing) Button | 16. Talk Button          |  |

# Battery Installation

1. To open the battery compartment, turn knob located on the battery compartment door counter-clockwise.
2. Insert 4 x AA Batteries (Alkaline recommended)
3. Replace battery door, turn the knob clockwise to close. Keep turning until tight.

# Initial Setup

NOTE: Your Video Door Phone should be paired, ready for use. If it doesn't work straight out of the box you may need to complete the below pairing procedure.

**Receiver Unit:** Press the Power Button first, then press Menu Button for 5 seconds until the green LED starts to flash.

**Camera Unit:** Press and hold Sync Button then press the Call Button (keeping the Sync button held in). The screen on the receiver will active to indicate that pairing is complete.

# How to Use

1. When someone presses the Call Button on the Camera Unit, the Receiver unit will play a door chime and the video will come on.

2. Home owner must press the Talk Button on the Receiver Unit to talk back to the visitor. When done speaking, home owner must release the Talk Button to let the visitor answer.

## Video Memory Visitor Log

1. Home owner has the ability to go back and check the video visitor log.

2. Press the Menu Button once and then press UP or DOWN key to review the visitor log. The camera will take a picture of each visitor and these are stored on the receiver unit. The maximum capacity is 31 pictures. The first picture will be image No 1, the second will be image No 2 and so on up to 31. After 31 pictures, the first picture will be deleted and replaced automatically by each new picture. The last visitor will always be image No 31. To delete a picture, when reviewing the visitor log, short press "▲" or "▼" button to display the pictures then hold the "-" button. Select "Yes" by short pressing the menu button to delete or press "+" button to select "No" followed by short pressing the "Menu" button to cancel deletion of the photos.

To adjust the picture quality, press the UP or DOWN key when in Call Mode.


Press the +/- buttons to adjust the sound level.

# Camera Installation

NOTE: The camera unit is water resistant but exposure to extreme weather can cause irreparable damage to this device. Where possible, the camera unit should be mounted in a sheltered area. You have two options for mounting the camera:

## Using Screws (for cement/brick walls):

First, mount the Metal Bracket onto a wall or door using the provided fixings. Next, attached the Camera Unit to the bracket. See fig. 1 for reference.

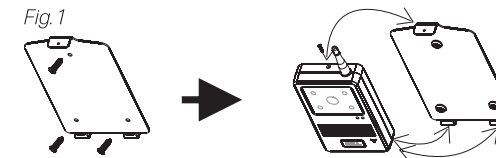

Continued overleaf