



GH918

Festive 17 Piece Light -up Music Train Set with Smoke Effect

INTRODUCTION

Thank you for buying your Festive train set. We hope you will enjoy using it throughout the festive period.

These instructions should be read carefully and left with the user of the product for future reference.

PRODUCT SAFETY

- This product is not a toy and is designed to complement a Christmas decorative arrangement.



Children under 3 must not play with this product. Children over 3 should only use this product with adult supervision. There are small parts in this kit



There are small parts in this kit

- This product produces a smoke effect and should not be used in the presence of people with asthma or similar breathing conditions.
- Only use fresh alkaline batteries. All batteries should be recycled.
- Do not use this item for anything else than its intended purpose.
- Remove batteries when not in use or when the batteries have been exhausted.
- Take care not to damage the product when assembling.

PARTS LIST

The set contains the following parts. Check and make sure that all the following components are in the box and all parts are not damaged. If any damage is detected, then contact your supplier for support.

1 x engine

2 x carriages

10 x curved track

4 x straight track



(x4)



(x10)



BATTERY INSTALLATION

- Make sure the unit is switched off
- Locate the battery cover on the train or fire tender (see fig. 1)
- Using a small cross blade screwdriver loosen the battery cover (see fig 2 and 3.)
- Carefully remove batteries if required
- Carefully insert 6 x AA batteries (not supplied)
- Replace the battery cover

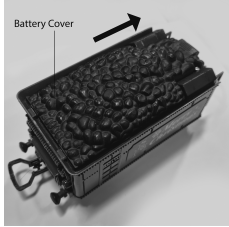 


Fig. 1

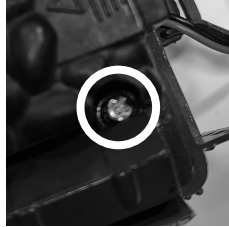 


Fig. 2



Fig. 3

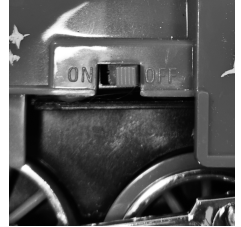 


Fig. 4

ASSEMBLY INSTRUCTIONS

- Attach the track together (see fig. 5)
- Carefully place the engine and the carriages on the assembled track so that all the wheels sit on the track
- Attach the carriages using the couplings on the rear of the engine/carriage
- Make sure the track is clear of obstructions and switch on (see fig. 4)

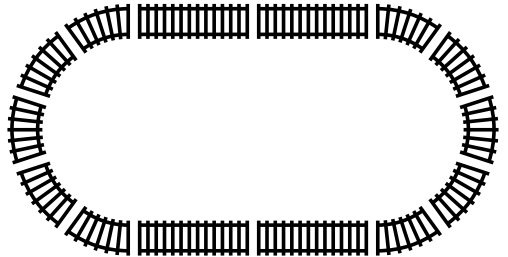 


Fig. 5

MAINTENANCE

- Store in a dry clean space when not in use
- Do not leave the batteries in when not in use
- Clean only with a slight damp cloth

DISPOSAL AND RECYCLING

You must not dispose of this product with domestic household waste.

Most local authorities have specific collection system for electronic items and disposal is free of charge to the end-user.

Electrovision Ltd., Lancots Lane, Sutton Oak, St. Helens, Merseyside WA9 3EX

website: www.electrovision.co.uk

