



DAEWOO®



HEALTHY LIVING

3.6L DIGITAL AIR FRYER

use less fat for a healthier lifestyle



READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Air Fryer.**
- **DO NOT** touch hot surfaces. Use the handles provided.
- Always ensure that the voltage on the rating label corresponds with the voltage in your home.
- Keep the appliance out of the reach of children.
- Keep the mains lead away from the body of the Air Fryer.
- **DO NOT** leave the appliance unattended whilst operating.
- Disconnect the appliance from the mains after use.
- To disconnect the appliance grip and pull the mains plug.
- **DO NOT** pull the power cord.
- **DO NOT** wrap the power cord around the appliance in use or during storage.
- Always disconnect the plug from the mains before cleaning. Wipe clean only, do not immerse the unit, plug or cord in water or any other liquid.
- Always allow the unit to cool before storage or cleaning.
- Retain the instruction manual for future use and reference.
- There are no user serviceable parts, if the unit fails, consult a qualified electrician, a repair centre or contact the supplier if the unit is under warranty.
- If the supply cord is damaged, it must be replaced by the manufacturer,

it's service agent or similarly qualified persons in order to avoid a hazard.

- It is recommended that this appliance should not be operated in conjunction with an electrical extension lead.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- For indoor use only.
- Keep away from splashes of water or damp conditions.
- For domestic use only.
- **DO NOT** use accessories with this appliance other than those recommended by the supplier.
- **DO NOT** use this product with an external programmer, timer, separate remote control system or any other device.
- **DO NOT** touch hot surfaces. Accessible surfaces are liable to get hot during use. Always use the handles.
- **⚠ WARNING!** Oven gloves should be worn when using this appliance.
- **⚠ WARNING!** Hot steam may be released when opening and closing the appliance during use – Risk of scalding!
- **⚠ WARNING!** Avoid moving the appliance whilst it is still hot or contains hot food or liquids. Turn the appliance off and disconnect from the mains and let it cool sufficiently before moving it.
- **⚠ WARNING!** Always carry the appliance with both hands. Always use oven gloves. **Burn hazard!**

THIS APPLIANCE MUST BE EARTHED



Explanation of Symbols

 
The following warning symbols or words are used in this instruction manual:



Products labelled with this symbol conform to applicable provisions of the European Economic Area.



Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.

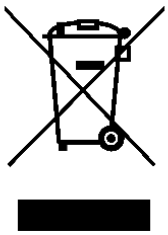

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find out your nearest recycling site.



This designates a hazard with moderate risk, which may result in severe injury if not adhered to.

 


This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.

- **PLEASE NOTE: Before use, ensure that the Air Fryer is used in an open, well ventilated area well away from other appliances and other obstructions.**
- **Do not use the Air Fryer in front of, near or below combustible materials such as plastics, curtains or cupboards, etc.**
- **Do not place the appliance against a wall or against other appliances. Leave at least 10cm minimum free space on the back and sides and 10cm minimum free space above the appliance.**
- **Do not place anything on top of the appliance.**

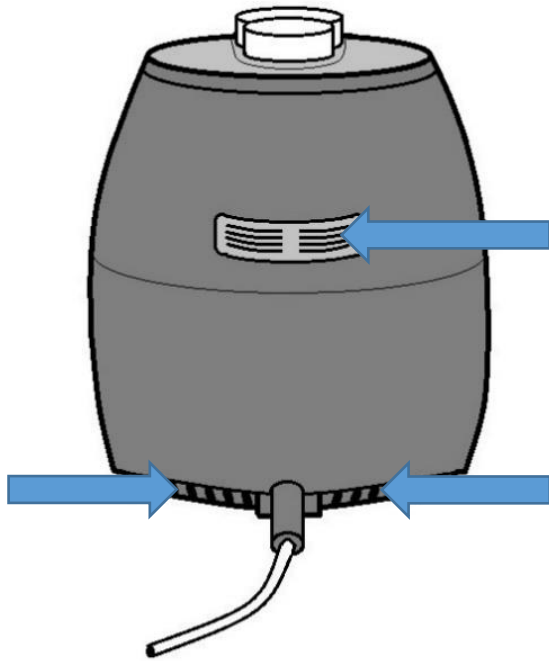


The diagram left shows the rear of the air fryer and the air vent outlets arrowed.

Keep these areas free and clear from obstructions as directed above.


Description of Parts

 1. LED Display
2. Control Panel
3. Fryer Drawer Handle
4. Fryer Drawer
5. Trivet

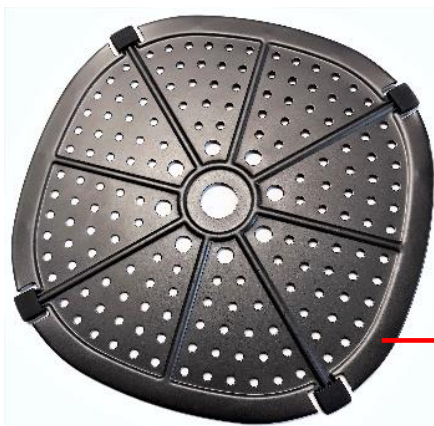


Description of Parts - Controls

 - 6. Heat Indicator
- 7. Fan 'On' Indicator
- 8. LED Display
- 9. Temperature Increase Button
- 10. Temperature Decrease Button
- 11. ON/OFF Button
- 12. Timer Decrease Button
- 13. Timer Increase Button

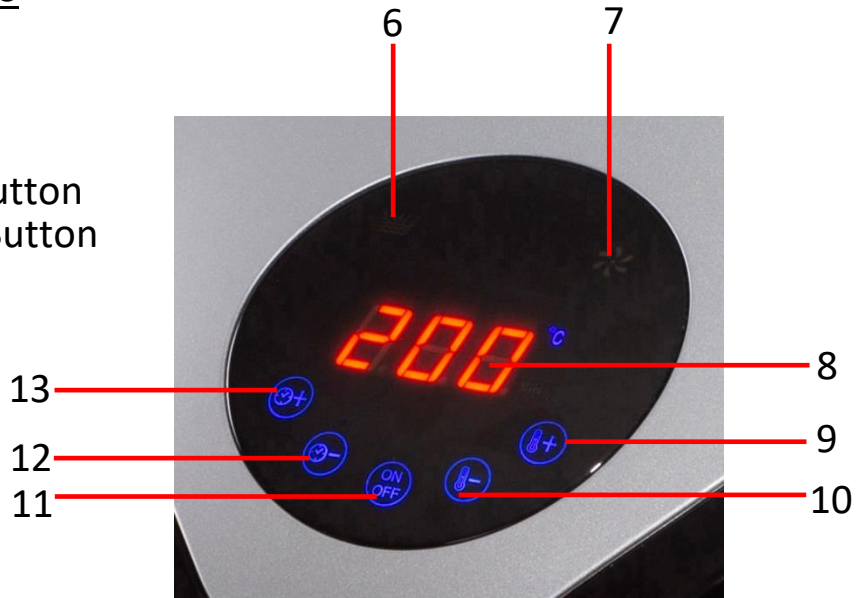

Instructions for use

 1. Place the Air Fryer on a solid, Non-flammable surface clear of all obstructions as described above.
2. Insert the mains plug into the nearest socket:

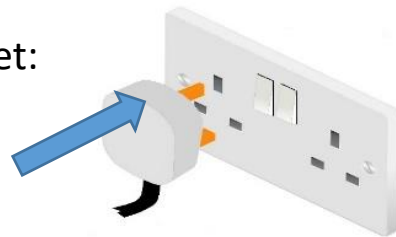

3. Press the **ON/OFF Button** (11) to power up the Air Fryer.
4. Press the **Temperature Increase Button** (9) and the **Temperature Decrease Buttons** (10) until the desired cooking temperature is shown on the **LED Display** (8). **i** The default heat setting at power up is 200C.
5. Press the **Timer Increase Button** (13) until 5 minutes is shown on the LED display (8) to pre-heat the Air Fryer.
6. Press the **ON/OFF Button** (11) again to start the pre-heating process.
7. The **Heat Indicator** (6) will flash (whilst heating) and the **Fan 'On' Indicator** (7) will light as below:

Heat Indicator (6)



Fan 'On' Indicator (7)

i During cooking, the LED Display (8) will alternate between the heat setting and the current cooking time.

8. After the 5 minutes pre-heating time, the control buttons and LED Display will go out and the Air Fryer will switch off which is confirmed by several beeps.
9. Carefully remove the **Fryer Drawer** (4) from the Air Fryer using the **Handle** (3).
10. Ensure that the **Trivet** (5) is placed in the bottom of the **Fryer Drawer** (4) as shown below:



Left: The Trivet shown placed inside the Fryer Drawer.

i Do not remove the rubber feet from the Trivet as they hold the Trivet in place and prevent damage to the drawer.

11. Place the food into the **Fryer Drawer** (4) on top of the **Trivet** (5) taking care not to overfill.
12. Insert the **Fryer Drawer** (4) back into the Air fryer ensuring that the draw is pushed fully home.
- i** *The Air Fryer will not operate if the Fryer Drawer is removed or not pushed all the way in.*
13. Press the **ON/OFF Button** (11) to power up the Air Fryer.
14. Press the **Temperature Increase Button** (9) and the **Temperature Decrease Buttons** (10) until the desired cooking temperature is shown on the **LED Display** (8).
- i** The default heat setting at power up is 200C.
15. Press the **Timer Increase Button** (13) and **Timer Decrease Button** (12) until desired cooking time is shown on the **LED display** (8).
16. Press the **ON/OFF Button** (11) to start cooking.
- i** *The Heat Indicator (6-arrowed below) will light flash during cooking, this is quite normal:*

Right: The Heating Indicator (6) will light flash during heating but will not show once the desired temperature has been reached – this is quite normal.



17. After the end of cooking time, the control buttons and LED Display will go out and the Air Fryer will switch off which is confirmed by several beeps.
18. Remove the **Fryer Drawer** (4) and serve, (place the drawer on a heat proof surface if it is put down during serving).

i For better cooking results, turn the food over by shaking the drawer during (half way) through the cooking process.

Cleaning and Maintenance

- Always unplug the Air Fryer from the mains supply and allow to cool before cleaning.
- Do not clean any part of the Air Fryer in a dishwasher.
- Do not submerge any part of the main body, the mains cable or plug in water or any other liquids.
- Wipe excess oil from the **Fryer Drawer** (4) and **Trivet** (5) with kitchen roll or similar.
- Wipe the main body of the Air fryer clean using a soft, damp cloth.
- The **Fryer Drawer** (4) and **Trivet** (5) can be washed in warm soapy water, rinse and dry thoroughly before reusing.
- Never clean any part of the Air Fryer with harsh or abrasive cleaners.


Non-Wireable Mains Plug

If your appliance is supplied with a non-wireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). If in doubt, consult a qualified electrician who will be pleased to do this for you. If you need to remove the plug – **DISCONNECT FROM THE MAINS** – and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Technical data

Model Number	SDA1601
Rated Voltage	220-240V ~ 50/60Hz
Rated Power	1400W
Protection Class	I (This Appliance must be Earthed)

 Disposal of the packaging

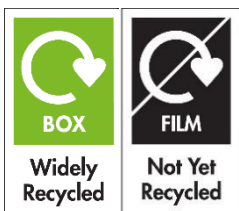


Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

 Disposal of the product

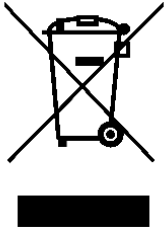

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find out your nearest recycling site.



Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team at help@daewooelectricals.com or call 0161 831 7879.

- *Replacement parts and accessories are guaranteed for 1 year from the date of purchase.*
- *It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance*

Recipes for You to Try.....



1. Asian Spicy Fries

Potato	x4 / 600g
Oi	2 teaspoons
Salt	1 teaspoon
Pepper powder	1 teaspoon
Shallot powder	1 teaspoon
Red chili powder	½ teaspoon

- Peel potatoes and cut into strips;
- Soak potato strips in salt water for at least 20mins, and then dry with kitchen paper.
- Mix shallot, salt and pepper, garlic powder/ garlic oil, red chili powder, stir in the potato strips.
- Set temperature to 180 degrees and time to 5 minutes to preheat the air fryer.

- Place the potato strips into the Fryer Drawer, insert the drawer back into the Air fryer and set the timer for 15-20 minutes - depending on the number of fries or until the fries are golden brown.

For best results, turn the fries by shaking the Fryer Drawer in the middle of cooking.



2. Golden Chicken Wings

Chicken wings	500g
Garlic	x2
Ginger powder	2 teaspoon
Cumin powder	1 teaspoon
Black pepper powder	1 teaspoon
Sweet chili sauce	100 mg

- Set temperature to 200 degrees and timer to 5 minutes to preheat the air fryer.
- Stir garlic, ginger powder, cumin powder, spicy black pepper and a little salt together, and then coat the chicken wings.
- Allow the chicken wings to stand for 20 minutes.

- Place the chicken wings into the fryer drawer evenly, set the time for 15-20 minutes and the temperature for 200 degrees.



- Place the chicken nuggets into the fryer drawer evenly, set the time for 15-20 minutes and the temperature for 200 degrees.

3. Fried chicken nuggets

Fresh chicken nuggets	500g
Eggs	x3
Flour	1 cup
Olive oil	1 spoon
White pepper powder	1 teaspoon

- Set the temperature to 200 degrees and the time to 5 minutes to preheat the air fryer.
- Pat the chicken for 5 minutes with a knife blade.
- Stir eggs, flour, olive oil, white pepper and a little salt together, and then coat the chicken nuggets.
- Allow the nuggets to stand for 20 minutes.



- Place the squid into the fryer drawer, set the temperature for 200 degrees and the time for 12-15 minutes or until golden brown.

4. Fried squid

Squid (Frozen)	500g
Oil	2 tablespoon
Salt	1 teaspoon
Cumin powder	1 teaspoon
Chicken powder	1 teaspoon
Pepper powder	1 teaspoon

- Set the temperature to 200 degrees and the timer to 5 minutes to preheat the air fryer.
- Stir seasoning together, and then coat the squid and allow to stand for 20 minutes.



5. Spicy Shrimp

Unfrozen prawns	x10
Oil	2 tsp
Garlic finely chopped	x1
Black pepper	1 tsp
Chili powder	1 tsp
Sweet chili sauce	100mg

- Set the temperature to 200 degrees and timer to 5 minutes to preheat the air fryer.
 - Rinse the prawns.
-
- Apply a thin layer of salad oil to the prawns, place the prawns into the fryer drawer, set the temperature for 200 degrees and the time for 5-8 minutes or until a golden crunchy layer has formed.



DAEWOO®

WARRANTY

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty*please register your purchase online within 28 days of the original purchase date by registering at
www.daewoowarrantyregistration.com/warranty-registration

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by ESG Ltd
Manchester M3 1JS www.esgltd.com