



# 3 IN 1 PORTABLE AIR CONDITIONER

with remote control



\*Please refer to the warranty section for terms of your extended guarantee



## Contents

Page No.	
2	Contents
3	Reading and Storing the User Manual
3	Important Safety Instructions for Proper Use
6	Explanation of Symbols
7	Description of Parts – Main Unit
8	Description of Parts – Control Panel
8	Description of Parts – The Vent Kit
9	Fitting the Flexible Exhaust Hose
10	Using Your Air Conditioner
	<i>Cooling Mode</i>
	<i>Dehumidifying Mode</i>
	<i>Fan Only Mode</i>
	<i>Oscillation Mode</i>
11	Using the Timer
	<i>Time ON Setting</i>
	<i>Time OFF Setting</i>
11	Using the Remote Control
	<i>Inserting the Batteries</i>
	<i>Battery Safety</i>
12	Description of Parts – Remote Control
12	The Internal Water Tank and Draining
13	Cleaning the Air Filter
13	Safety Shut Off
13	Cleaning and Maintenance
14	Using the Wi-Fi Mode
14	Connecting Your Smart Device
16	Resetting the Unit
18	Notes About Using Your Smart Device
19	Wi-Fi Troubleshooting Guide
19	Technical Specification
20	Troubleshooting Guide
20	Plug Wiring Information
21	Recycling Information
22	Customer Support
23	Notes
Back Page	Warranty Information

## READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference.

Ensure the user manual is included when passing the product on to any third parties.

### **IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE**

**When using electrical appliances, basic safety precautions should always be followed.**

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Air Conditioner.**
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Disconnect the power plug from the socket before dismantling, assembling or cleaning.
- Avoid touching any moving parts within the appliance.
- **DO NOT** insert fingers, pencils or any other objects through the guard.
- This appliance can be used by children from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understands the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall

- not be made by children without supervision.
- **DO NOT** leave children unsupervised with this appliance.
  - **DO NOT** clean the unit by spraying it or immersing it in water.
  - **DO NOT** connect the appliance to an electrical outlet using an extension lead. If an outlet is not available, one should be installed by a qualified electrician.
  - **DO NOT** operate this appliance if the cord or plug are damaged. Ensure the power cord is not stretched or exposed to sharp objects or edges.
  - A damaged supply cord should be replaced by qualified personnel in order to avoid a hazard.
  - Any service other than regular cleaning or filter replacement should be performed by an authorised service representative.
  - **DO NOT** use this appliance for any other purpose than it's intended use.
  - **The air conditioner must always be stored and transported upright, otherwise irreparable damage may be caused to the compressor; if in doubt, wait at least 24 hours before restarting the unit.**
  - Avoid restarting the air conditioner unless 3 minutes have passed since being turned off. This prevents damage to the compressor.
  - **DO NOT** use the mains plug or external timer as a means of switching the air conditioner on or off. Use the ON/OFF button located on the control panel.
  - Always place the unit on a dry and stable surface.
  - The appliance should not be placed in a laundry or wet room.
  - The appliance must be placed in a room without sources of ignition (for example: open flames, an operating gas appliance or an operating electric heater)
  - The appliance must be installed and used in a room with a floor area larger than 4m<sup>2</sup>

- This appliance contains R290 refrigerant gas. For quantity see the rating label on the rear of the unit.
- R290 refrigerant gas complies with EU environmental directives.
- Refrigerant gas may be odourless, if the appliance is used or stored in an unventilated room, the room must be such as to prevent stagnation of possible leaks of refrigerant gas as there could be a danger of fire or explosion hazard should the refrigerant come into contact with electric heaters, stoves or other sources of ignition.
- The refrigerant system should not be perforated.
- The appliance must be stored in such a way as to prevent mechanical failure.
- Individuals who operate or work on the refrigerant circuit must have the appropriate certification issued by an accredited organisation that ensures competence in handling refrigerants according to a specific evaluation recognized by associations in the industry.
- Repairs must be performed based on the recommendation from the manufacturing company. Maintenance and repairs that require the assistance of other qualified persons must be performed under the supervision of an individual specified in the use of flammable refrigerants.



- The air conditioner will defrost on occasions, do not use any tools or heaters to speed up this process as this may cause damage to the appliance.

### Explanation of Symbols


The following warning symbols or words are used in this instruction manual:

**UK  
CA**

Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.

**CE**

Products labelled with this symbol conform to applicable provisions of the European Economic Area.

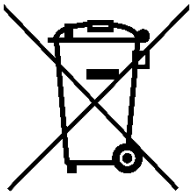

This symbol means batteries and rechargeable batteries may not be disposed of with household waste!

As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), so that they can be disposed of in an environmentally friendly manner.



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) enter your postcode to find out your nearest recycling site.




This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.


**Description of Parts – Main Unit**

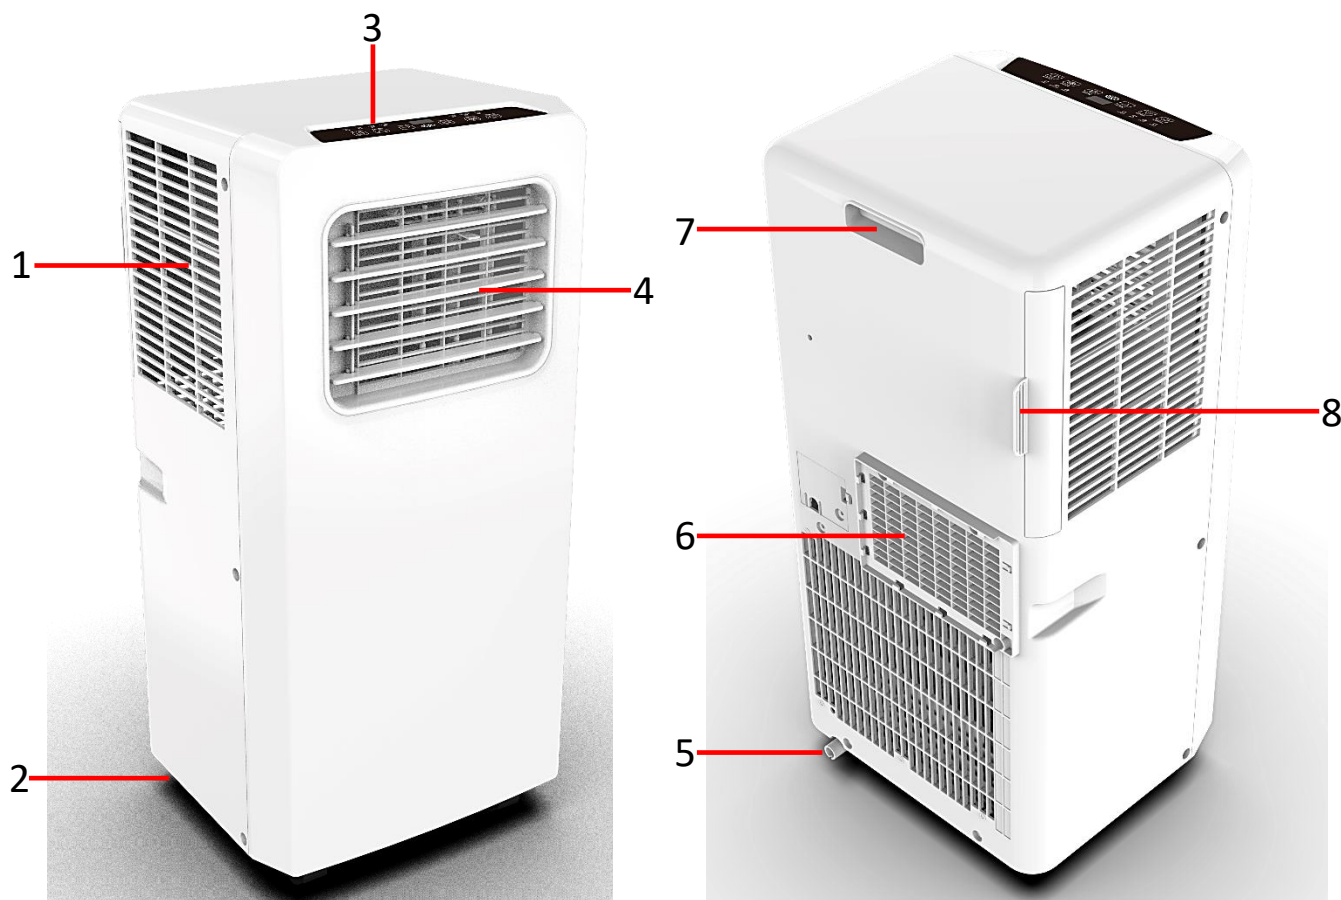

- 1. Air Inlet
- 2. Castors (x4)
- 3. Control Panel
- 4. Air Outlet
- 5. Tank Drain
- 6. Exhaust
- 7. Handle
- 8. Filter Handle
- 9. Remote Control




**Description of Parts – Control Panel**

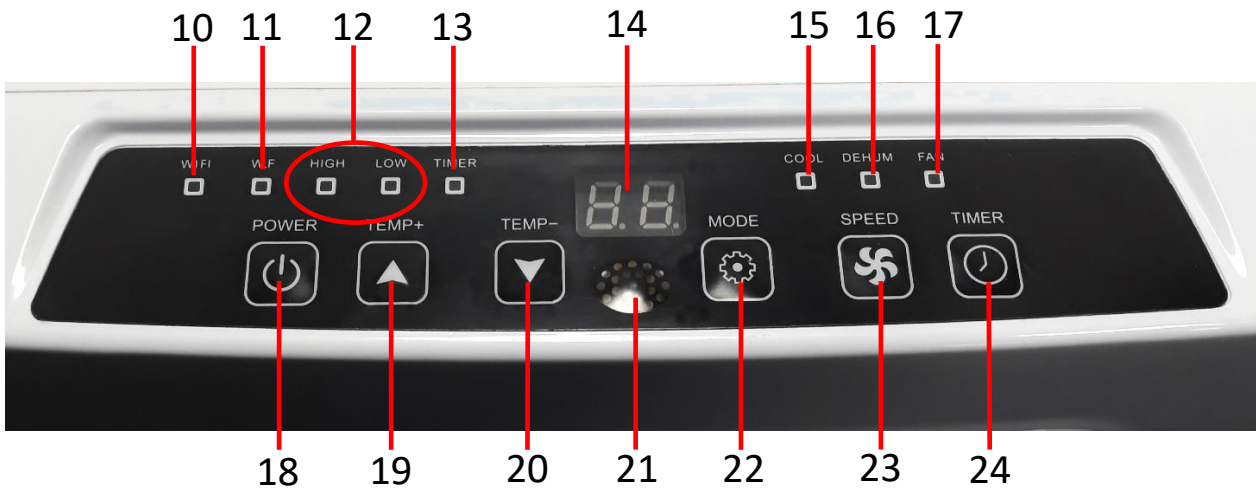

- |                                |                               |
|--------------------------------|-------------------------------|
| 10. Wi-Fi Indicator            | 18. Power ON/OFF Button       |
| 11. Water Full Indicator (W.F) | 19. Temperature/Time + Button |
| 12. Fan Speed Indicators       | 20. Temperature/Time – Button |
| 13. Timer Indicator            | 21. Remote Signal Receiver    |
| 14. LED Display                | 22. Mode Button               |
| 15. Cool Indicator             | 23. Fan Speed Button          |
| 16. Dehumidify Indicator       | 24. Timer Button              |
| 17. Fan Indicator              |                               |

**Description of Parts – The Vent Kit**

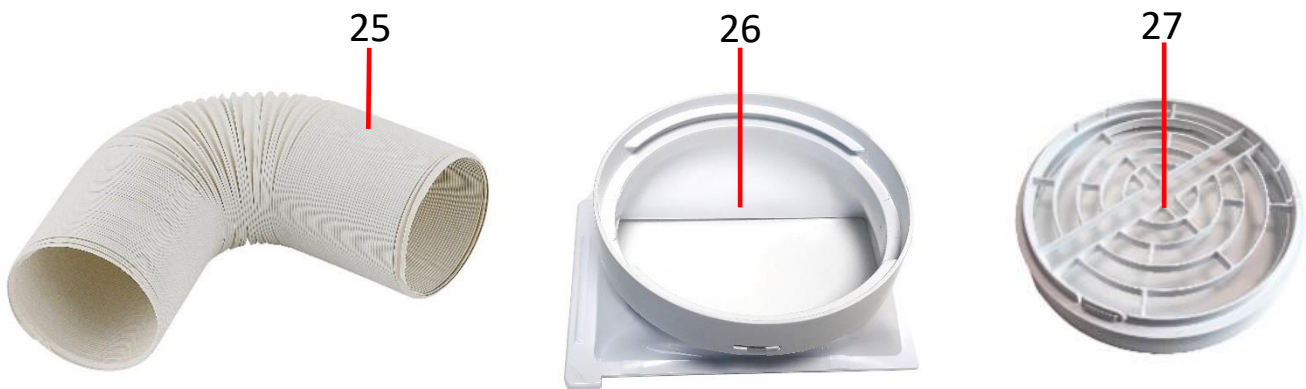

- 25. Flexible Hose
- 26. Hose Connector
- 27. Hose Outlet Ring

***Fitting the Flexible Exhaust Hose – this must be fitted before use:***

1. First fit the **Hose Connector (26)** to one end of the **Flexible Hose (25)** as follows:



a.

a. Extend one end of the **Flexible Hose (25)** by about 10cm.



b.

b. Screw the **Hose Connector (26)** onto the end of the hose in a clockwise direction.

2. Next attached the **Hose Outlet Ring (27)** to the other end of the hose as follows:



c.


c. Extend the other end of the **Flexible Hose (25)** by about 10cm



d.

d. Screw the **Hose Outlet Ring (27)** onto the other end of the hose in a clockwise direction.

3. Finally, attach the **Hose Connector (23)** to the rear outlet of the unit as follows:

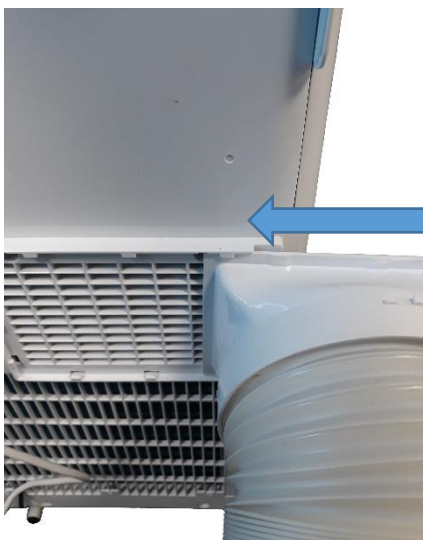

e.

e. Hook the flat lip of the **Hose Connector (26)** into the slot on the rear of the unit as shown left.



f.

f. Slide the **Hose Connector (26)** left until it clicks home.

4. Place the outlet end of the **Flexible Hose (25)** through a suitable outlet such as an open window, door, etc.

**i** The unit must be positioned a minimum of 1 Metre away from any wall or obstruction on all sides.

- Before use, check the **Flexible Hose** (25) is properly fitted.
- Ensure the unit is on a solid, level, dry surface.
- Ensure the unit is plugged directly into the mains socket and does not share sockets with other appliances via a mains adaptor or an extension lead.

### Using Your Air Conditioner

#### Cooling Mode

1. Power the unit up by pressing the **POWER ON/OFF Button** (18).
2. Press the **Mode Button** (22) until the '**COOL**' Indicator (15) illuminates.
3. Press the **Temperature/Time +** (19) and **Temperature/Time –** (20) Buttons to select the desired room temperature (16°C - 31°C) on the **LED Display** (14).
4. Press the **Fan Speed Button** (23) to choose either low or high fan speeds, the selected speed will be shown by the **Fan Speed Indicators** (12).

#### Dehumidifying Mode

1. Power the unit up by pressing the **POWER ON/OFF Button** (18).
2. Press the **Mode Button** (22) until the '**DEHUM**' Indicator (16) illuminates.

**i** The unit will automatically set the temperature to 2°C below the room temperature and the fan speed to low and begin dehumidifying.

#### Fan Only Mode

1. Power the unit up by pressing the **POWER ON/OFF Button** (18).
2. Press the **Mode Button** (22) until the '**FAN**' Indicator (17) illuminates.
3. Press the **Fan Speed Button** (23) to choose either low or high fan speeds, the selected speed will be shown by the **Fan Speed Indicators** (12).

#### Oscillation Mode

**OSC** – Press the OSC button on the **Remote Control** (9) to select Oscillation Mode, this will enable the **Air Outlet** (4) to continually disperse air from side to side. Press the 'OSC' button on the **Remote Control** (9) again to cancel Oscillate Mode.

**NOTE** Oscillation Mode is not available on the **Control Panel** (3).

### Using the Timer – Time ON Setting

1. With the unit OFF i.e., not powered up but plugged into the mains, press the **Timer Button** (24), the '**TIMER**' Indicator (13) will illuminate to show the unit is in TIMER mode.
2. Next select how many hours you need until the unit switches **ON** using the **Temperature/Time +** (19) and **Temperature/Time –** (20) Buttons.
3. The ON time is displayed on the **LED Display** (14) as a number of hours until the unit switches on up to a maximum of 24Hrs.
4. The **LED Display** (14) will flash whilst the time is being set. Once set, leave the unit alone until the **LED Display** (14) stops flashing and goes dim.
5. The timer will count down until the unit switches on.

### Using the Timer – Time OFF Setting

1. Power the unit up by pressing the **POWER ON/OFF Button** (18).
2. Press the **Timer Button** (24), the '**TIMER**' Indicator (13) will illuminate to show the unit is in TIMER mode.
3. Next select how many hours you need until the unit switches **OFF** using the **Temperature/Time +** (19) and **Temperature/Time –** (20) Buttons.
4. The OFF time is displayed on the **LED Display** (14) as a number of hours until the unit switches off up to a maximum of 24Hrs.
5. The **LED Display** (14) will flash whilst the time is being set. Once set, leave the unit alone until the **LED Display** (14) stops flashing and goes dim.
6. The timer will count down until the unit switches off.

### Using the Remote Control

#### Inserting the Batteries

- Slide the battery compartment cover on the rear of the remote back in the direction of the arrow and remove.
- Insert 2 x 1.5V AAA batteries (not supplied) into the battery compartment observing the polarity markings on the inside.
- Slide the battery cover back on until it clicks back in place.

#### Battery Safety

- CAUTION: There is a danger of explosion if the batteries are incorrectly fitted.
- Ensure that the batteries are installed with the correct polarity.
- It is recommended that batteries are removed if the remote if it is not to be used for a long period of time or if the remote is to be disposed of.
- Replace only with the same or equivalent battery type.
- Store batteries in a cool dry place.
- Do not expose the battery to sunshine, fire, heat or similar, never dispose of batteries in a fire.
- Do not charge non-rechargeable batteries.
- Do not short-circuit batteries.
- Exhausted batteries are to be removed from the product and safely disposed of.

## WARNING!

- **DO NOT** ingest the battery, Chemical Burn Hazard.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep away from children.
- If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.


## Description of Parts – Remote Control (9)

The remote control allows full functional use of the Air Conditioner plus one other feature\* as follows:

**SPEED** – Press the SPEED button to select Low or High Fan Speeds.

**TEMP +/-** Press the TEMP+/- buttons to select the room temperature during 'COOL' mode.

**OSC** – Press the OSC button to select Oscillation Mode, this will enable the **Air Outlet (4)** to continually disperse air from side to side. \*NOTE Oscillate Mode is not available on the **Control Panel (3)**.

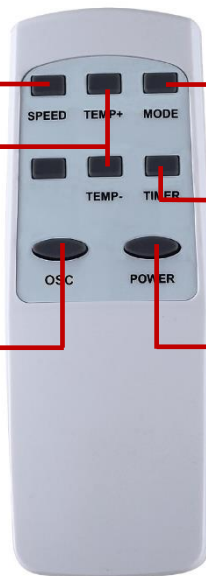

**MODE** – Press the MODE button to select between COOL, DEHUMIFIER or FAN modes.

**TIMER** – Press the TIMER button to enter timer mode.

**POWER** – Press the POWER button to switch the unit on and off.


## The Internal Water Tank and Draining

During normal use, most of the moisture collected will be evaporated internally by the unit and expelled through the **Exhaust (6)** via the **Flexible Hose (25)**.

However, over a period of time the internal water tank will eventually fill to its maximum capacity and the **Water Full (WF) Indicator (11)** will illuminate on the **Control Panel (3)** to show the tank is full.

To empty the water tank, take the unit outside, remove the plug from the **Tank Drain (5 – arrowed right)** at the bottom rear left of the unit and allow the tank to empty.

Alternatively connect a hose to the drain and lead it outside to the drain the tank continuously. Ensure that the hose is not raised above the level of the outlet and is not kinked or bent so that the tank can drain properly.

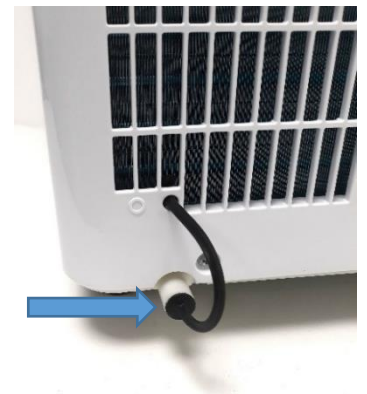

**i** Ensure the plug is replaced into the **Tank Drain (5)** before using the unit again.

The amount of water collected by the tank and the frequency of draining is caused by the relative humidity levels which will vary and will depend on several factors:

1. Avoid placing the Air Conditioner near kitchens or bathrooms (though *not in* the bathroom!).
2. Drying washing in the same room as the Air Conditioner will increase tank fill.
3. Damp weather or high humidity will affect the amount of water collected especially when it is raining.


### **Cleaning the Air Filter**

The air filter is located behind the **Air Inlet (1)** grill and will need occasional cleaning. To clean the air filter, remove the filter by pulling the **Filter Handle (8)**, the filter can be cleaned in lukewarm (40°C) water with mild detergent. See image left.

After washing allow the filter to dry naturally, lay it flat to avoid stretching.

**i** Ensure that the filter has thoroughly dried before refitting it to the unit.

**i** **DO NOT** use the unit without the filter fitted.

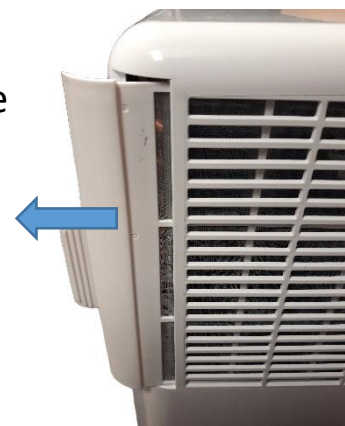

Above: The Air Filter located on the top left hand side of the unit (shown partially removed). To remove, slide the filter out in the direction of the arrow.

### **Safety Shut-Off**

The unit is fitted with an automatic high temperature shut off device, if the air inlet or exhaust are blocked the unit will shut down safely.

After clearing the blockage, allow 5 minutes before restarting the unit.

### **Cleaning and Maintenance**

Clean the surface of the unit with a damp cloth and mild detergent.

Excess dust etc. can be removed from grilles and exhaust using the nozzle attachment of a vacuum cleaner.

## Using the Wi-Fi Mode

### Initial Set Up

Upon installation of your Air Conditioner, you will have to set up the communication channel between the devices. In order to do this, make sure you have the Smart Life app installed on your mobile device, your Wi-Fi router is switched on and your mobile device connected to your home Wi-Fi network.



### Connecting Your Smart Device

1. Use your mobile phone to scan the QR code right to download the “Smart Life” app.




2. Alternatively, search for the “Smart Life” in the APP store or Google Play store to install the app.

3. Open the “Smart Life” app, select “Sign Up”. Using your mobile phone number or email to register an account. Make up a suitable password for the account.
4. You will be sent a verification code via your email or phone depending on which you gave logged on with. Enter the verification code to enter the App.

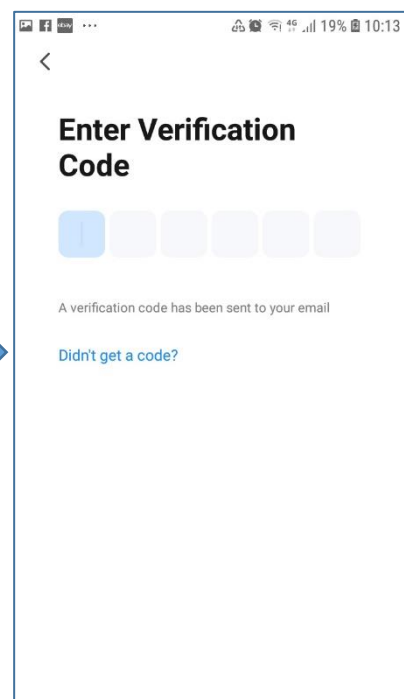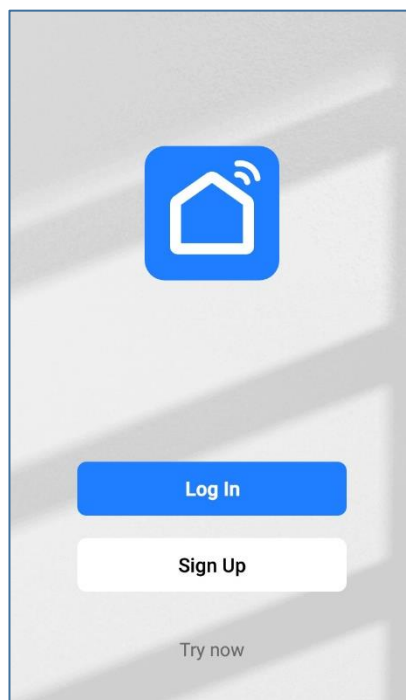



**NOTE:** An account must be set up in order to access all the Air Conditioner control application features.

- Once logged into your account, press the “+ Add Device” option found in the top right corner of the control application home screen to add your device to the App.
- Ensure the Air Conditioner is plugged in and turned on at the power outlet. The Air Conditioner does not need to be turned ON at the **Control Panel (3)** at this time. The Air Conditioner should be left in standby mode (plugged in at the power outlet with the power outlet switch turned on) whilst performing the pairing exercise.

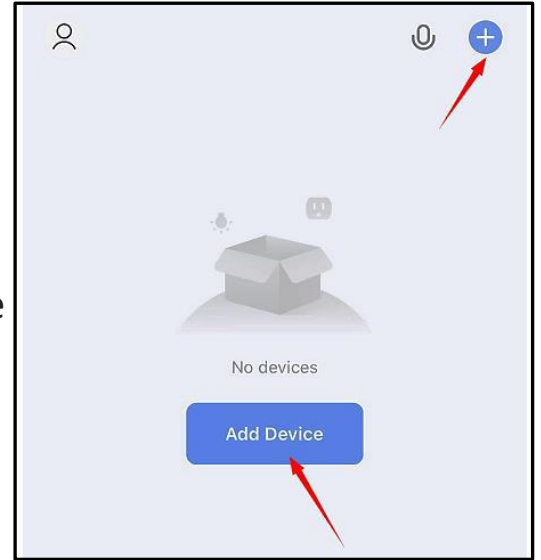

7. Choose “**Add Manually.**”

8. Scroll down to select “**Large Home Appliances**” and choose “**Portable Air Conditioner (Wi-Fi)**” and select “Portable Air Conditioner (Wi-Fi) as below:

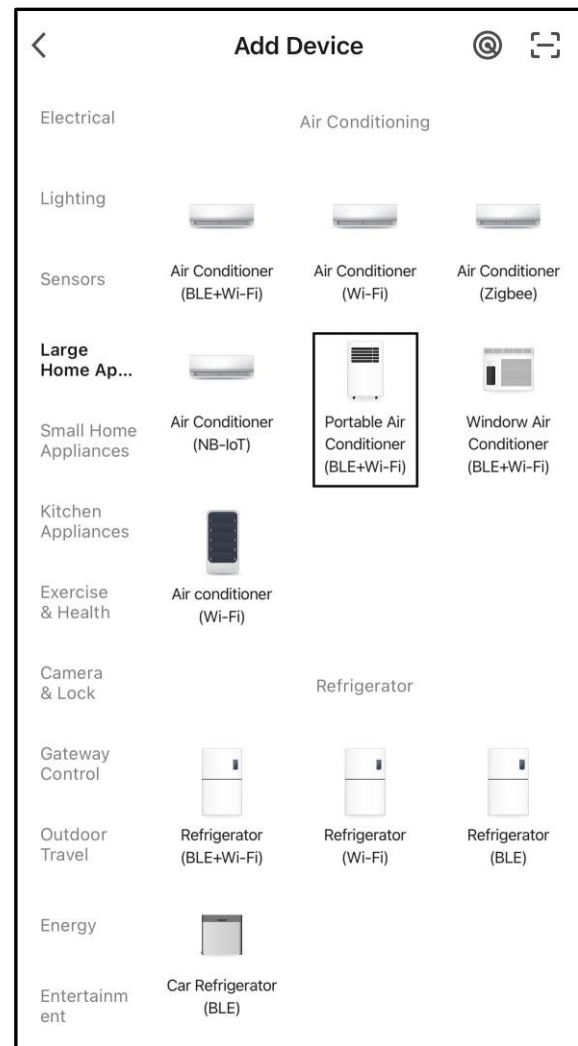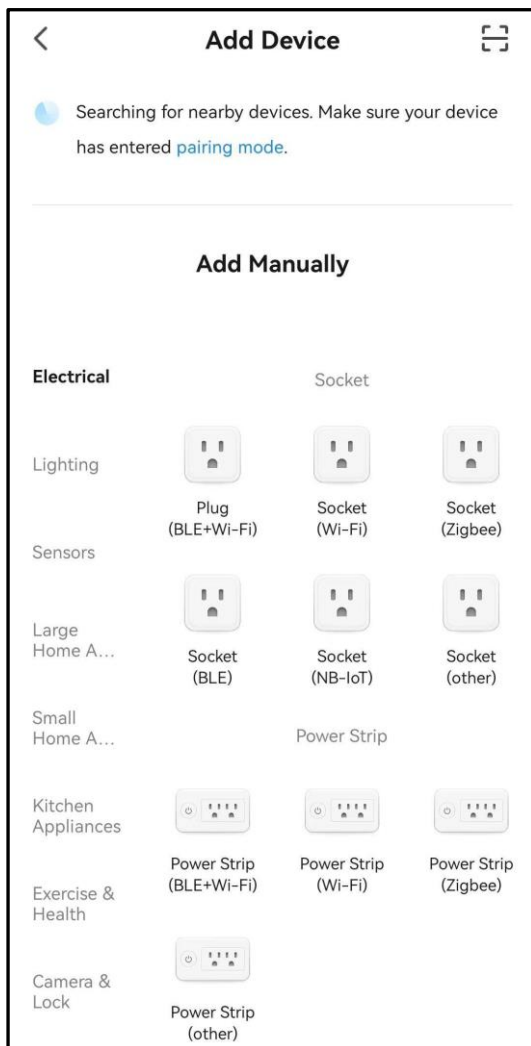


9. You will then be asked to select your Wi-Fi network and to enter your password (the same network that your phone is connected to) then press NEXT as shown right:
10. Ensure that the **Wi-Fi Indicator** (10) light is flashing on the **Control Panel** (3) (you will be prompted to check this – see below).

### Resetting the Unit

11. **IMPORTANT:** If the **Wi-Fi Indicator** (10) is NOT flashing at all in standby mode and staying constantly lit, the Air Conditioner needs to be reset. This could be because the Air Conditioner has been paired previously to another device, or that the Wi-Fi module on the Air Conditioner just needs to be refreshed. To do this, follow the below steps:


- a) Turn the Air Conditioner off at the power outlet and then turn it back on, 5 seconds later.
- b) Without pressing the **POWER ON/OFF Button** (18) on the Air Conditioner, press and hold the **Fan Speed Button** (23) on the control panel of the Air Conditioner for 5 seconds and let go after you hear a beep. The **Wi-Fi Indicator** (10) will now start flashing rapidly.
- c) After a few seconds, the **Wi-Fi indicator** (10) will stop flashing and stay lit, indicating the Air Conditioner is now pairing with your current device and the APP ready for use.

12. **IMPORTANT:** Please note, that if the Wi-Fi indicator light is flashing slowly, it will not pair with your device. Press and hold the **Fan Speed Button** (23) for another 5 seconds until you hear a beep to reset the Air Conditioner. After this, the light will start flashing rapidly and will pair with your device.

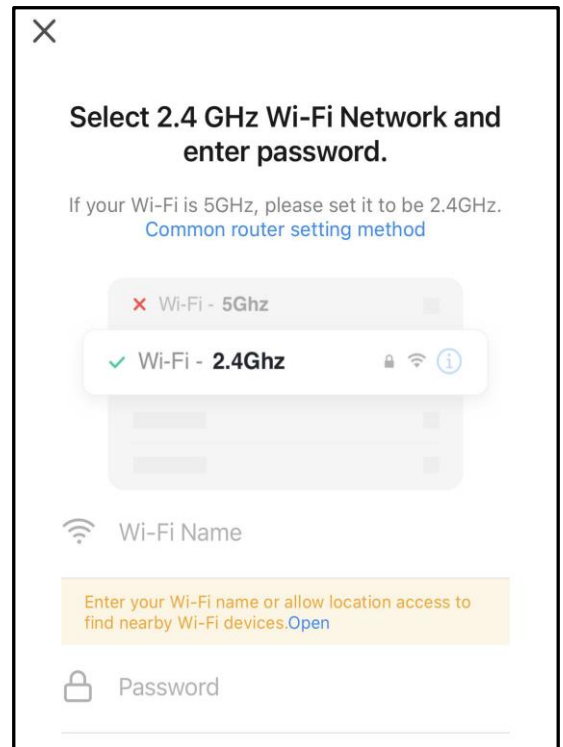


**NOTE:** You cannot use the **SPEED** button on the **Remote Control** (9) to reset the Wi-Fi mode. Only the **Fan Speed Button** (23) on the **Control Panel** (3) can be used.

13. Press NEXT and your smart device will begin to detect the Air Conditioner as shown right:

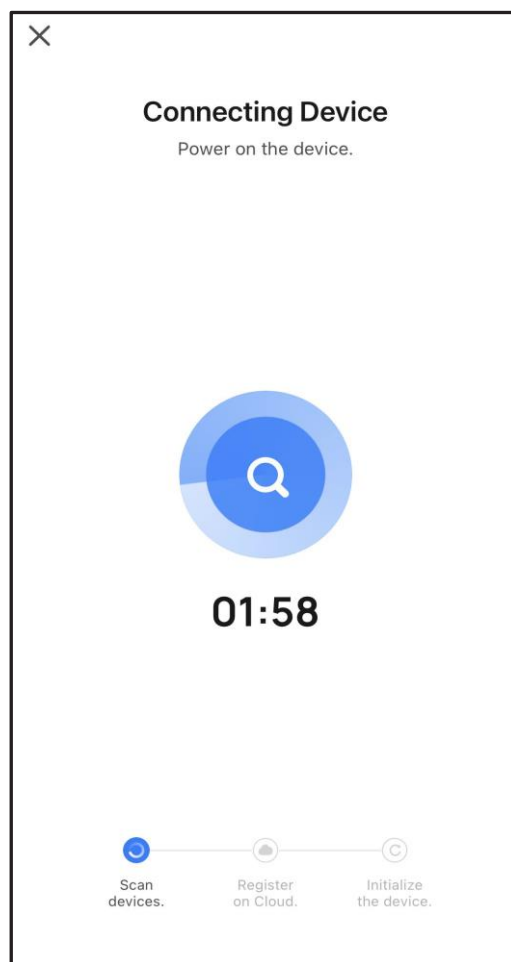


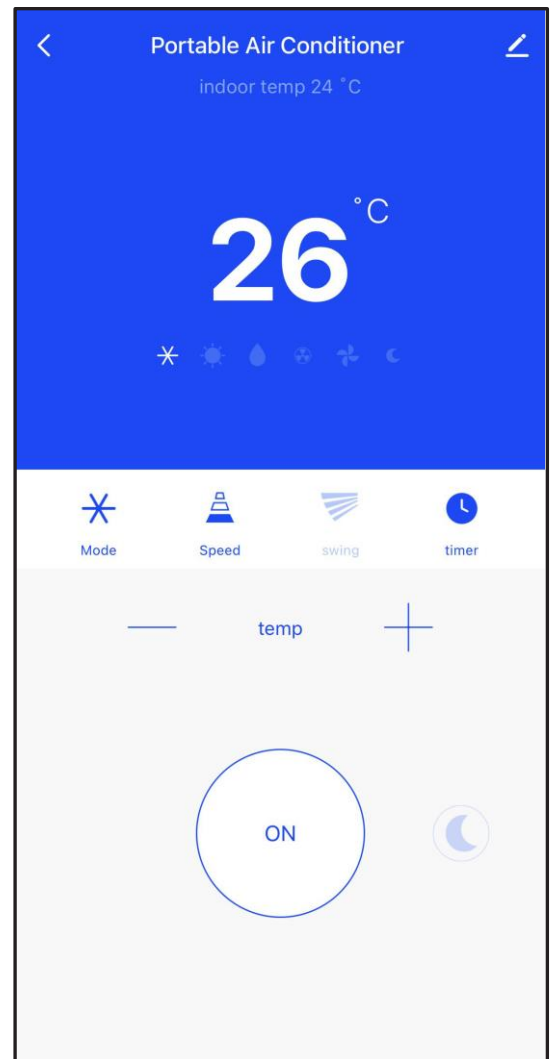
14. Once your Air Conditioner has been detected click on the device name (shown right) which will take you to the device's main control page and you will be able to control your Air Conditioner from your smart device (below right).

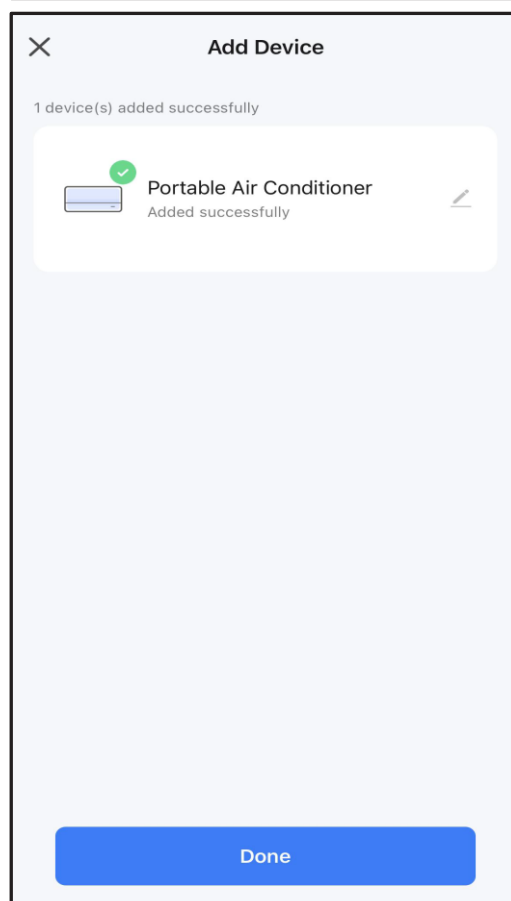

15. You can control and select functions such as Speed, Timer, Temperature and Mode via your smart device.

The smart device functions are similar to how you would use the functions via the **Control Panel (4)** and **Remote Control (7)**.

Tap the  icon to access settings, third party control, etc.



### **Notes About Using Your Smart Device**

- The Air Conditioner will only operate via a smart device when they are both connected to Wi-Fi.
- Only one smart device can be connected at a time to the Air Conditioner.
- Only one smart device can control the Air Conditioner at one time.

## Wi-Fi Trouble Shooting Guide

<b>Problem</b>	<b>Possible Cause and Solution</b>
During the set-up, the Air Conditioner will not connect to the Wi-Fi network.	Check that you have the internet reception and your smart device and the Air Conditioner are connected to the same Wi-Fi network.
	Check that your Wi-Fi password is correct.
	Check that no firewalls or other restrictions are set.
	Check that the router is working with other products e.g. TV, computer, etc.
	Ensure that the Air Conditioner, the router and smart device are all on the same Wi-Fi network and within the signal range.
	Reset the Wi-Fi module by following the instructions found on page 16.
I cannot control the Air Conditioner with my smart device.	The Air Conditioner has been reset and/or the smart device has lost control permission. Reconnect your smart device to the Air Conditioner using the set-up instructions above.
	If after these steps you still cannot control the Air Conditioner with your smart device, delete the Air Conditioner from your device list and reconnect.
	Reset the Wi-Fi module by following the instructions found on page 16.
The Wi-Fi indicator light is NOT blinking at all or is blinking slowly.	Reset the Wi-Fi module by following the instructions found on page 16.
I need to pair a new smart device with the Air Conditioner	Only one smart device can be paired at any one time to the Air Conditioner.

## Technical Specification

Model Number	COL1574
Supply Voltage	220-240V~ 50Hz
Rated Power	1000W
Rated Current	4.5A
Protection Class	I (This Appliance Must Be Earthed)
Unpacked Weight	19 Kgs (approx.)
Cooling Capacity	9000BTU/h (2600W)
Refrigerant	R290 (160g)
Operating Pressure	Discharge 2.6MPa Suction 1.0MPa
Maximum Pressure	Discharge 3.2MPa Suction 1.2MPa
IP Rating	IP20
Sound Power Level	65dB (A)
This product conforms to Radio Equipment Directive 2014/53/EU	

## ***Troubleshooting Guide***

<b><i>Problem</i></b>	<b><i>Possible Cause</i></b>	<b><i>Possible Solution</i></b>
The unit does not power up	No power supply	Power on and turn on the unit
	Water tank is full	Drain the water tank
	Timer function is active	Cancel timer function
	Room temperature is too low	Reset temperature on unit
Unit not performing well	Unit is in direct sunlight	Shade the unit with curtains/blinds
	Filter is dirty	Remove and clean the filter
	Air inlet or outlet is blocked	Remove any blockage or debris from the inlet/outlet
Compressor not working	Overheat protection device has operated	Check venting then allow the unit to cool for 5 minutes before restarting
Remote control not working	Operating distance is too far	Move closer to the unit
	Batteries are flat	Replace batteries
Unit is noisy	The unit is located on an uneven surface	Position the unit on a flat level surface
E2 Code displayed	Water tank full	Drain the water tank

### ***Non-Rewireable Mains Plug***

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse needed replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug -**DISCONNECT FROM THE MAINS**- and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

## Recycling Information


### Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.


Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

### Disposal of the Product

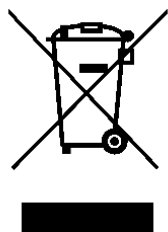


You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) enter your postcode to find out your nearest recycling site.

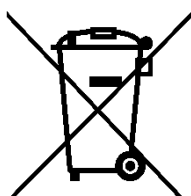

This symbol means batteries and rechargeable batteries may not be disposed of with household waste!

As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), so that they can be disposed of in an environmentally friendly manner.

UK  
CA

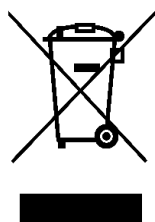

## ***Customer Support***

*Should you require any product information, replacement parts or accessories, please contact our customer care team at [help@daewooelectricals.com](mailto:help@daewooelectricals.com) or call 0161 831 7879.*

- *Replacement parts and accessories are guaranteed for 1 year from the date of purchase.*
- *It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance*

## Notes



# DAEWOO®

## WARRANTY

*Thank you for purchasing your Daewoo product.*

*As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee*

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

*To validate your extended 2 year warranty\* please register your purchase online within 28 days of the original purchase date by registering at:*

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

\*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo® is a registered trademark.  
Produced and imported under license by  
Eurosonic Group Limited  
Brightgate House  
1 Brightgate Way  
Manchester M32 0TB UK  
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006  
[www.esgltd.com](http://www.esgltd.com)