



CYCLONE ESSENTIAL

600W CORDED VACUUM

User Manual

*Please refer to the warranty section for terms of your extended guarantee.

Contents

Page No.

2	Contents
3	Reading and Storing the User Manual
3	Important Safety Instructions for Proper Use
6	Explanation of Symbols
7	Description of Parts and Accessories
7	Attaching the Accessories
7	The Floor Attachment
8	The Crevice and Brush Tool
9	Using Your Vacuum Cleaner
10	Using the Crevice and Brush Tool
10	Emptying Your Vacuum Cleaner
12	Care and Maintenance of Your Vacuum Cleaner
12	Recommended Filter Cleaning Intervals
12	Troubleshooting Guide
13	Plug Wiring Information
13	Technical Specification
13	Recycling Information
14	Customer Support
15	Notes

Back Page Warranty Information

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference.

Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Vacuum Cleaner.**
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years when it is energised or cooling down.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected

to the mains supply.

- **DO NOT** use this appliance outdoors.
 - It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
 - Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.
 - **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
 - Regular, periodic checks should be carried out on the mains cable to
 - ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
 - If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard
 - **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
 - Allow the unit to cool before storage.
 - Before cleaning, disconnect the appliance from the mains supply and allow to cool.
 - This appliance is intended for household use only and should not be used for industrial purposes.
 - **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
 - **DO NOT** use this appliance for anything other than its intended use.
 - **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
 - Unplug after each use. Grasp the plug, not the cord.
 - **DO NOT** pull or carry the Vacuum Cleaner by the electrical cord, use the handle provided.
-

- Ensure fingers and other objects are never placed in any part of the vacuum cleaner. Clothing or hair may become trapped if the vacuum is used improperly.
- Keep hair, loose clothing, jewellery, fingers and all parts of the body away from openings and moving parts.
- Keep all air vents clear and free of dust, lint, hair and anything else that may reduce airflow.
- Avoid directing the appliance towards naked flames as the air discharged may extinguish gas fires or pilot lights and may disturb ashes in open fires.
- **DO NOT** Vacuum water or any other liquids with this vacuum.
- **DO NOT** Vacuum hot ashes or lit cigarettes, etc.

Explanation of Symbols

 
The following warning symbols or words are used in this instruction manual:




Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.

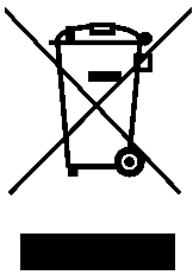

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.

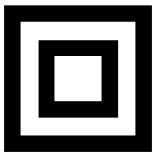 


This symbol indicates that the appliance is electrically double insulated and therefore does not require an earth connection.



This symbol provides useful additional information on the use of this product.



 This symbol indicates that the supply uses an alternating current mains supply.



This symbol identifies voltage and the current rating for direct current.



This designates a hazard with moderate risk, which may result in severe injury or damage to the product if not adhered to.

Description of Parts & Accessories

 


Attaching the Accessories

CAUTION Ensure that the vacuum cleaner is not connected to the mains supply before connecting the attachments.

The Floor Attachment

1. Push the **Telescopic Tube** (12) onto the **Air Intake** (11) as shown below:

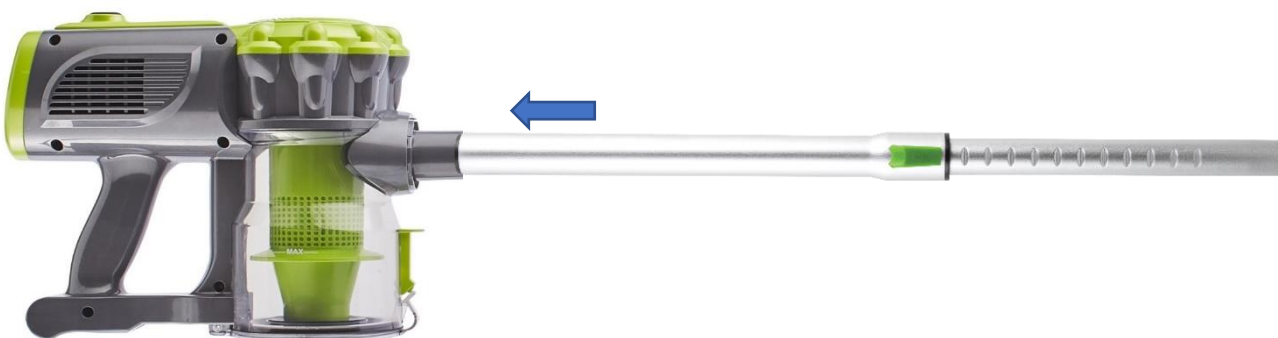

2. Push the **Floor Tool** (6) onto the other end of the **Telescopic Tube** (12)



 
i Adjust the lever on the **Floor Tool** (6) according to the type of floor being cleaned. Push the lever down for use on hard floors (i.e. non carpeted), pull the lever up for vacuum cleaning carpets:



Left: Adjust the lever on the Floor Tool for carpeted or hard floors:

Up for carpets
 Down for hard floors

3. Set the required height of the cleaner by pushing the catch down on the **Telescopic Tube** (12) and adjusting the tube to the required length/height:

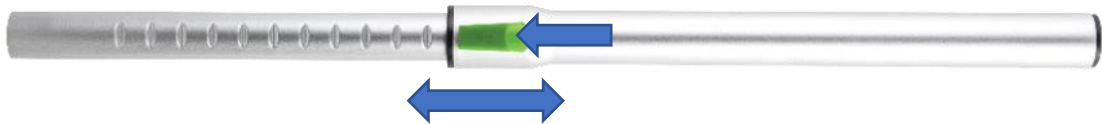

The Crevice & Brush Tool

1. Attach the **Crevice & Brush Tool** (4) onto the **Telescopic Tube** (12) to clean carpet edges and hard to get at areas:



 
2. If the **Telescopic Tube** (10) is not required, attach the **Crevice & Brush Tool** (4) directly to the cleaner, this useful whilst cleaning soft furnishings, stairs, etc.

i Rotate the brush on the end of the **Crevice & Brush Tool (4)** tool to select between hard edges or the brush.



Using Your Vacuum Cleaner

1

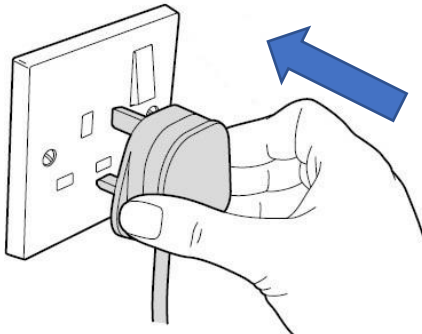

1. Once you have assembled your vacuum cleaner as desired above, Insert the mains plug into the nearest socket.

2



2. To operate the vacuum cleaner, grip the vacuum by the **Handle (3)** and press the **On/Off Switch (1)** on the top of the vacuum to the 'I' position – arrowed right.

3



3. Place your foot gently on the **Floor Tool (6)** and pull the cleaner back by the **Handle (3)** and start vacuum cleaning. Press the **On/Off Switch (1)** to the 'O' position at the end of cleaning to switch the cleaner off.


Using the Crevice & Brush Tool (4)

1. Attach the **Crevice & Brush Tool (4)** onto the **Telescopic Tube (12)** to clean carpet edges and hard to get at areas:



Left: Use the crevice tool to clean hard to get at areas, carpet edges, etc.

 Right: Rotate the brush down on the tool to clean curtains, upholstery, etc.

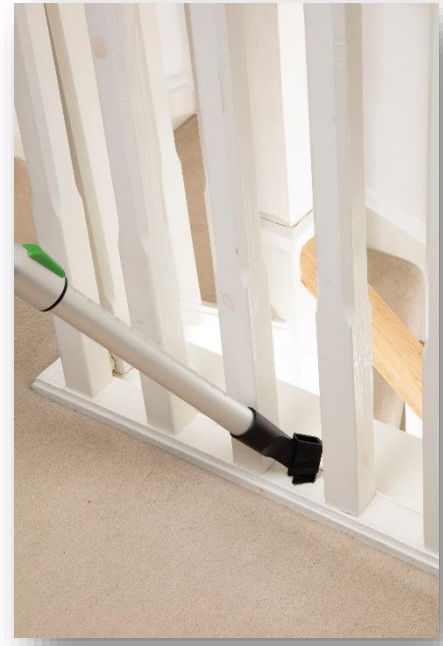

Emptying Your Vacuum Cleaner

⚠ WARNING! Always disconnect the cleaner from the mains power supply before cleaning.

1



1. Once the dust level reaches the 'MAX' mark on the **Dust compartment (8)** it will need emptying and the filters cleaned.

⚠ WARNING! **DO NOT** continue to use your vacuum cleaner once the 'MAX' mark has been reached as permanent damage may occur to the appliance.

2

2. To empty the cleaner, hold the **Dust Compartment** (10) over a dust bin and unclip the **Dust Release Catch** (9) (arrowed right) and the base of the dust compartment will swing open and allow the collected dust to fall out into the dust bin.

**3**

3. Once emptied, twist the **Cyclonic & Hepa Filters** (10) off in an anticlockwise direction and remove.

4

4. Wash the **Cyclonic & Hepa Filters** (10) in warm running water until clean. Allow the filters to dry thoroughly for 24 hours before reuse.





Care and Maintenance of Your Vacuum Cleaner

- Always disconnect the cleaner from the mains power supply before cleaning.
- Clean outside of the cleaner with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the cleaner in water or any other liquids.
- Empty the **Dust Compartment (4)** as soon as the 'MAX' mark has been reached.*
- Wash the **Cyclonic & Hepa Filters (10)** regularly – see table below.
- Allow the filters to thoroughly dry out for 24 hours before reassembly and use.

* **⚠ WARNING!** DO NOT continue to use your vacuum cleaner once the 'MAX' mark has been reached as permanent damage may occur to the appliance.

Recommended filter cleaning intervals

Filter Type	Recommended cleaning period
Hepa Filter 	<ul style="list-style-type: none"> • Shake out debris when you empty the dust container • Rinse under warm water once a month • Allow to dry thoroughly for 24 hours before reuse.
Cyclonic Filter 	<ul style="list-style-type: none"> • Shake out debris once a month • Rinse under warm water once a month. • Allow to dry thoroughly for 24 hours before reuse.

⚠ WARNING! Ensure the filters are cleaned periodically according to the table above, failure to clean the filters regularly will severely impair the performance and permanent damage may occur to the appliance.

Troubleshooting Guide

<i>Problem</i>	<i>Possible Cause</i>	<i>Possible Solution</i>
Unit fails to turn on.	The unit may not be properly plugged in. The fuse may have tripped.	Ensure the plug is fully inserted into the socket and the socket is switched on. Check the fuse on the mains board, if it has tripped, reset it.
Low suction or poor pick-up.	Cylinder is full. Filters are clogged. Blockage in the hose.	Empty the cylinder. Check and clean the filters. Check the Telescopic Tube and clear if necessary.
The vacuum is making a "hissing" sound.	The airflow is restricted	Empty the cylinder. Check and clean the filters. Check the Telescopic Tube and clear any blockages if necessary.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug – DISCONNECT FROM THE MAINS – and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Technical Specification

Model Number	FLR00160
Supply Voltage	AC 220-240V ~ 50-60Hz
Rated Power	600W
Protection Class	II
Vacuum (max)	15kpa
Dust Compartment Capacity	0.8L

Recycling Information

 
Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

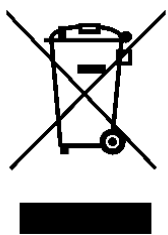

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.

 
 
Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team at help@daewooelectricals.com or call 0161 831 7879.

- ***Replacement parts and accessories are guaranteed for 1 year from the date of purchase.***
- ***It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance***

**UK
CA**

C E

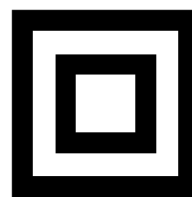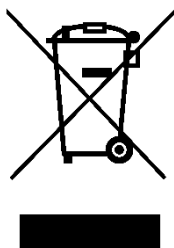

Notes



DAEWOO®

WARRANTY

Thank you for purchasing your Daewoo Vacuum.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo vacuum product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty vacuum should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty please register your purchase online within 28 days of the original purchase date by registering at:*

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://help.daewooelectricals.com)

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com