 




DAEWOO®

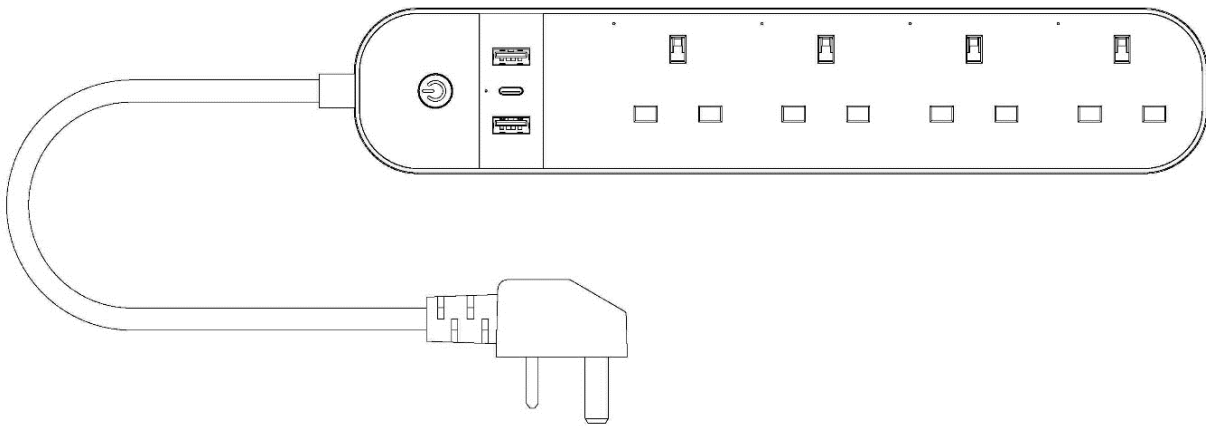

4 Way Smart Extension Lead

Explanation of Symbols

 
The following warning symbols or words are used in this instruction manual:



Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.

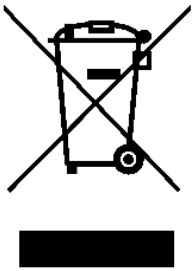

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk enter your postcode to find out your nearest recycling site.

 


This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.

Description of Parts

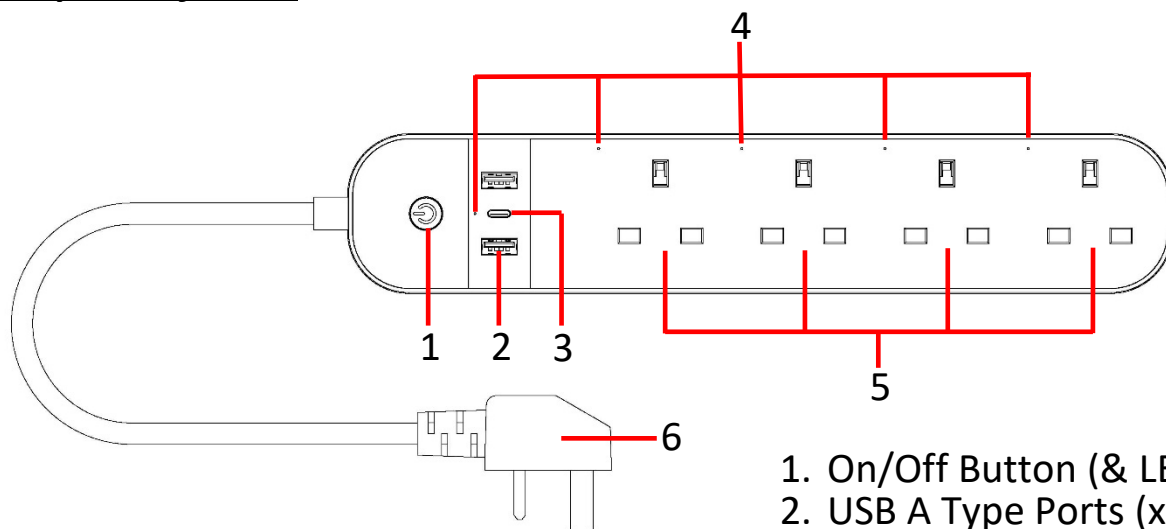

1. On/Off Button (& LED)
2. USB A Type Ports (x2)
3. USB C Type Port
4. LED Indicator(s)
5. Wi-fi 13A Sockets
6. Mains Plug

Configuration Preparation


1. Using your smart phone, download the smart phone application either by scanning the QR code below right or searching for **Smart Life – Smart Living** in the Apple App Store for iPhones or in Google Play for Android phones.



iOS/Android App

Smart Life – Smart Living

2. Launch the app and log in. However, new users will have to register a new account as below:

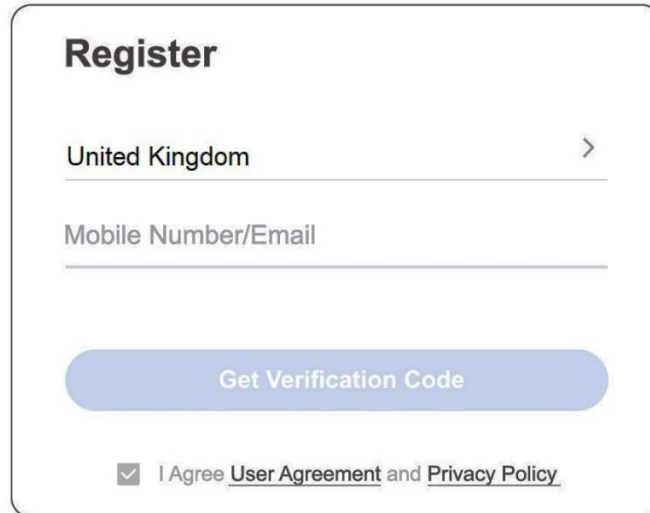

Register

United Kingdom >

 
Mobile Number/Email

Get Verification Code


I Agree [User Agreement](#) and [Privacy Policy](#)

Configuration

Plug the **Mains Plug** (6) of the Smart Extension Lead into the nearest socket and press the **On/Off Button** (1) until the button starts flashing green as shown below:

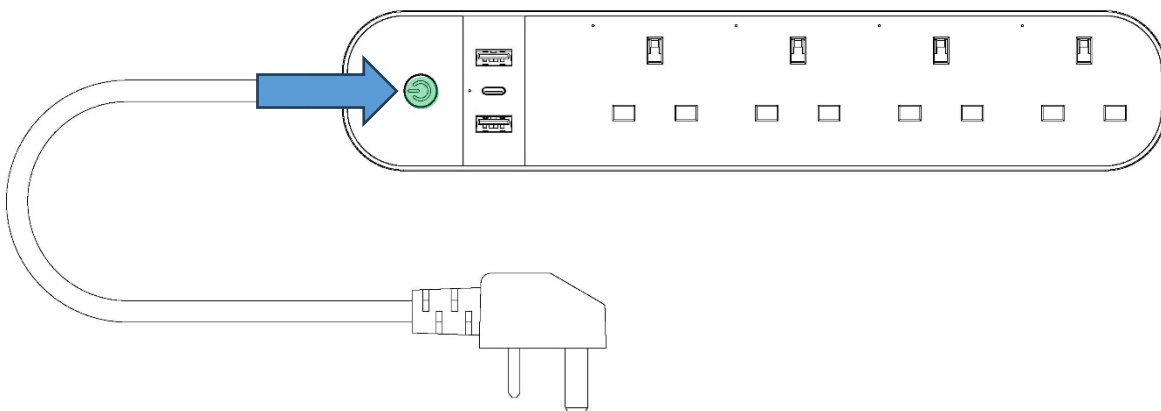

 
NOTE: If the LED fails to flash, try resetting the device – see '**Resetting the Smart Wi-Fi Socket**' below:

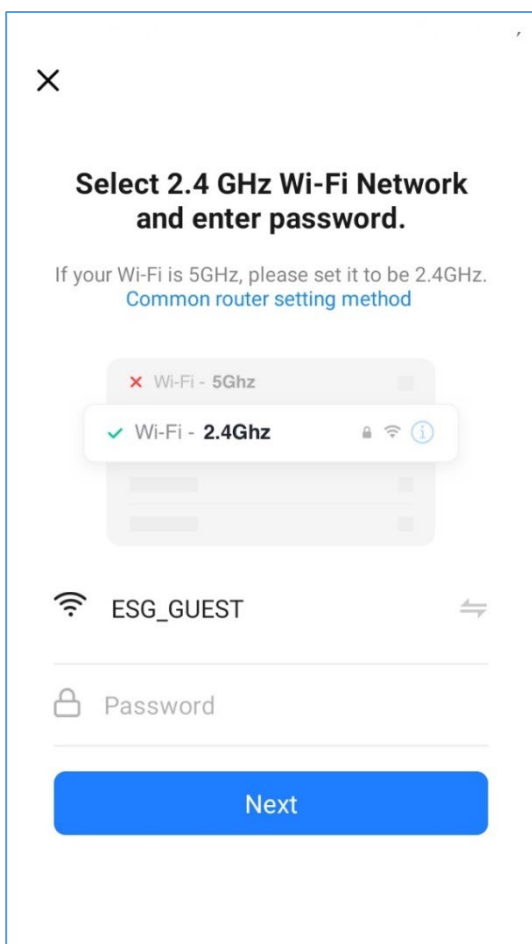


Select the Wi-Fi hotspot and input the password to sign in and the App can access the Wi-Fi network.

Tap '**Next**' after inputting the password.

 
NOTE – the Wi-Fi must be 2.4 GHz for the App to operate.

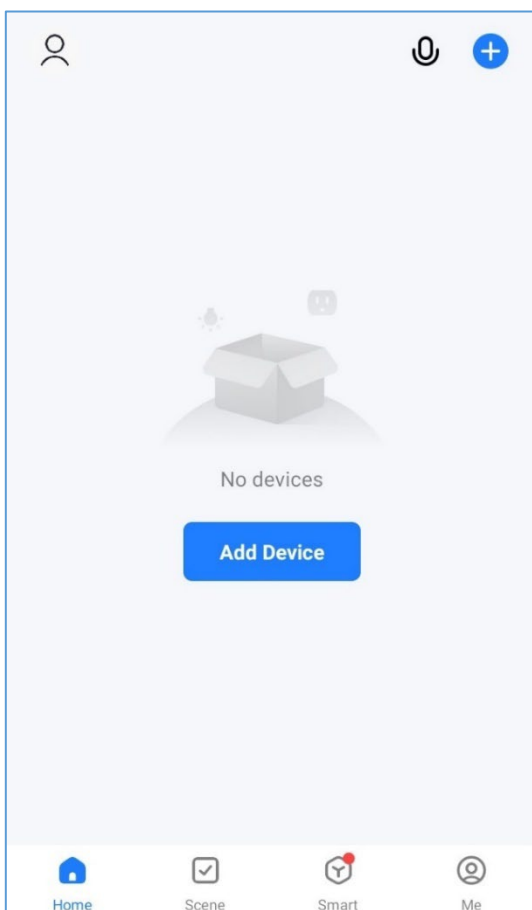

 The next page will prompt you to add the smart device – either press '**Add Device**' or tap '+' on the top right corner.

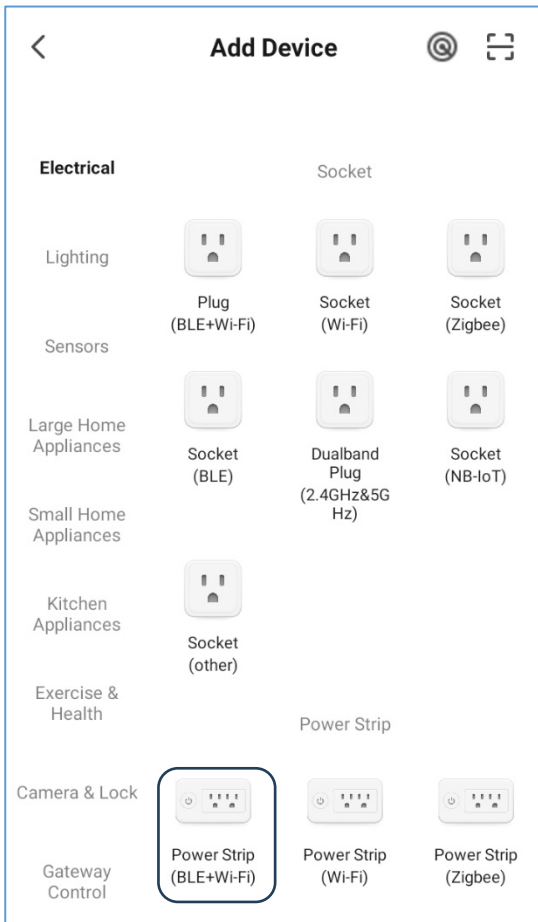

 Next select the type of Wi-Fi socket.
 Select **'Power Strip (BLE+Wi-Fi)'** from the options as highlighted left.

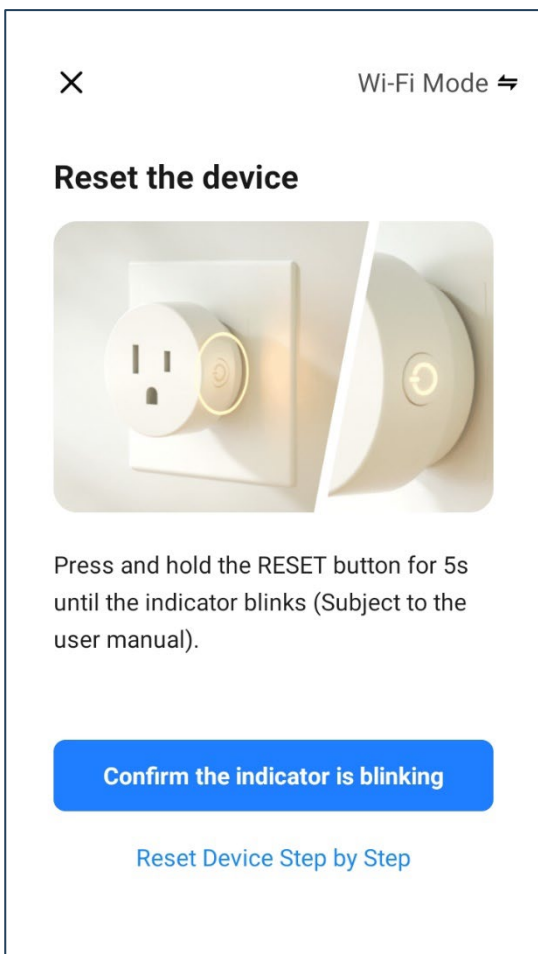


The next prompt is to confirm the **On/Off Button** (1) LED is still flashing.

If the button is flashing tap **'Confirm the Indicator is blinking'** to continue.


If the LED is not flashing the device will need resetting as follows:

Unplug the device from the mains for 10 seconds and then plug it back in again.

 Press and hold the **On/Off Button** (1) for 5 to 10 seconds to reset the device until the LED flashes.

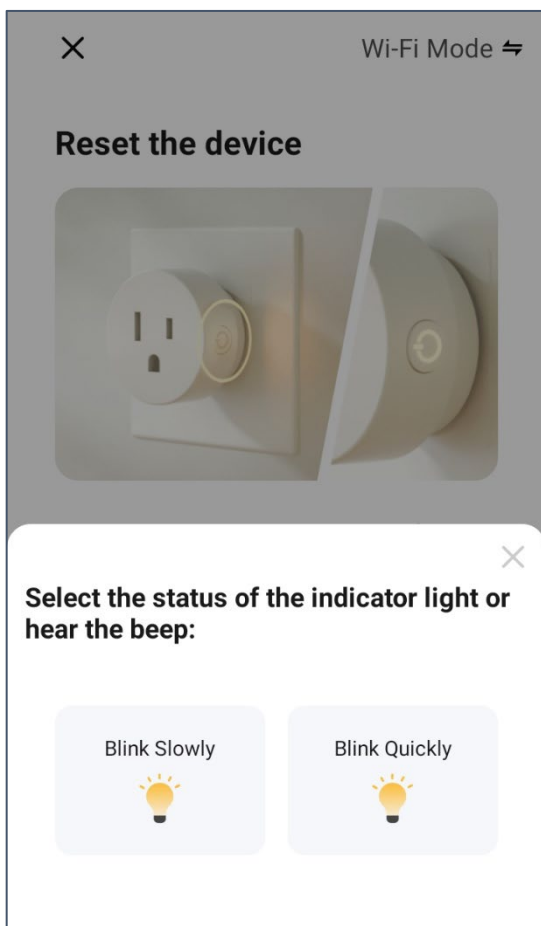

 
Your next prompt is to check whether the LED is flashing slowly or quickly. If the LED is flashing quickly, tap 'Blink Quickly' to proceed.

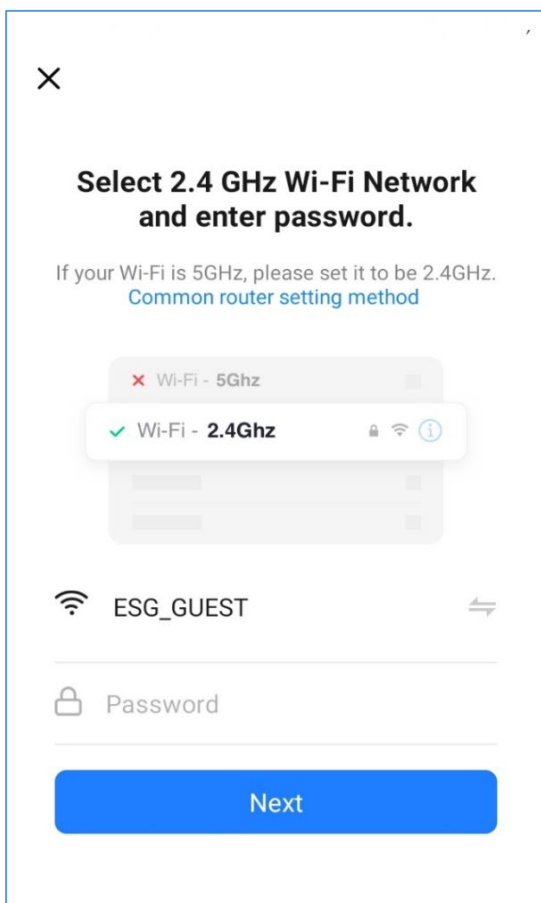


You will be asked to log on to your Wi-Fi again.

Select the Wi-Fi hotspot and input the password to sign in.

 Tap '**Next**' after inputting the password.

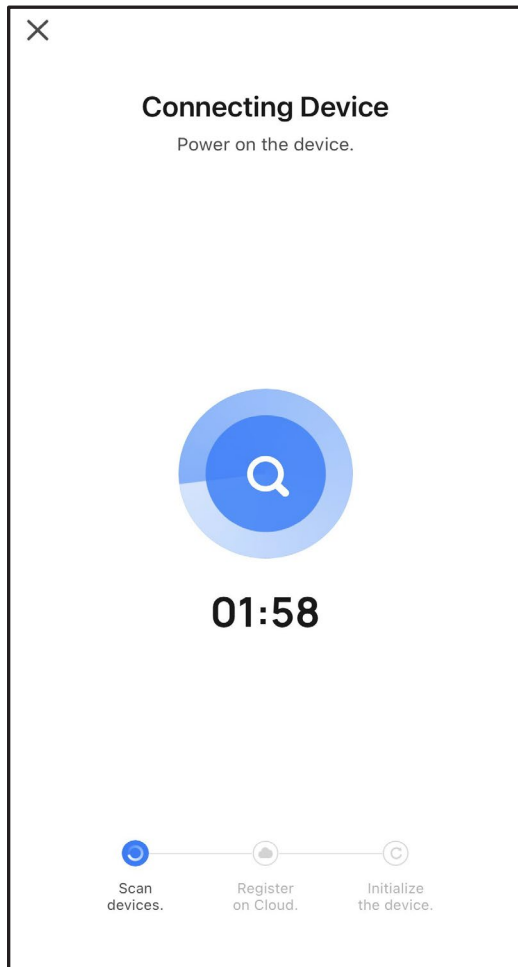

 
Left: The Smart Wi-Fi Socket connecting to the App.

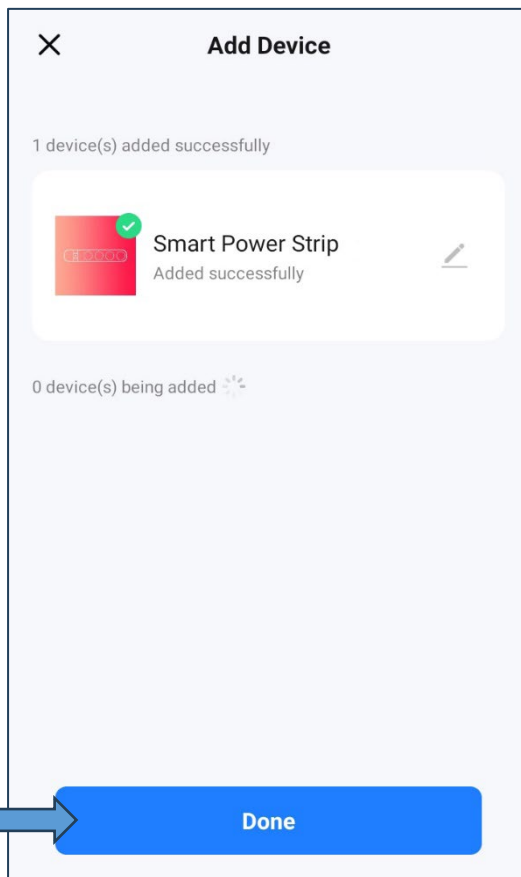

Left: Once your Smart Wi-Fi Socket has been fully installed, tap '**Done**' (arrowed left) which will take you to the device's main control page below.....

Using Your Smart Wi-Fi Socket with the App

 Here you will be able to control your Smart Wi-Fi Socket from your smart device as follows:

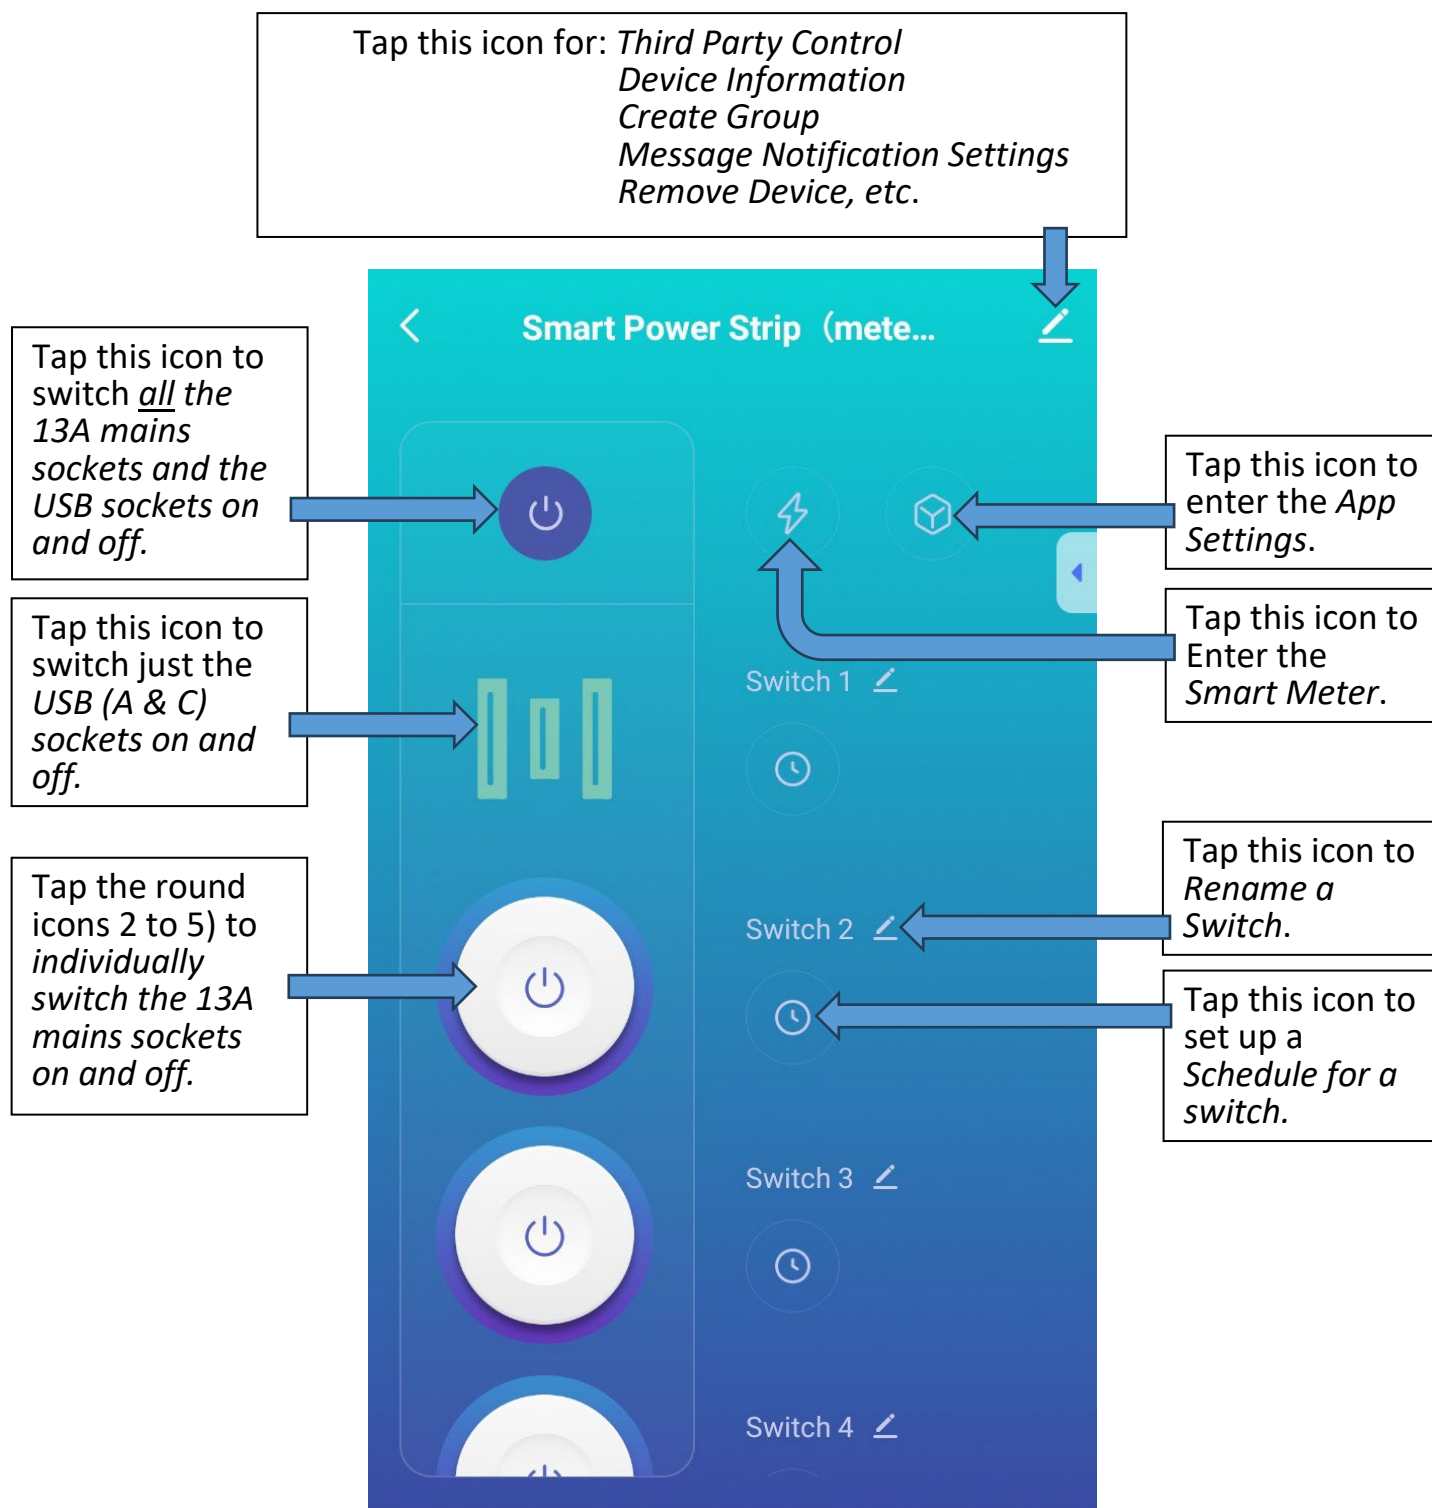


- Each of the **Wi-Fi 13A Sockets** (5) can be turned on/off separately in the App. The **LED Indicator** (4) will illuminate to show which socket is powered up.
- The **A Type USB ports** (2) and **USB C Type Port** (3) share same on/off control in the App. The **LED Indicator** (4) will illuminate to show when they are powered.


- All the **Wi-Fi 13A Sockets** (5) and **USB ports** (2 & 3) can be switched on/off together in the App.

Resetting the Smart Wi-Fi Socket

- Unplug the Smart Wi-Fi Socket from the mains wait 10 seconds and then plug it back in again.
- Press and hold the **On/Off Button** (1) for 5 to 10 seconds to reset the device until the LED flashes.

Smart Meter

Tap the Smart Meter icon  to enter the Smart Meter mode, the display will show the total daily power used by the extension in Kilowatt hours (KWh) as shown below:

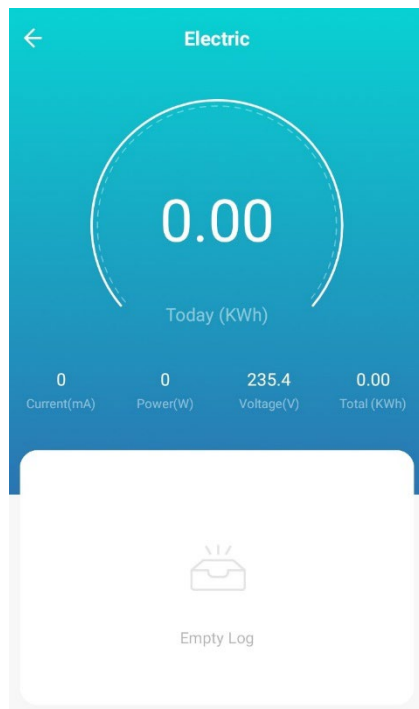 

Left: The Smart Meter Display


The Smart Meter mode also shows the Current (in Milliamps (mA)), Power (in Watts (W)) and actual mains voltage.

Options

Tap the Options icon  to select from:

Third Party Control (Alexa or Google Assistant)
Device Information
Create Group
Message Notification Settings
Remove Device, etc

Changing the Switch Name


1. Tap the Switch Name icon 
2. Modify Device Name and enter a new name for the switch (Switch 1 in this example).

NOTE If the Smart Wi-Fi Socket is going to be used with a third-party control, choose an unambiguous, clear sounding name.

Schedule

Schedules can be used to turn devices on or off at preset times of the week. The schedules can be once or repeat on certain days of the week.

To activate a schedule:

1. Tap 
2. Set up the desired schedule at the top of the page.
3. Save the schedule once set up.

Remove Device

1. Tap 
2. Tap '**Remove Device**' at the bottom of the page to remove the device.

Wi-Fi Trouble Shooting Guide

| <i>Problem</i> | <i>Possible Cause and Solution</i> |
|--|--|
| During the set-up, the Smart Wi-Fi Socket will not connect to the Wi-Fi network. | Check that you have the internet reception and your smart device and the Smart Wi-Fi Socket are connected to the same Wi-Fi network. |
| | Check that your Wi-Fi password is correct. |
| | Check that no firewalls or other restrictions are set. |
| | Check that the router is working with other products e.g. TV, computer, etc. |
| | Ensure that the Smart Wi-Fi Socket, router and smart device are all on the same Wi-Fi network and within the signal range. |
| | Reset the Wi-Fi module. |
| I cannot control the Smart Wi-Fi Socket with my smart device. | The Smart Wi-Fi Socket has been reset and/or the smart device has lost control permission. Reconnect your smart device to the Smart Wi-Fi Socket using the instructions above. |
| | If after these steps you still cannot control the Smart Wi-Fi Socket with your smart device, remove the Smart Wi-Fi Socket from your device list and reconnect. |
| | Reset the Smart Wi-Fi Socket module by following ' <i>Resetting the Smart Wi-Fi Socket</i> ' found on page 10. |
| The LED indicator is NOT blinking at all or is blinking slowly. | Reset the Smart Wi-Fi Socket by following ' <i>Resetting the Smart Wi-Fi Socket</i> ' found on page 10. |
| I need to pair a new smart device with the Smart Wi-Fi Socket. | Only one smart device can be paired at any one time – remove the existing device – see ' <i>Remove Device</i> ' found on page 10. |

Technical Specification

| | |
|---|------------------------------------|
| Model Number | EXT1296 |
| Supply Voltage | 220-240V~ 50/60Hz |
| Maximum Rated Power | 3120W |
| Maximum Load | 13A |
| Protection Class | I (This Appliance Must Be Earthed) |
| Wireless Type | Wi-Fi 2.4GHz |
| USB A & C Outputs | 5V @3A, 15W (maximum total) |
| This product conforms to the Radio Equipment Directive 2014/53/EU | |

Cleaning and Maintenance

Unplug the unit from the mains supply before cleaning.

Clean the surface of the unit with a damp cloth and mild detergent.

Do not use harsh or abrasive chemicals as this may damage the finish.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse needed replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug -**DISCONNECT FROM THE MAINS**- and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Recycling Information

 
Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper recycling facilities.

Dispose of recyclable plastics in appropriate plastic recycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

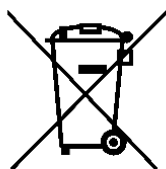


You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team at help@daewooelectricals.com or call 0161 831 7879.

 - ***Replacement parts and accessories are guaranteed for 1 year from the date of purchase.***
- ***It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance***

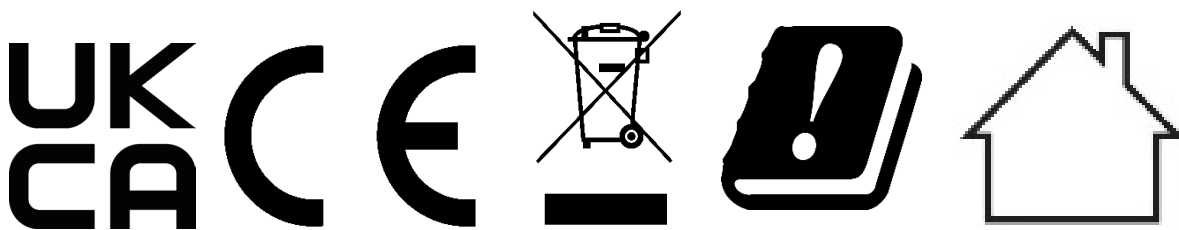



DAEWOO®

WARRANTY

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

*To validate your extended 2 year warranty*please register your purchase online within 28 days of the original purchase date by registering at:*

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://help.daewooelectricals.com)

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com