



3 YEAR WARRANTY
*Terms and conditions apply.



CYCLONE FREEDOM

22.2V CORDLESS VACUUM

User Manual

*Please refer to the warranty section for terms of your extended guarantee.

Contents

Page No.

2	Contents
3	Reading and Storing the User Manual
3	Important Safety Instructions for Proper Use
6	Explanation of Symbols
7	Description of Parts
7	Before first use of Your Cordless Vacuum Cleaner
8	Charging the Internal Battery
8	Attaching the Accessories - Fitting the Motorised Floor Tool
9	Changing the Floor Brush
10	Using Your Cordless Vacuum Cleaner
11	Attaching the Accessories - Using the Crevice Tool
12	Emptying and Cleaning Your Cordless Vacuum Cleaner
14	Cleaning and Replacing the Outlet Filter
14	Care and Maintenance of Your Cordless Vacuum Cleaner
14	Recommended Filter Cleaning Intervals
15	Fitting the Wall Bracket for Storage of your Vacuum Cleaner
17	Technical Specification
17	Troubleshooting Guide
18	Customer Support
19	Recycling Information
Back Page Warranty Information	

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- Read and familiarise yourself with all operating instructions before using this Vacuum Cleaner.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years when it is energised or cooling down.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.



- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to
 - ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
 - If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Unplug after each use. Grasp the plug, not the cord.
- **DO NOT** pull or carry the Vacuum Cleaner by the electrical

cord, use the handle provided.

- Ensure fingers and other objects are never placed in any part of the vacuum cleaner. Clothing or hair may become trapped if the vacuum is used improperly.
- Keep hair, loose clothing, jewellery, fingers and all parts of the body away from openings and moving parts.
- Keep all air vents clear and free of dust, lint, hair and anything else that may reduce airflow.
- Avoid directing the appliance towards naked flames as the air discharged may extinguish gas fires or pilot lights and may disturb ashes in open fires.
- **DO NOT** Vacuum water or any other liquids with this vacuum.
- **DO NOT** Vacuum hot ashes or lit cigarettes, etc.
- Never use the appliance without the filter in place.
- **DO NOT** use the Vacuum without the Dust Compartment fitted.
- **DO NOT** vacuum any large or broken objects such as glass.
- **DO NOT** vacuum anything that is burning or smoking such as cigarettes, matches or hot ashes.

⚠ WARNING! The fixing pack contains small items which should be kept away from young children.

Explanation of Symbols

The following warning symbols or words are used in this instruction manual:

**UK
CA**

 
Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.

CE

Products labelled with this symbol conform to applicable provisions of the European Economic Area.



This symbol means batteries and rechargeable batteries may not be disposed of with household waste!
As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.

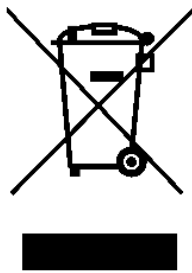


You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.



This symbol provides useful additional information on the use of this product.



 This symbol indicates that the supply uses an alternating current mains supply.




This symbol identifies voltage and the current rating for direct current.




This designates a hazard with moderate risk, which may result in severe injury or damage to the product if not adhered to.

 Description of Parts & Accessories

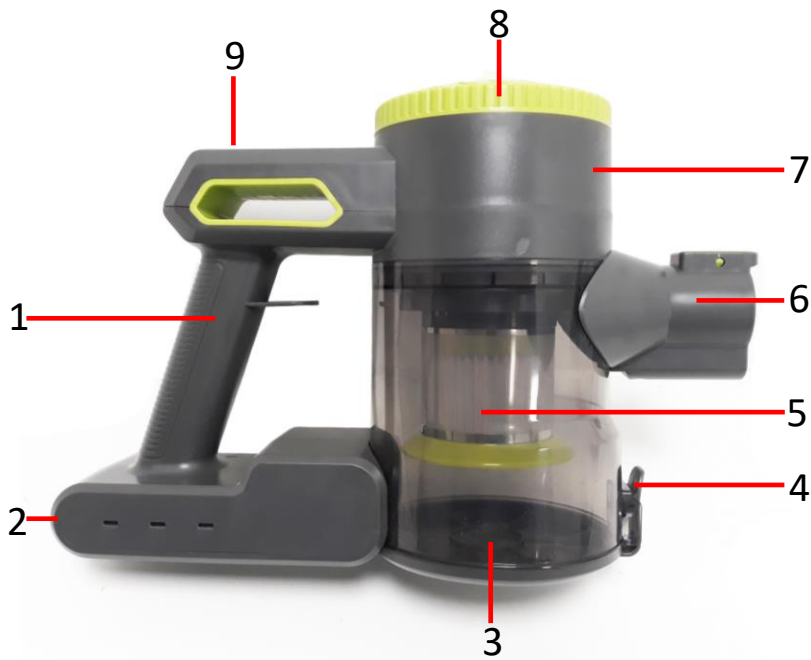

 1. Handle
2. Charging Port
3. Dust Compartment
4. Dust Release Catch
5. Hepa Filter
6. Air Inlet
7. Motor Unit
8. Air Outlet & Filter
9. Control Panel
10. Crevice Tool
11. Hard Floor Brush
12. Upholstery Tool and Brush
13. Wall Mount Bracket
14. Motorised Floor Tool
15. Small DC Power Plug
16. Mains Charger
17. Aluminium Tube

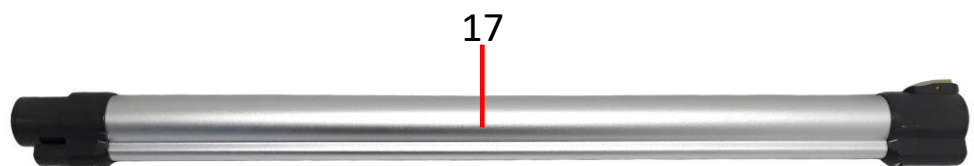

Before first use of your Cordless Vacuum Cleaner

Before use, retain all packaging until all the parts are present against the parts list – see **Description of Parts & Accessories** above.

Discard packaging responsibly.

Charging the Internal Battery

Ensure that the internal rechargeable battery is fully charged as follows:

1. Insert the **Small Power Plug** (15) of the **Mains Charger** (16) into the **Charging Port** (2).
2. Plug the **Mains Charger** (16) into the nearest mains socket.
3. The **Charging/Battery Indicators** will light in the sequence as in a, b, c below to show the internal battery is charging.
4. Once the battery is fully charged (after approximately 5 hours), the **Charging/Battery Indicators** will all light as in 'c' below showing that the internal battery is fully charged and the **Mains Charger** (16) can be removed.



a.

b.

c.

i Please note, the vacuum cleaner will not operate whilst the **Mains Charger** (16) is plugged into the **Charging Socket** (2). The Mains Charger must be disconnected before using the vacuum.

i The Charging/Battery Indicators will go out one at a time during use, when none of the indicators are illuminated the internal battery will need recharging.

Attaching the Accessories - Fitting the Motorised Floor Tool

CAUTION Ensure that the vacuum cleaner is not connected to the mains charger before use.

1. Push the **Aluminium Tube** (17) onto the **Air/Dust Inlet** (1) until it clicks home as shown below:



2. Push the **Motorised Floor Tool** (13) onto the other end of the **Aluminium Tube** (17) again until it clicks home.

 
Changing the Floor Brush

1. Before using the **Motorised Floor Tool** (14) the first choose the appropriate brush type for the floor type being cleaned:

Select the **Carpet Brush** for vacuum cleaning carpets, rugs, etc.

Select the **Hard Floor Brush** (19) for cleaning vinyl, laminate, tiled floors, etc.

1

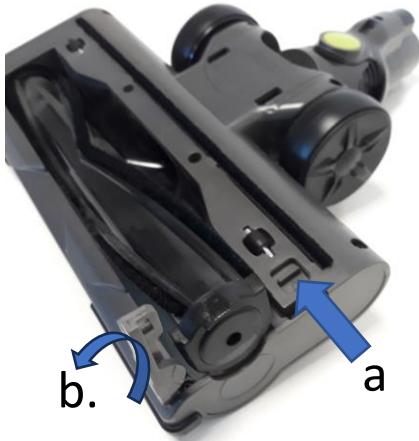2


2. To change the brush type, slide the locking catch in the direction of the arrow (left a) on the underside of the **Motorised Floor Tool** (14) as shown left. At the same time lift up the brush retaining catch (b).

i The **Carpet Brush** (19) is currently fitted in this example.

3


3. Lift the brush out of the **Motorised Floor Tool** (14) as shown left.

4. Lower the other floor brush into the **Motorised Floor Tool** (14) as shown left. NB the brush may need rotating back and forth a little in order for it to mesh at the other end and drop into place.

4


5. Finally push the brush retaining clip back down to hold the brush in place:

5

 

Using Your Cordless Vacuum Cleaner

1. Grasp the vacuum cleaner firmly by the **Handle** (1).

1**2**

2. Press the On/Off button on the **Control Panel** (9 - arrowed right) to power up the cleaner. Press the button again to switch off the cleaner.


a.

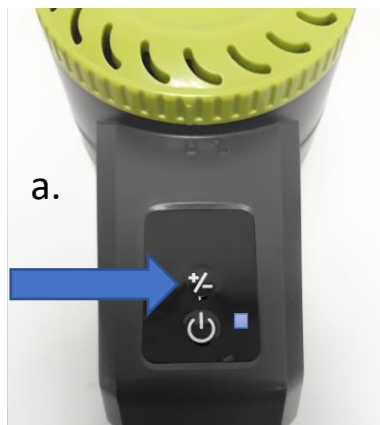

- a. Press power button on the **Control Panel** (9) to change the power/suction level. A single light on the **Control Panel** (9) shows the vacuum is in low power mode.

3

 b.

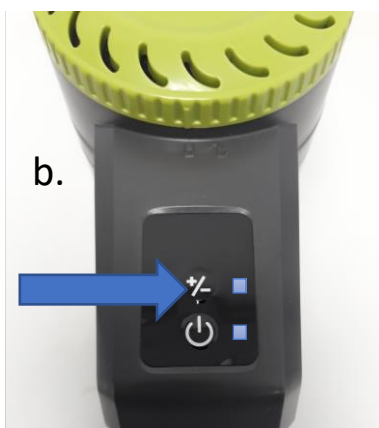

- b. A second press of the power button will increase to power/suction level to high which will be shown by two lights on the **Control Panel** (9).

4



3. Place your foot gently on the **Motorised Floor Tool** (14) and pull the cleaner back by the **Handle** (1) and start vacuum cleaning.

Attaching the Accessories - Using the Crevice Tool (10)

1. Attach the **Crevice Tool** (10) onto the **Aluminium Tube** (17) to clean edges and hard to get at areas:

1



2. If the **Aluminium Tube (17)** is not required, attach the **Upholstery Tool & Brush (12)** directly to the cleaner, this useful for cleaning soft furnishings, car seats, stairs, etc.:

2

Emptying and Cleaning Your Cordless Vacuum Cleaner

⚠ WARNING! Always disconnect the cleaner from the mains charger before cleaning.

1

1. Once the **Dust compartment (3)** fills to the level shown arrowed left, it will need emptying and the filters cleaned.

⚠ WARNING! **DO NOT** continue to use your vacuum cleaner above the Maximum Fill level shown arrowed above as permanent damage may occur to the appliance.

2. To empty the cleaner, hold the **Dust Compartment** (3) over a dust bin and press the **Dust Release Catch** (4) (arrowed right) and the base of the dust compartment will swing open and allow the collected dust to fall out into the dust bin.

2**3**

3. Rotate the **Hepa Filter** (5) in direction of the arrow and remove.

4

4. Wash the **Hepa Filter** (5) in warm running water until clean. Allow the filter to dry thoroughly for 24 hours before reuse.

Cleaning and Replacing the Outlet Filter





5. Twist off the **Air Outlet Filter (8)**. Remove the sponge filter and wash the filter in warm running water until clean. Allow the filter to dry thoroughly for 24 hours before reuse.
To replace the **Air Outlet Filter (8)**, replace the sponge filter inside the cover then align the lock and unlock marks and twist the cover back on.

Care and Maintenance of your Cordless Vacuum Cleaner

- Always disconnect the cleaner from the mains charger before cleaning.
- Clean outside of the cleaner with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the cleaner or its charger in water or any other liquids.
- Empty the **Dust Compartment (3)** as soon as it has reached maximum capacity (see above).*
- Wash the **Hepa Filter (5)** and the **Air Outlet Filter (8)** regularly – see table below.
- Allow the filters to thoroughly dry out for 24 hours before reassembly and reuse.

* **⚠ WARNING!** DO NOT continue to use your vacuum cleaner once the **Dust Compartment (3)** is full as permanent damage may occur to the appliance.

Recommended filter Cleaning Intervals

<i>Filter Type</i>	<i>Recommended cleaning period</i>
Hepa Filter 	<ul style="list-style-type: none"> • Shake out debris when you empty the dust container. • Rinse under warm water once a month • Allow to dry thoroughly for 24 hours before use.
Air Outlet Filter 	<ul style="list-style-type: none"> • Shake out debris once a month • Remove the sponge filter from around the edge of the cover and rinse under warm water once every 3-6 months • Allow to dry thoroughly for 24 hours before use.

⚠ WARNING! Ensure the filters are cleaned periodically according to the table above, failure to clean the filters regularly will severely impair the performance and permanent damage may occur to the appliance which may invalidate your warranty.

Fitting the Wall Bracket for Storage of your Vacuum Cleaner

Fit the **Wall Bracket** (13) to the wall using supplied Wall Plugs and Screws (or alternative appropriate fixings for the wall) as follows:

⚠ WARNING! *Be careful whilst drilling the holes, care must be taken not to damage concealed cables and pipes in the wall. If in doubt obtain the services of a qualified tradesman to fit the wall bracket.*

1. Choose a suitable position to mount your vacuum cleaner on the wall.

1 & 2

2. Measure 1 metre above the floor and mark the wall with a pencil as shown right.



3. Hold the Wall Bracket level on the wall in line with the 1 metre mark made and mark the position of the two screw holes through the Wall Bracket using a pencil as shown.

3



4. Remove the Wall Bracket and using the marks, drill holes in the wall using a suitable 6mm masonry drill bit (not supplied).

4



5. After drilling the holes, push the two supplied Wall Plugs into the holes as shown right:

5

6. Screw the Wall Bracket to the wall using the supplied screws:

6**7**

7. Hang your Vacuum cleaner on the Wall Bracket as shown left:

Technical Specification

Model Number	FLR00185
Mains Charger	Input: AC 100-240V ~ 50/60Hz Output: 27V DC --- 500mA, 13.5W
Rated Power	140-160W
Battery	22.2V (6x 2000mAh Li-Ion cells)
Dimensions (approx.)	21.5cm (l) x 25cm (w) x 125.5cm (h)
Vacuum (max)	7-10kpa
Noise Level (approx.)	<65dB
Dust Compartment Capacity	0.8L
Maximum Air Flow	16.7L/S

Troubleshooting Guide

<i>Problem</i>	<i>Possible Cause</i>	<i>Possible Solution</i>
Unit fails to turn on.	Internal battery not charged. The charger is not plugged into the mains socket.	Charge the internal battery. Ensure the charger is fully inserted into the socket and the socket is switched on.
Low suction or poor pick-up.	Dust Compartment is full. Filters are clogged. Low Power Selected	Empty the cylinder. Check and clean the filters. Check the Min/Max Power Button.
The vacuum is making a "hissing" sound.	The airflow is restricted	Empty the Dust Compartment. Check and clean the filters. Clear any blockages if necessary.

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team at help@daewooelectricals.com or call 0161 831 7879.

- *Replacement parts and accessories are guaranteed for 1 year from the date of purchase.*
- *It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance*

Recycling Information

 
Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.


Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

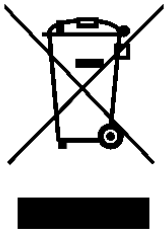


You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.

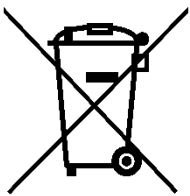 

This symbol means batteries and rechargeable batteries may not be disposed of with household waste!
As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.

 **UK
CA**

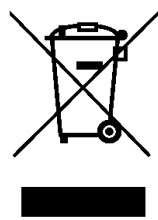



DAEWOO®

WARRANTY

Thank you for purchasing your Daewoo Vacuum.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo vacuum product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty vacuum should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty please register your purchase online within 28 days of the original purchase date by registering at:*

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester, M32 0TB, UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esg ltd.com