



# CYCLONE FREEDOM 2.0

## 22.2V Cordless Vacuum Cleaner

User Manual

\*Please refer to the warranty section for terms of your extended guarantee.

## Contents

### Page No.

2	Contents
3	Reading and Storing the User Manual
3	Important Safety Instructions for Proper Use
6	Explanation of Symbols
7	Description of Parts & Accessories
7	Before first use of Your Cordless Vacuum Cleaner
8	Fitting the Battery
8	Charging the Battery
9	Using Your Cordless Vacuum Cleaner
10	Varying the Suction Level
10	Changing the Floor Brush
12	Attaching the Accessories
13	Emptying Your Vacuum Cleaner
14	Cleaning the Filter Assembly
16	Care and Maintenance
16	Recommended Filter Cleaning Intervals
17	Fitting the Wall Bracket for Storage of your Vacuum Cleaner
19	Technical Specification
19	Troubleshooting Guide
20	Customer Support
21	Recycling Information
Back Page Warranty Information	

## READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

### **IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE**

**When using electrical appliances, basic safety precautions should always be followed.**

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- Read and familiarise yourself with all operating instructions before using this Vacuum Cleaner.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years when it is energised or cooling down.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.

- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Unplug after each use. Grasp the plug, not the cord.
- **DO NOT** pull or carry the Vacuum Cleaner by the electrical cord, use the handle provided.

- Ensure fingers and other objects are never placed in any part of the vacuum cleaner. Clothing or hair may become trapped if the vacuum is used improperly.
- Keep hair, loose clothing, jewellery, fingers and all parts of the body away from openings and moving parts.
- Keep all air vents clear and free of dust, lint, hair and anything else that may reduce airflow.
- Avoid directing the appliance towards naked flames as the air discharged may extinguish gas fires or pilot lights and may disturb ashes in open fires.
- **DO NOT** Vacuum water or any other liquids with this vacuum.
- **DO NOT** Vacuum hot ashes or lit cigarettes, etc.
- Never use the appliance without the filter in place.
- **DO NOT** use the Vacuum without the Dust Compartment fitted.
- **DO NOT** vacuum any large or broken objects such as glass.
- **DO NOT** vacuum anything that is burning or smoking such as cigarettes, matches or hot ashes.

**⚠ WARNING!** The fixing pack contains small items which should be kept away from young children.

## Explanation of Symbols

The following warning symbols or words are used in this instruction manual:

**UK  
CA**


Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.

**CE**

Products labelled with this symbol conform to applicable provisions of the European Economic Area.



This symbol means batteries and rechargeable batteries may not be disposed of with household waste!  
As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.

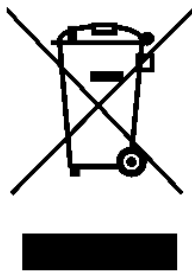


You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), enter your postcode to find out your nearest recycling site.



This symbol provides useful additional information on the use of this product.



 This symbol indicates that the supply uses an alternating current mains supply.



This symbol identifies voltage and the current rating for direct current.





This designates a hazard with moderate risk, which may result in severe injury or damage to the product if not adhered to.

**Description of Parts & Accessories**



1. Dust Compartment Release Catch
2. Air Outlet
3. Charging/Battery Indicators
4. Max Power Button
5. Motor Unit
6. On/Off Trigger
7. Handle
8. Charging Port
9. Battery Release Button
10. Battery
11. Dust Compartment
12. Dust Release Button
13. Conical & Hepa Filter
14. Dust Inlet
15. Wall Bracket
16. Crevice Tool
17. Upholstery and Brush Tool
18. Hard Floor Roller
19. Carpet Brush
20. Battery Charger
21. Small Power Plug
22. Floor Tool Release Catch
23. Motorised Floor Tool
24. Aluminium Tube
25. Turbo Brush Tool
26. Fixing Kit

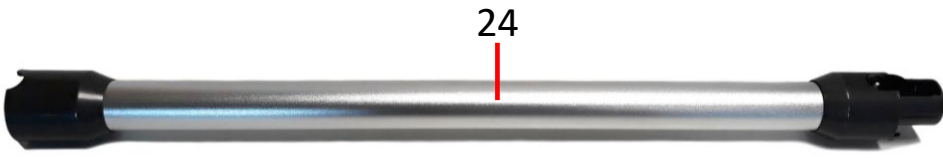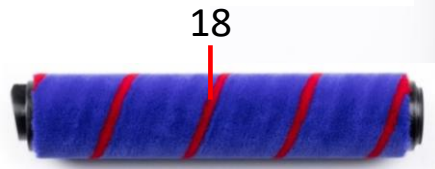

**Before first Use of Your Cordless Vacuum Cleaner**

Before use, retain all packaging until all the parts are present against the parts list – see **Description of Parts & Accessories** above. Discard packaging responsibly.

### Fitting the Battery

Before using your vacuum cleaner, the **Battery (10)** must first be fitted as shown below:



A. Slide the **Battery (10)** onto the vacuum in the direction of the arrow as shown above.




B. Push the **Battery (10)** all the way in the direction of the arrow as shown above until it clicks in place.

### Charging the Battery

Ensure that the rechargeable battery is fully charged as follows:

1. Insert the **Small Power Plug (21)** of the **Battery Charger (20)** into the **Charging Port (8)** as shown right:
2. Plug the **Battery Charger (20)** into the nearest mains socket.
3. The **Charge/Battery Indicators (3)** will light in the sequence as in a, b, c below to show the internal battery is charging.
4. Once the battery is fully charged (after approximately 5 hours), the **Charging/Battery Indicators (3)** will all light as in 'c' below showing that the internal battery is fully charged and the **Battery Charger (20)** can be removed.

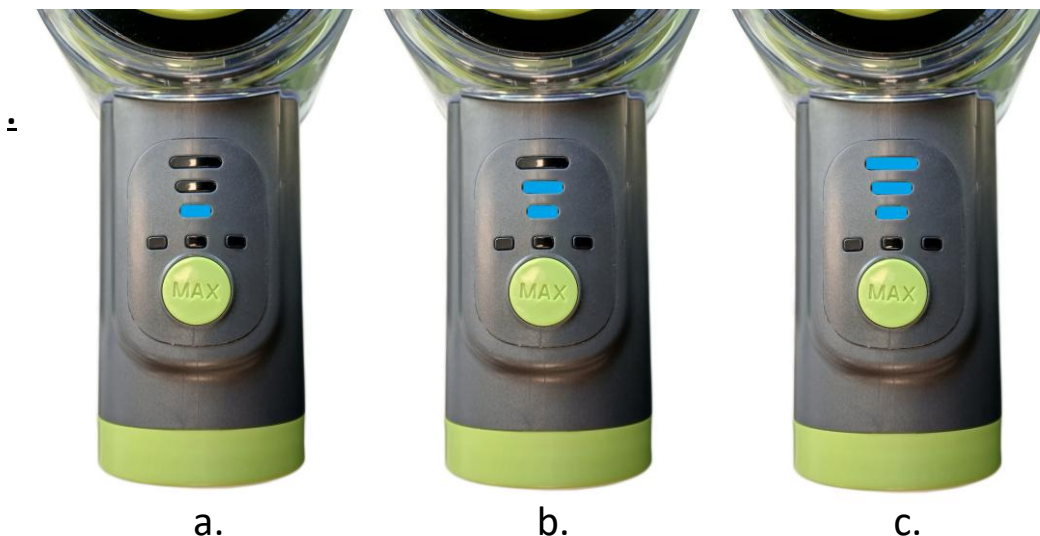

**i** Please note, the vacuum cleaner will not operate whilst the **Battery Charger (20)** is plugged into the **Charging Port (8)** and the mains. The **Battery Charger (20)** must be disconnected before using the vacuum.

## ***Using Your Cordless Vacuum Cleaner***

**CAUTION** Ensure that the vacuum cleaner is not connected to the **Battery Charger (20)** before use.

1. Push the **Dust Inlet (14)** onto the end of the **Aluminium Tube (24)** until it clicks home as shown below:




2. Push the other end of the **Aluminium Tube (24)** into the **Motorised Floor Tool (23)** until it clicks home.



**Left:** Briefly squeeze the **On/Off Trigger (6)** once to switch the vacuum on.

**Right:** Place your foot gently on the **Motorised Floor Tool (23)** and pull the cleaner back by the **Handle (7)** and start vacuum cleaning.

**Left:** Briefly squeeze the **On/Off Trigger (6)** once to switch the vacuum off.

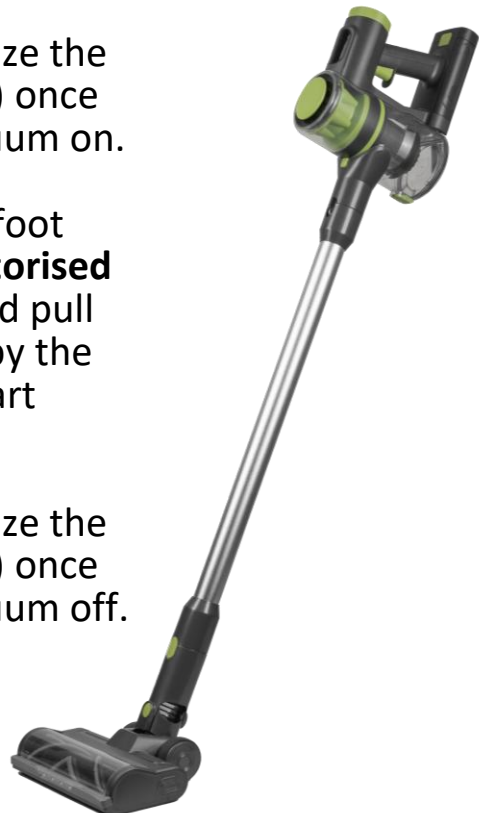

### Varying the Suction Level


Touch the **Max Power Button** (4 – arrowed below) to increase and decrease the suction power:



### Changing the Floor Brush

1. Select the **Carpet Brush** (19) for vacuum cleaning carpets, rugs, etc.

Select the **Hard Floor Roller** (18) for cleaning hard floors such as vinyl, laminate, tiled, etc.

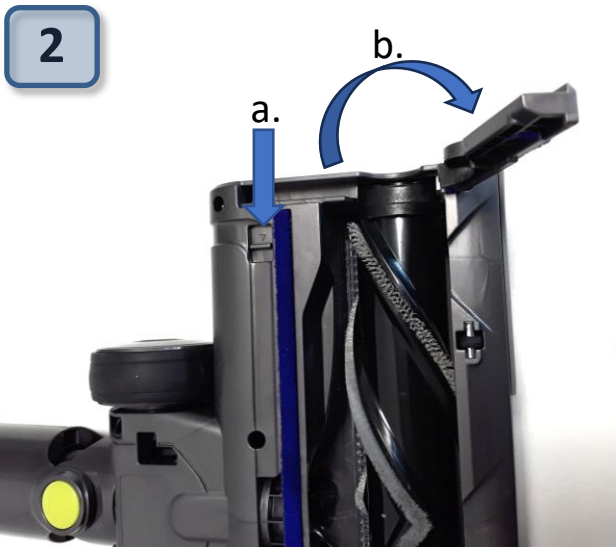

2. To change the brush type, slide the locking catch in the direction of the arrow (a.) on the underside of the **Motorised Floor Tool** (23) as shown left. At the same time lift up the brush retaining catch (b.).

**NB** The **Carpet Brush** (19) is currently fitted in this example.

3



3. Lift the **Carpet Brush (19)** out of the **Motorised Floor Tool (23)** as shown left.

4



4. Lower the **Hard Floor Roller (18)** into the **Motorised Floor Tool (23)** as shown left. **NB** the brush may need rotating back and forth a little to enable it to drop into place.

5




5. Finally push the brush retaining clip back down until it clicks home to hold the brush in place:

## Attaching the Accessories

### 1. The Crevice Tool (16)


Attach the **Crevice Tool (16)** onto the end of the **Aluminium Tube (24 fig 1)** or direct to the cleaner (fig 2), use this tool to clean edges and hard to get to areas:

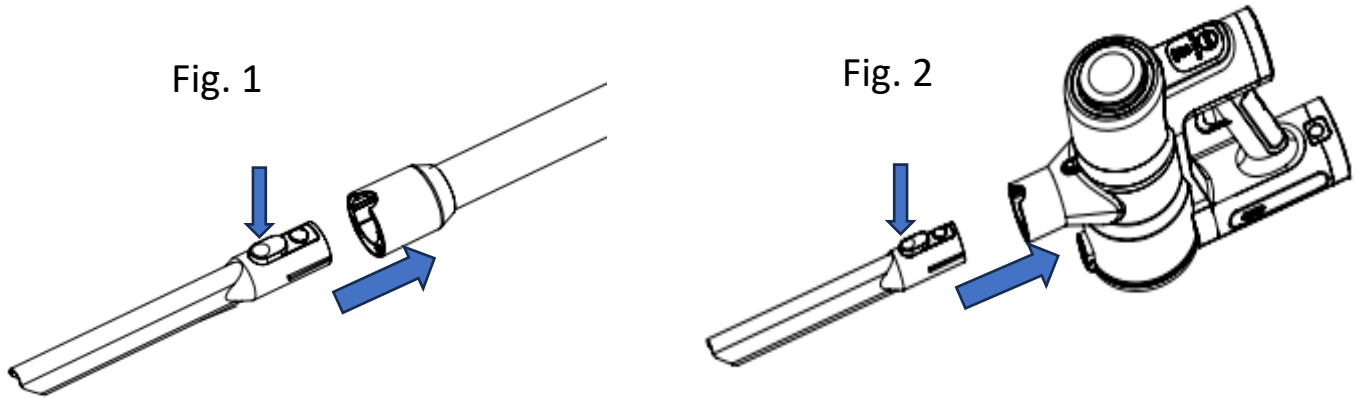

Push the tool until it clicks into place, press the button (arrowed above) and pull to remove the tool.

### 2. The Upholstery & Brush Tool (17)

Attach the **Upholstery & Brush Tool (17)** onto the end of the **Aluminium Tube (24 fig 3)** or directly to the cleaner (fig 4) as shown below:

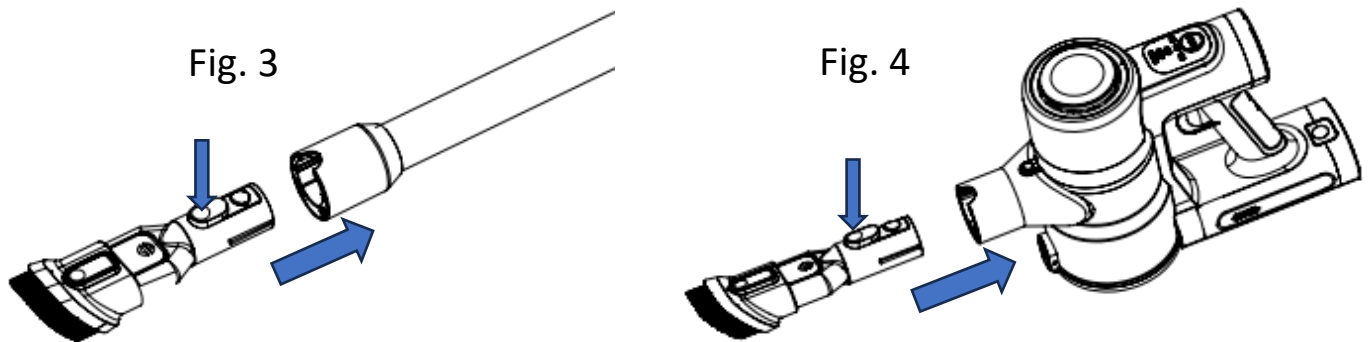

Push the tool until it clicks into place, press the button (arrowed above) and pull to remove the tool.

If the brush is not required on the tool, push the brush back until it locks in place.

### 3. Turbo Brush (25)

Attach the **Turbo Brush (25)** onto the end of the **Aluminium Tube (24 fig 5)** or directly to the cleaner (fig 6) as shown below:



Fig. 5

Fig. 6



### Emptying Your Vacuum Cleaner

**⚠ WARNING!** Always disconnect the cleaner from the **Battery Charger (20)** before emptying.

1



1. Once the **Dust compartment (11)** fills to the **MAX** level shown arrowed left, it will need emptying and the filters cleaned.

**⚠ WARNING!** **DO NOT** continue to use your vacuum cleaner above the Maximum Fill level shown arrowed above as permanent damage may occur to the appliance.

2. To empty the cleaner, hold the **Dust Compartment (11)** over a dust bin and press the **Dust Release Button (12 – arrowed right)** and the base of the dust compartment will swing open and allow the collected dust to fall out into the dust bin.

2



## Cleaning the Filter (13) Assembly

**1**

1. Press and hold the **Dust Compartment Release Catch** (1 – arrowed left).

**2**

2. Rotate the **Dust Compartment** (11) so that the mark at the top of the compartment lines up with the unlocked symbol as arrowed right and remove the **Dust Compartment** (11).

**3**

3. Twist off the **Conical & Hepa Filter** (13) from the **Motor Unit** (5) in the direction of the arrow shown left, the Hepa filter will be found inside the Conical filter as shown below:



4&5

4. Remove the Hepa Filter from the conical filter by pulling the tag and washing it in warm running water until clean. Allow the filter to dry thoroughly for 24 hours before reuse.
5. Shake the excess debris once a month from the Conical Filter. Rinse under warm water once a month.
6. Allow to dry thoroughly for 24 hours before reuse.




6



6. Place the Hepa Filter back inside the Conical filter then twist the **Conical & Hepa Filter (13)** back onto the **Motor Unit (5)** in the direction of the arrow shown left.

7

7. Place the **Dust Compartment (10)** back onto the vacuum. Rotate the compartment until the mark aligns with the locked symbol  as shown right:





### Care and Maintenance

- Always disconnect the cleaner from the mains charger before cleaning.
- Clean outside of the cleaner with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the cleaner or its charger in water or any other liquids.
- Empty the **Dust Compartment (11)** as soon as it has reached maximum capacity (see above).\*
- Clean the **Conical & Hepa Filter (13)** regularly – see table below.
- Allow the filters to thoroughly dry out for 24 hours before reassembly and reuse.

\* **⚠ WARNING!** DO NOT continue to use your vacuum cleaner once the **Dust Compartment (11)** is full as permanent damage may occur to the appliance.

### Recommended filter Cleaning Intervals

<i>Filter Type</i>	<i>Recommended cleaning period</i>
Hepa Filter 	<ul style="list-style-type: none"> <li>• Shake out debris when you empty the dust container.</li> <li>• Rinse under warm water once a month</li> <li>• Allow to dry thoroughly for 24 hours before use.</li> </ul>
Conical Filter 	<ul style="list-style-type: none"> <li>• Shake out debris once a month</li> <li>• Rinse under warm water once a month.</li> <li>• Allow to dry thoroughly for 24 hours before reuse.</li> </ul>

**⚠ WARNING!** Ensure the filters are cleaned periodically according to the table above, failure to clean the filters regularly will severely impair the performance and permanent damage may occur to the appliance which may invalidate your warranty.


### ***Fitting the Wall Bracket for Storage of Your Vacuum Cleaner***

Fit the **Wall Bracket** (15) to the wall using supplied Wall Plugs and Screws (or alternative appropriate fixings for the wall) as follows:

**⚠ WARNING!** *Care must be taken not to damage concealed cables and pipes in the wall whilst drilling the holes. If in doubt obtain the services of a qualified tradesman to fit the wall bracket.*

**1 & 2**

1. Choose a suitable position to mount your vacuum cleaner on the wall.
2. It is recommended to mount the **Wall Bracket** (15) 105cm from the floor to the bottom of the bracket as shown right, mark the wall with a pencil at the correct height.  
**NB** the minimum height from the floor to the bottom of the bracket is 95cm.

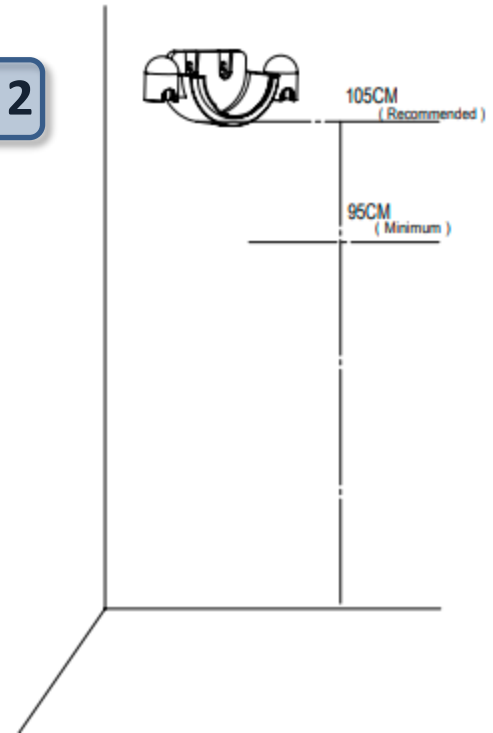


3. Hold the **Wall Bracket** (15) level on the wall with the bottom of the bracket in line with the mark. Use a pencil to mark the positions of the two fixing screws through the holes in the **Wall Bracket** (15)

**3**




4. Remove the **Wall Bracket** (15) and using the marks, drill holes in the wall using a suitable 6mm masonry drill bit (not supplied).

**4**

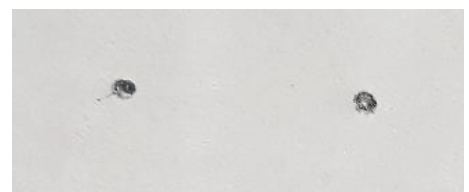

5. After drilling the holes, push the two supplied Wall Plugs from the **Fixing Kit (26)** into the holes as shown right:

5

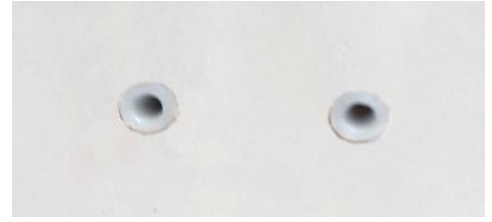

6. Screw the Wall Bracket to the wall using the supplied screws from the **Fixing Kit (26)**:

6



7



7. Hang your Vacuum cleaner on the **Wall Bracket (15)** as shown left, note the tool storage on either side:

## **Technical Specification**

Model Number	FLR00174
Battery Charger	Input: AC 100-240V ~ 50/60Hz 0.4A (max) Output: 26.5V DC --- 500mA, 13.25W
Rated Power	160W
Battery	22.2V (6x 2200mAh Li-Ion cells)
Dimensions (approx.)	21.5cm (l) x 25cm (w) x 125.5cm (h)
Vacuum (max)	7-11kpa
Noise Level (approx.)	<68dB
Dust Compartment Capacity	0.8L
Maximum Air Flow	16.7L/S

## **Troubleshooting Guide**

<i>Problem</i>	<i>Possible Cause</i>	<i>Possible Solution</i>
Unit fails to turn on.	Internal battery not charged. The charger is not plugged into the mains socket.	Charge the internal battery.  Ensure the charger is fully inserted into the socket and the socket is switched on.
Low suction or poor pick-up.	Dust Compartment is full. Filters are clogged. Low Power Selected	Empty the cylinder.  Check and clean the filters. Check the Min/Max Power Button.
The vacuum is making a "hissing" sound.	The airflow is restricted	Empty the Dust Compartment. Check and clean the filters. Clear any blockages if necessary.

## ***Customer Support***

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: [help@daewooelectricals.com](mailto:help@daewooelectricals.com).


- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

## **Recycling Information**


### **Disposal of the Packaging**

Dispose of paper and cardboard in appropriate paper re-cycling facilities.  
Dispose of recyclable plastics in appropriate plastic re-cycling facilities.  
Dispose of non-recyclable plastics in the appropriate plastics collection service.

### **Disposal of the Product**


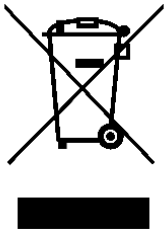


You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), enter your postcode to find out your nearest recycling site.

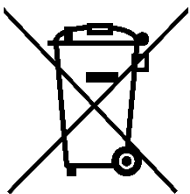

This symbol means batteries and rechargeable batteries may not be disposed of with household waste!  
As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.

**UK  
CA**

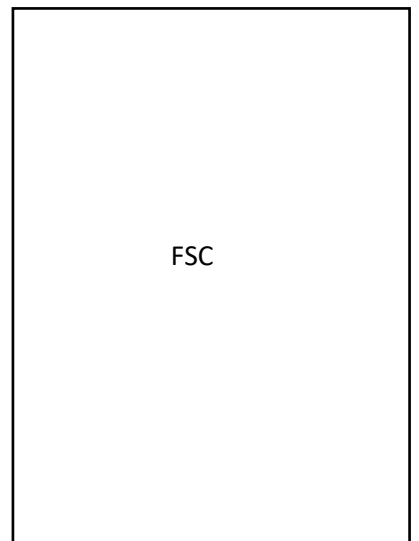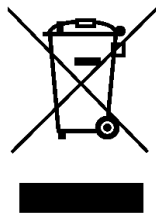

---

**Notes**



# DAEWOO®

## WARRANTY

*Thank you for purchasing your Daewoo Vacuum.*

*As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee*

Your Daewoo vacuum product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty vacuum should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

*To validate your extended 2 year warranty\* please register your purchase online within 28 days of the original purchase date by registering at:*

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

\*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.  
Produced and imported under licence by  
Eurosonic Group Limited  
Brightgate House  
1 Brightgate Way  
Manchester, M32 0TB, UK  
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006  
[www.esgltd.com](http://www.esgltd.com)