

PRO-ELEC

13A MAINS EXTENSION REEL




IMPORTANT PRODUCT SAFETY INFORMATION



- ✓ DO check the user manual provided with all high powered domestic appliances including kitchen appliances and air conditioning units for suitability before connecting to an extension reel.
- ✓ DO position an extension lead carefully to prevent any risk of damage or a trip hazard. If the cable has to cross a pathway, cover it with a rubber protector strip.
- ✓ DO check that the extension reel is suitable for your local mains voltage and socket.
- ✓ DO check that plugs and sockets are undamaged before use and the cable is not damaged due to being walked over, continually bent at the same point, or stored badly.
- ✗ DO NOT remove the fused plug and connect directly to a mains supply.
- ✗ DO NOT use extension reels with multi-way adapters or adapter blocks, as this can overload the socket which increases the risk of fire.
- ✗ DO NOT connect multiple extension reels together.
- ✗ DO NOT exceed the total maximum load across all outlets of 5A 1200W wound and 13A 3120W fully unwound.
- ✗ DO NOT push objects other than the appliance plug into the extension cable sockets.
- ✗ DO NOT use in damp conditions.
- ✗ DO NOT use outdoors - for indoor use only.

RECOMMENDED USAGE


- ✓ Disconnect the power before connecting equipment to the extension reel sockets.
- ✓ An extension reel should only be used when it is not possible to reach a wall socket with the appliance cable.
- ✓ BEWARE power tools used with extension reels can frequently become tangled.
- ✓ BEWARE high power equipment such as kitchen appliances may overload the extension reel, always check the safety instructions supplied with the appliance before use.

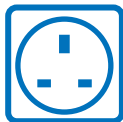

Safety Shutters



**Fire Retardant
Materials**

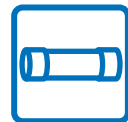

13A Plug Fuse