

AUGUST[®]

User Manual

DA383D

AUGUST[®]



August International Ltd
Rawmec Business Park
Hoddesdon EN11 0EE
United Kingdom
T: +44(0) 845 250 0586
(Carrier Rates Apply)
E: service@augustint.com

EU Distributor:
Daffodil Germany GmbH
Bayernstr. 10
D-30855 Langenhagen
Germany
T: +49 (0) 511 97812978

www.augustint.com

- EN** 10.1" Portable Freeview HD TV with Built in DVD Player
- FR** Téléviseur HD portable TNT 10,1" avec lecteur DVD intégré
- DE** Tragbarer 10,1 Zoll Freeview HD-Fernseher mit integriertem DVD-Player
- IT** TV HD Portatile DVB-T/T2 da 10,1" con Lettore DVD Integrato
- ES** TV portátil TDT HD de 10,1" con reproductor de DVD incorporado

User Manual

Thank you for buying our August TV. Please take time to read these instructions carefully. It is designed to familiarise you with the product's many features and to ensure that you get the very best from your purchase.

Safety

To ensure your safety and the safety of others, please ensure you read the Safety Instructions before you use this product.

Disposal

Please ensure the product and its accessories are disposed of in compliance with the WEEE (Waste Electrical and Electronic Equipment) Directive and other regulations. Please check with your local authority for disposal regulations.

Declaration of Conformity

The Declaration of Conformity can be found on our website at <http://augustint.com/en/declaration/>

Customer Service





 

If you need help, please contact our Customer Service:

Telephone: +44 (0) 8452500586 (Carrier Rates Apply)

Email: service@augustint.com


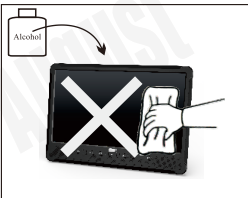 
1. Safety Instructions

■ Storage and Use

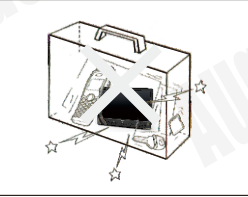	Do not expose this device to extreme temperatures. Operating temperature range: 0°C to 50°C Storage temperature: -10°C to 60°C.		Keep this TV set away from water or damp environments.
	Never expose this TV set to moisture, dust, oil or smoke.		Never drop or expose this device to impact.
	Always secure this device during transport to avoid		Never strike this TV set or scratch with sharp objects.

■ Maintenance

Please unplug all connection wires before start cleaning this machine.

	Please wipe the display screen and buttons with a soft cloth. Only clean the screen with professional LCDTV screen cleanser.		Never strike this TV set or scratch with sharp objects.
------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------	---------------------------------------------------------

■ Precautions

1. Use only the supplied power adaptor, failure to do so can damage the device and may cause personal injury.
2. When the device is not in use, turn off the AC adaptor or remove the car power adaptor from the 12V socket.

⚠ Warning

Do not watch this TV whilst driving.

⚠ Special Notice


There may be a few highlights or dark spots visible on the LCD screen. This is a very common property of active matrix display technology and does not indicate a defect or fault.

Never try to repair or modify this device yourself, this will invalidate the warranty, may cause further damage to the device and could cause personal injury. In the case of any fault, please turn off the device immediately and contact August International customer services or your retailer to arrange a professional repair.


2. Main Features

- Supports Freeview and Freeview HD Signal
- Built-in DVD and Multimedia Player
- 7 Day EPG and Subtitles
- HDMI In, AV In, USB Port and Micro SD Card Reader
- Records onto USB Stick or External Hard Drive

3. Box Contents

 DA383D TV	 AC/DC Adaptor	 Remote Control	 Digital TV Antenna
 HDMI Cable	 AV Cable	 User Manual	

 3.1 Interchangeable Plugs

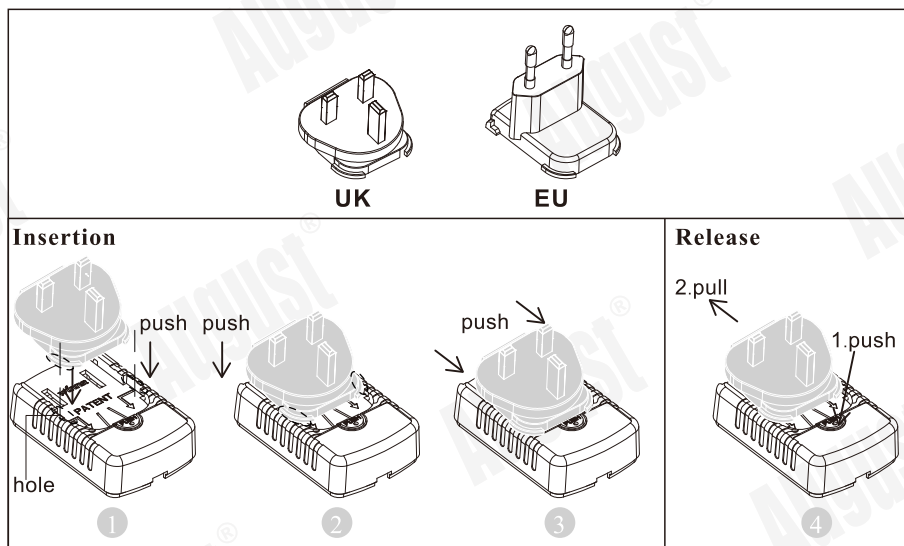

Quick Start Guide DA383D

1. Connect an antenna to the DA383D.
2. Plug the DA383D into a mains power socket using the supplied power adaptor.
3. Switch the DA383D on using the remote control.
4. Use the arrow buttons to select language.
5. Press <Enter> to confirm.
6. Use the arrow buttons to select country.
7. Press <Enter> to begin auto search.


Note: If you want to exit auto search, press <EXIT>, then Use <◀> or <▶> to select YES or NO.

Please note that the signal strength in some areas may not be sufficient to support TV reception using a portable aerial. The distance from the closest transmitter and other factors such as surrounding buildings, the walls of your house, weather and electro-magnetic interference caused by power and telecommunication infrastructure may affect signal strength. Changing location may improve signal reception but a rooftop aerial designed for digital TV should be used to achieve the best possible reception.

Contents

1. Safety Instructions	1
2. Main Features	2
3. Contents	3
4. Part Names and Functions	4
5. Connection and Setup	8
6. Startup	10
7. Digital TV	10
8. Analogue TV	13
9. DVD Player	14
10. Media Player	18
11. Display Settings	18
12. Audio Settings	18
13. Time Settings	18
14. System Settings	19
15. Battery Compartment	20
16. Specifications	20
17. Troubleshooting	22
18. Warranty	23

 4. Part Names and Functions

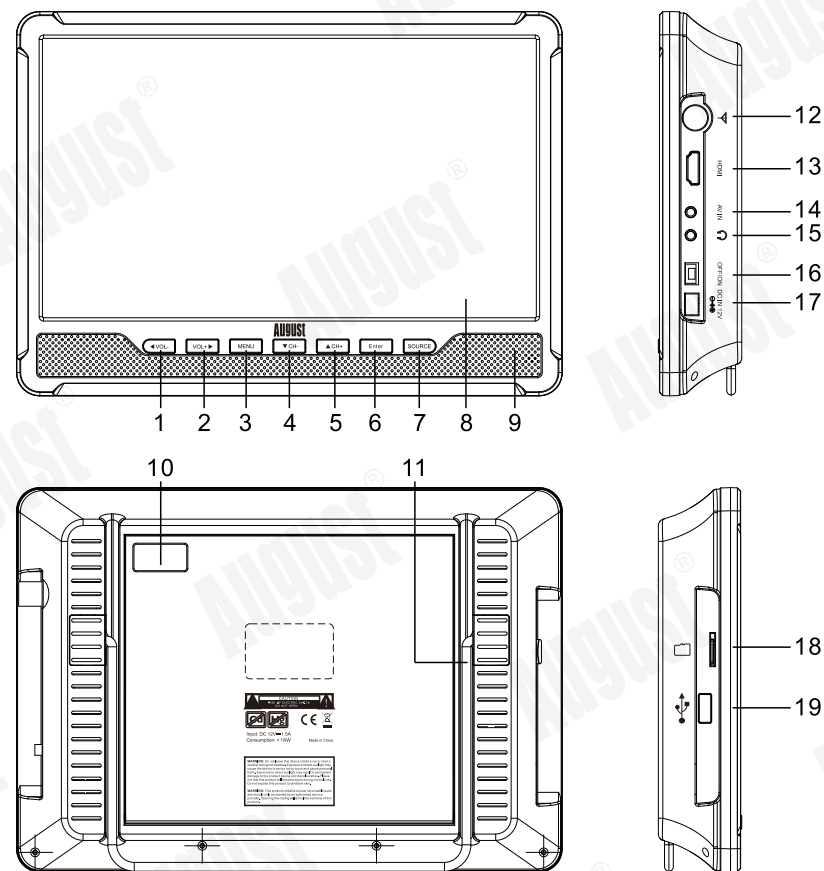


- | | |
|--------------------------|------------------------|
| 1: Volume – | 11: Metal Stand |
| 2: Volume + | 12: Antenna In |
| 3: Menu | 13: HDMI In |
| 4: Channel – | 14: AV In |
| 5: Channel + | 15: AUX Out |
| 6: OK | 16: Power Switch |
| 7: Source (Mode) | 17: DC IN 12V |
| 8: LCD Display | 18: Micro SD Card Slot |
| 9: Power Indicator | 19: USB Port |
| 10: DVD Player Top Cover | |

Note:

The upper LED indicator lights green when the device is powered on. The lower LED indicator lights red when the device is connected to the power adaptor and turns to green when fully charged.

4.4 Remote Control

 4.4.1 Remote Button Functions

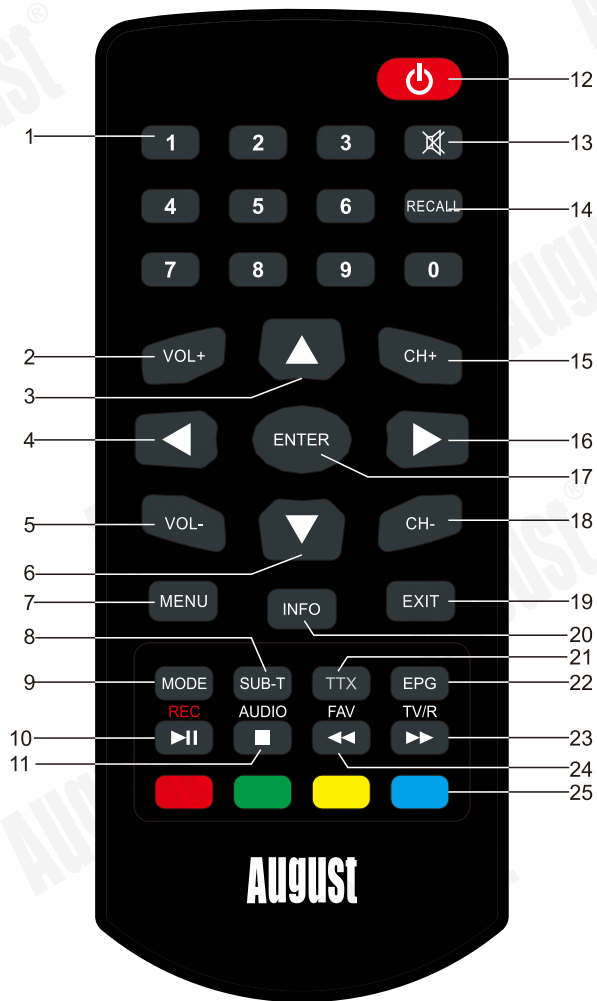

1	0~9	Numbers
2	VOL+	Volume Up
3	▲	Up
4	◀	LEFT
5	VOL-	Volume Down
6	▼	Down
7	MENU	Main Menu
8	SUB-T	Subtitle
9	MODE	Select mode
10	▶ or REC	Play or Pause / Start or stop recording
11	■ or AUDIO	Stop / Select audio channel or audio language
12	⏻	Power ON / OFF
13	⊘	Mute and unmute the sound
14	RECALL	Return the Preview Channel
15	CH+	Channel Up
16	▶	Right
17	ENTER	Confirm Settings
18	CH-	Channel Down
19	EXIT	Exit all settings
20	INFO	Freeview Channel information or Mode information
21	TTX	Freeview Interactive Teletext or Start and Stop MHEG-5
22	EPG	7 Days Electronic Program Guide
23	▶▶ or TV/R	Forward in media player mode / Change between TV and Radio Program
24	◀◀ or FAV	Rewind in media player mode / Favourite channel list or set favourite channels
25	Colour Buttons	Red, Green, Yellow, Blue Buttons

 
4.4.2 Use of the Remote Control

Please remove the PVC packaging before using the remote control for the first time.

1. Do not expose the remote control to direct sunlight or very strong / bright light.
2. Do not drop or step on the remote control or subject it to shocks.
3. Keep the remote control away from extreme heat and humid environments.
4. Keep the remote control away from water.


■ Operating range

1. The IR range of the remote control is 5 meters.
2. The IR sensor on the remote control should be aimed directly at the sensor on the front of the device. It may not be possible to operate the device if there are obstacles between it and the remote control.
3. The receiving angle is $\pm 30^\circ$.

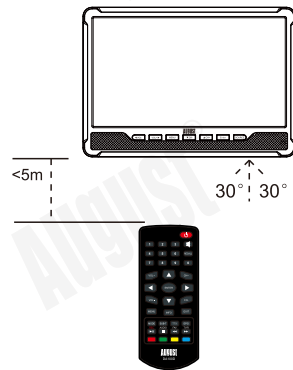

■ Replacing the battery

 If the remote control does not function or if the operating range becomes reduced, replace the old battery with a new one.

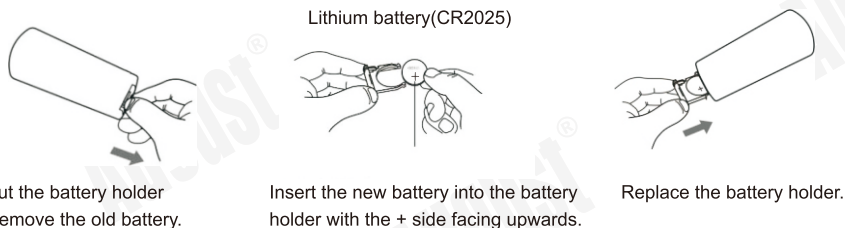


Warning: Please note the remote control contains button or coin cell battery. Hazardous if swallowed.

5. Connection and Setup


5.1 Connecting the power adaptor

 1. Connect the power adaptor to the DC IN 12V socket.
2. Plug the power adaptor into the mains power socket.

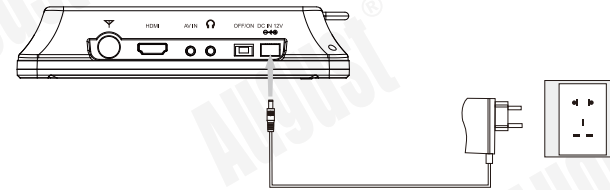

5.2 Connecting headphones

 Connect your headphones to the headphone socket.

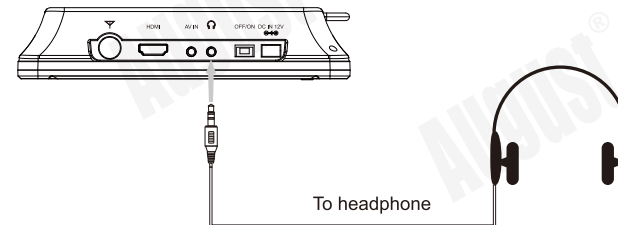

*Note:

 
When headphones are connected to the device, no sound will be played through the speakers.

Headphone and Earphone Safety

1. Listening through headphones or earphones at high volume for prolonged periods can cause damage to your hearing.
2. Please be considerate to others and use closed back headphones or listen at low volume whilst in public.
3. If you are experiencing tinnitus, stop using headphones or listen only at a very low volume.
4. Even at a low volume, prolonged use of headphones or earphones can cause damage to your hearing.


5.3 Connecting to a Source Device via HDMI

Switch off the DA383D and source device before connecting or disconnecting any cables.

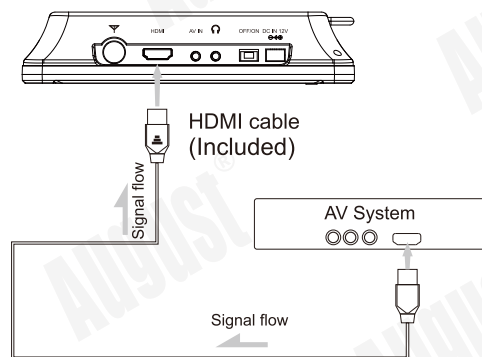

5.4 Connecting to a Source Device via AV

 Switch off the DA383D and source device before connecting or disconnecting any cables.

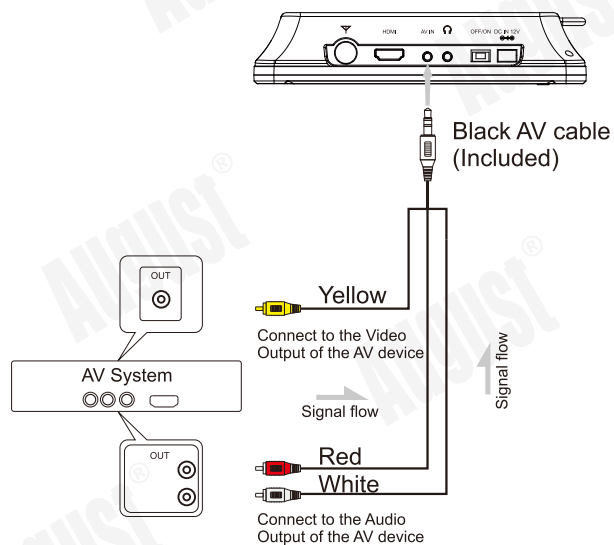

6. Start Up

6.1 Power On/Off

6.1.1 Power On

After connecting the power adapter to the device, switch the power toggle located on the right-hand side of the device to the 'On' position. Alternatively, while in standby mode (if the switch is already set to 'On'), press the power button on the remote control once to turn on the device.

6.1.2 Power Off

Switch the power toggle located on the right-hand side of the device to 'Off', or use the power button on the remote control to power off the device.

6.2 Mode settings

Press <MODE> repeatedly to select between the following modes:

DTV: Freeview TV, press <ENTER> to change

ATV: Analogue TV, press <ENTER> to change

DVD: DVD Player Mode, Press <ENTER> to change.

HDMI: HDMI input, press <ENTER> to change

AV: AV input, press <ENTER> to change
Media Player: Media Player Mode, press <ENTER> to Switch it.

Input Source
DTV
ATV
DVD
HDMI
AV
Media Player
ENTER

 
7. Digital TV

1. Connect an aerial to Antenna In.
2. Press <MODE>, then use <▲> or <▼> to select DTV.
3. Press <ENTER>.


Input Source
DTV
ATV
DVD
HDMI
AV
Media Player
ENTER

7.1 DTV Auto Search:

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Channel'.
3. Use <▲> and <▼> to highlight the 'Country'.
4. Use <◀> and <▶> to change the country.

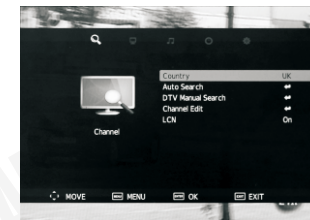

 5. Use <▲> and <▼> to highlight 'Auto Search'.

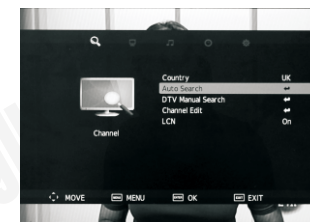

6. Press <ENTER> to confirm.



Auto Search	
DTV	: 4 Program(s)
Radio	: 3 Program(s)
Data	: 0 Program(s)
Searching, Please Waiting...	
14 %...	CH:28

Note: If you want to exit auto search, press <EXIT>, then Use <◀> or <▶> to select YES or NO.




7.2 Blind Scan

  1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Channel'.
3. Use <▲> and <▼> to highlight the 'Blind Scan'.
4. Press <ENTER> to start blind scan.

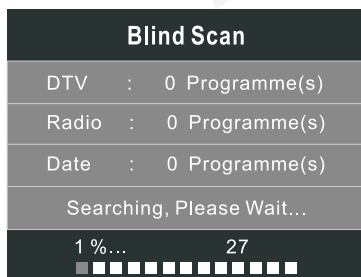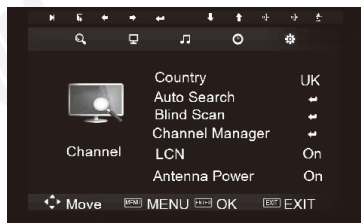

 
5. Press <ENTER> to confirm.

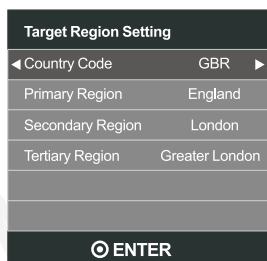

Note: After Blind Scan, the TV set plays new channels automatically.

7.3 DTV Channel Manager

 Channel Manager allows the user to delete, move, favorite and skip channels.

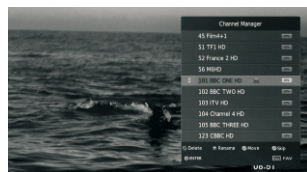

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Channel'.
3. Use <▲> and <▼> to highlight 'Channel Manager'.
4. Press <ENTER> to enter channel edit and use <▲> and <▼> to highlight to channel.
5. Press 'RED' to delete a channel.
6. Press 'YELLOW' and use <▲> and <▼> to move a channel, press <ENTER> to confirm.
7. Press 'BLUE' to skip a channel.



8. Press <◀◀> or <FAV> to add or remove a channel to or from your favorite list.

 


Press <MENU> to exit Channel Manager.

7.4 LCN (Logical Channel Number)


To switch LCN on or off:

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Channel'.
3. Use <▲> and <▼> to highlight the 'LCN'.
4. Press <ENTER> to switch the LCN on or off.

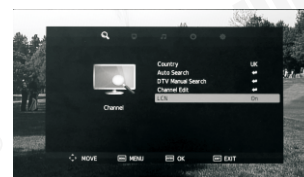

7.5 Channel Information

 Press <INFO> to view channel information:

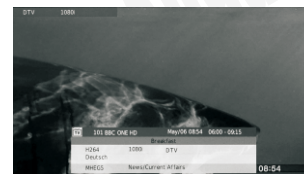

Press <INFO> again to show signal Strength and Quality:



 
7.6 Recall

Press <RECALL> to go back to the last watched channel.

7.7 Subtitles


Press <SUB-T> to set Subtitle for subtitle settings.

1. Use <▲> or <▼> to select a language or switch off subtitles.
2. Press <ENTER> to confirm.

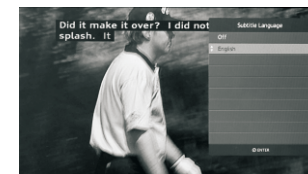

Primary and Secondary Subtitle Languages.

 1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'System'.
3. Use <▲> and <▼> to select 'Subtitle Language', press <ENTER> to enter.
4. Use <◀> and <▶> to change between your Primary and Secondary Subtitle language, use <▲> or <▼> to select one language, then press <MENU> to return.

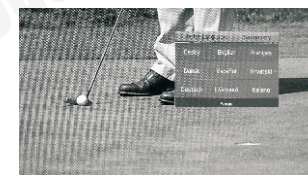

7.8 Teletext

Press <TTX> to access teletext or red button content, if available.



7.9 AUDIO Language

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'System'.
3. Use <▲> and <▼> to select 'Audio Language', press <ENTER> to enter.
4. Use <◀> and <▶> to select the Primary or Secondary audio language.
5. Use the arrow buttons to select a language then press <MENU> to return.



7.10 EPG (Electronic Program Guide)

Press <EPG> to access the EPG.



7.11 TV and Radio Modes

Press <▶▶> or TV/R> to switch between TV and Radio modes.

7.12 Record

Connect a USB storage device with sufficient free space for the intended recording, then press <▶▶II> or REC> to start recording.

Press <■> to stop recording.

Note: Micro SD card cannot be used for recording.

7.13 Schedule Recording

1. Press <EPG> to access the EPG.
2. Use <◀> and <▶> to select the channel you wish to record.
3. Use <▲> and <▼> to select the desired program.
4. Press <RED> to enter the recording settings.
5. Press 'OK' to schedule the recording using the default time settings.

Note: To enter the date and time manually, change the mode from 'Auto' to 'Once', 'Everyday' or 'Weekly' then input the start time and the finish time.

 
7.14 Reminder

1. Press <EPG> to access the EPG.
2. Use <◀> and <▶> to select the desired channel.
3. Use <▲> and <▼> to select the program you wish to be reminded about.
4. Press <Blue> to enter the reminder settings.
5. Press OK to schedule the reminder using the default time settings.

Note: To set the reminder manually, use <▲> and <▼> to select the setting and use <◀> and <▶> to change the time.


8. Analogue TV

1. Connect an aerial to Antenna In.
2. Press <MODE>, then use <▲> or <▼> to select ATV.
3. Press <ENTER>.

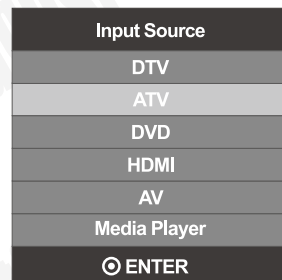


8.1 ATV Auto Search

 1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Channel'.
3. Use <▲> and <▼> to highlight the 'Country'.
4. Use <◀> and <▶> to change the country.
5. Use <▲> and <▼> to highlight 'Auto Search'.

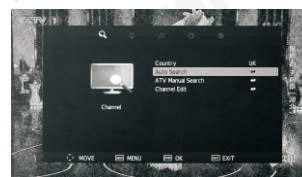

 6. Press <ENTER> to confirm.

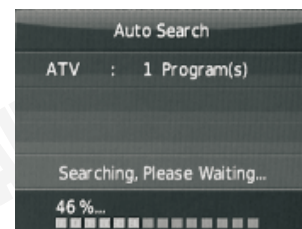

8.2 ATV Manual Search

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Channel'.
3. Use <▲> and <▼> to highlight the 'ATV Manual Search'.

 


4. Press <ENTER> to enter manual search settings.
5. Use <▲> and <▼> to select options.
6. Use <◀> and <▶> to change or start search.



9. DVD Player

1. Press the upper left corner of the DVD player cover to release it, and after inserting the DVD disc, firmly close the cover.
2. Press <MODE>, then use <▲> or <▼> to select DVD.
3. Press <ENTER>.

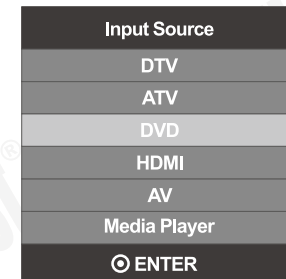


9.1 DVD System Set-up

Press <MENU> button on the remote control, the SET-UP MENU will be displayed.

1. After accessing the SET-UP Menu, press the left or right button to select a sub-menu, then press the ENTER button to confirm your entry and move to the sub-menu.
2. Press the up and down direction buttons to navigate sub-menus and press the ENTER button to confirm your selection.
3. To end the set-up, press the <MENU> button again.
4. Some set-up items are mode-specific. The items in grey are not changeable.
5. The set-up is memorized and kept after power has been turned off.

9.1.1 TV System

 This unit is suitable for PAL or NTSC TV system, you can select **PAL**, **NTSC**, or **AUTO**.

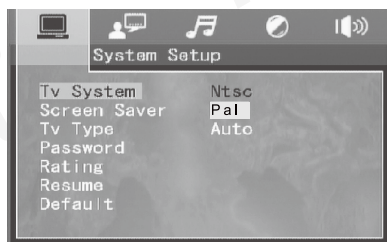

9.1.2 Screen Saver

 
If the screen saver is set "On" and the unit is switched on without a disc playing for several minutes, a moving picture appears on the screen, entering standby mode after 30 minutes. You can press any key on the remote control to exit screen saver.

9.1.3 TV Type

4:3/PS: wide-screen footage shows on the full screen, but with some culling

4:3/LB: wide-screen footage shows with black bars correcting the aspect ratio


16:9: wide-screen footage shows on the full screen with no alterations

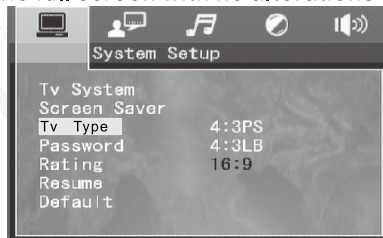

9.1.4 Password Set-up


Changing the password: The initial factory password is 0000.

 You can set your own password. If you forget your own password, you can use 0000 as a general password. The "lock" icon will show if the device is currently locked or unlocked.

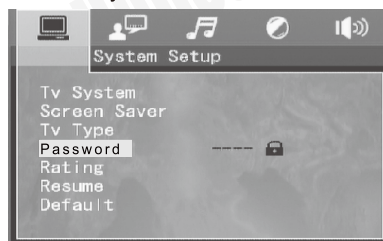

9.1.5 Rating (Parental Control)

 The control level is for parents to control playing content and will detect and limit DVD playback. Any disc with a level higher than the set level cannot be played. This may only be changed when the password icon is unlocked.

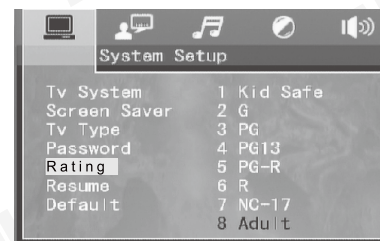


9.1.6 Default Set-up

This is the original factory setting on this unit.

9.1.7 Resume (Last Memory)

 Selecting "ON" for the RESUME option will allow the DVD to keep its place when the device is powered off and back on again, or the TV mode is changed.

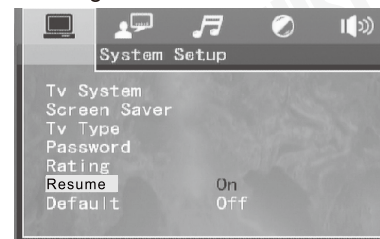

9.1.8 Language Set-up



1. OSD Language

Select on-screen display language (English, French, German, Italian, Spanish or Portuguese).

 
2. Audio, Subtitle and Menu Language

These are the settings for your preference, if a setting is supported

by disc content, it will work, otherwise the disc default set value works. These settings can be changed respectively by pressing key the [AUDIO] and [SUBTITLE] when playing.

9.1.9 Audio Setup


Key: Use Up/Down arrows and OK to adjust the key.

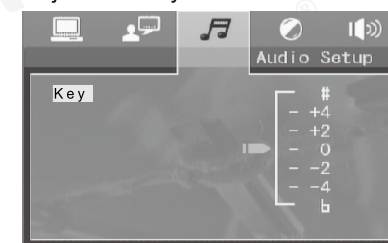

9.1.10 Video Quality Setup

Brightness/ Contrast/Hue/Saturation/ Sharpness Set-up

 You can set the brightness, contrast, hue, saturation and sharpness to your preference.


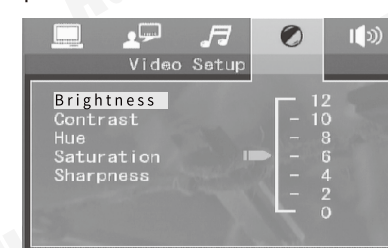


9.1.11 Speaker Setup

Downmix

LT/RT: Mono Audio. Both left and right channels are played from all speakers.

  Stereo: Stereo Audio. Left and Right channels are played from the respective left and right speaker.

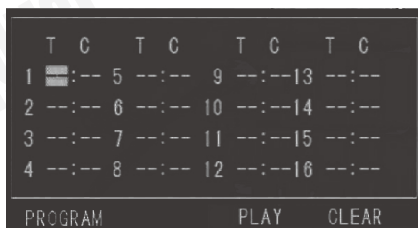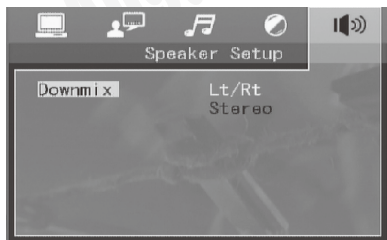

9.2 Disc Information

Press INFO on the remote to view:
 TT – Current Title and Total Titles
 CH – Current Chapter and Total Chapters
 Clock Icon – Current Runtime



Press INFO again to view:
 Circle Icons – Current and Total Languages
 PCM – Number of Audio Channels
 Speech Bubble – Current and Total Subtitle Language
 Video Camera Icon – Current Camera Perspective

9.3 Disc Repeat Settings

Press the GREEN Button to change Repeat Modes:
 Chapter – Repeat the current Chapter
 Title – Finish all Chapters for this Title, then repeat
 Repeat All – Finish all Titles on this Disc, then repeat

You may create playlists to pre-set the order of Chapters or Tracks from both DVD and CD.

9.3.1 DVD Playlist Settings

With the DVD inserted, use the BLUE button to open the playlist menu

Use the [Arrows] to highlight the Title Section (T)

Select a Title with the number pad

Use the [Arrows] to highlight the Chapter Section (C)

Select a Chapter with the number pad

Select "Play" to play the Chapters from that Title in order from slots 1 to 16

Select "Clear" to clear the playlist table

9.3.2 CD Playlist Settings

With the CD inserted, use the BLUE button to open the playlist menu



Use the [Arrows] to highlight the first playlist slot (1)

Select a Track with the number pad

Use the [Arrows] to highlight the second playlist slot (2)

Select a Track with the number pad

Select "Play" to play the Tracks in order from slots 1 to 16

 
Select "Clear" to clear the playlist table

10. Media Player


1. Connect a USB storage device or insert a Micro SD card
2. Press <MODE> and use <▲> and <▼> to select 'Media Player', press <ENTER> to confirm.
3. Use <◀> and <▶> to select a media format.



4. Select USB or Micro SD and press <ENTER>.

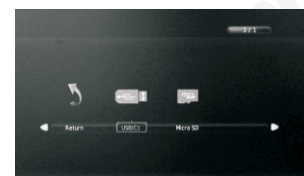

 5. Use the arrow buttons to select a file and press <ENTER> to confirm.

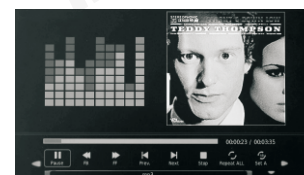

11. Display Settings

You can adjust picture via this settings in any mode except DVD Player mode (in DVD mode please refer to section 9.1 DVD System Set-up).

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Display'.
3. Use <▲> and <▼> to select options.
4. Use <◀> and <▶> to change the settings.
5. Press <MENU> to return.



12. Audio Settings

You can adjust audio via this settings in any mode except DVD Player mode (in DVD mode please refer to section 9.1 DVD System Set-up).

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Audio'.
3. Use <▲> and <▼> to select options.
4. Use <◀> and <▶> to change the settings.
5. Press <MENU> to return.

 
 
 


13. Time Settings

You can adjust time via this settings in any mode except DVD Player mode.

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Time'.
3. Use <▲> and <▼> to select options.
4. Use <◀> and <▶> to change the settings.
5. Press <MENU> to return.

NOTE: In DTV the time is set automatically.

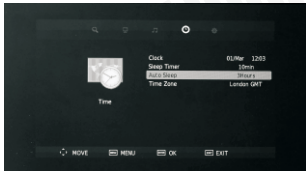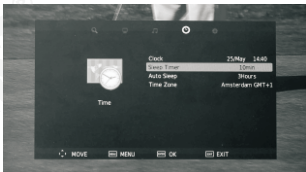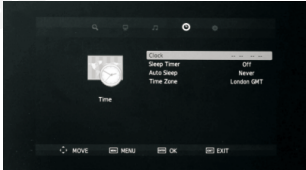

14. TV System Settings

You can adjust TV system via this settings in any mode except DVD Player mode (in DVD mode please refer to section **9.1 DVD System Set-up**).

1. Press <MENU> to enter main menu.
2. Use <◀> and <▶> to select 'System'.
3. Use <▲> and <▼> to select options.
4. Press <ENTER> or use <◀> and <▶> to change.



NOTE: Audio and subtitle language settings are only available in DTV mode.



14.1 Factory Reset

To reset to factory settings select factory reset from the system menu then press <◀> to confirm or <▶> to cancel.



15. Integrated Rechargeable Battery

Fully charged, the integrated 3000mAh battery pack supports playback for up to 2.5 - 3 hours. When connected to a mains outlet using the supplied power cable, recharging the device to full can take up to 4 hours.

Caution:

- Fully charge the device before the first use
- Integrated Lithium Battery should not be removed.
- Dispose of any electronic or battery waste with WEEE and other government regulations.

16. Specifications

LCD Display	Screen size: 10.1Inch Resolution: 1024x600pixels Aspect Ratio: 16:9 Brightness: 300cd/m2 Contrast: 800:1
Digital TV Frequencies	VHF: 177.5~226.5MHz UHF: 474~858MHz
Decode Standard	DVB-T,DVB-T2
Video Decoding	H.265, H.264, MPEG4, MPEG2
DVB-T2 Band Width	6, 7, 8 MHz
Analogue TV Format	PAL-I , DK, BG SECAM-L
Analogue TV Frequency	VHF: 48.25~160.25MHz 168.25~456.25MHz UHF: 464.25~863.25MHz
AV In	System: PAL, NTSC, SECAM CVBS Input: 1.0Vp-p/75ohm Audio Input: 1Vrms~2Vrms
HDMI In	HDMI 1.4a(Type A Socket)
Antenna Input	Impedance: 75ohm
Micro SD Reader	Supports Micro SD cards of up to 32GB
USB Port	USB 2.0 host (5V,1000mA)
Built-in Speaker	2 x 2W, 8 ohm
Power Adaptor	AC 100~240V 50/60Hz DC 12V/1.5A
Battery	Built-in 7.4V/3000mAh Rechargeable Lithium Battery Charging Time: About 4 Hours
Power Consumption	< 18W
Dimensions	248x174x37.5 mm
Net Weight	773g

DVD Format

DVD Solution	Sunplus SPHE8202R-D
DVD Drive	Laser Assemblies: Sanyo SF-HD850+CYMotor
DVD Disc Format	Normal DVD,VCD,EVD,CD,MP3(Not Support DTS,Blue-DVD)

Media Formats

Movie	Video Type	H.265, MPEG1、2、4, DivX TS, MKV, TP, AVI, M2TS, VOB, DAT, MPG, MPEG, MOV
	Audio Type	MP3, WAV, MPEG-1 / 2 layer I / II, M4P, HE-AAC, COOK, Dolby
	Audio bit Ratio	32Kbps ~ 48Kbps
	Resolution	Max.1920x1080
	Frame Rate	Max. 30fps/25fps(PAL)
Music player	File Type	MPEG 1 / 2 layer 1、2、3, AC3,WAV,OGG
	Frame Rate	32Kbps~48Kbps
Photo viewer	File Type	JPEG/BMP/PNG
	Resolution	Up to 15360x8640

17. Troubleshooting

Problems listed below do not necessarily signify a fault with the unit. Please check this list before requesting repairs.

Problems	Possible Causes and Solutions
No picture or sound	Check the connection with the AC adaptor or car adaptor. Use of an unauthorized power supply. Press POWER on the remote to turn on the device, or press and hold POWER on the device for 1.5 seconds to turn it on.
No image	Check the channel selection. Scan for channels again. Always rescan for channels in new locations.
No sound	Check the sound volume. If you are using earphones, test them on another item. Check the earphone cable is plugged into the earphone socket on the device. Incorrect TV Format setting in Analogue TV mode. Set the device to factory default and then try again.
Picture freezing, and/or sound distorting	Signal may be too weak, please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
No signal	Please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
Dark Picture	Please adjust Brightness and/or Contrast settings.
Snowstorm	Motors/Trains/High Voltage Lines and Neon Lights may affect the signal.
Achromatic/Flashing/ No Colour	Please adjust the Colour Settings. Incorrect TV Format setting in Analogue TV mode.

Warning

This user manual is intended for reference purposes only. No further notice will be given regarding modification of any information contained therein. Due to continuing improvements, the features and design are subject to change without notice.

Warning

No user serviceable components are fitted inside this TV. Do not attempt any repairs, as this will invalidate the warranty. Any repairs must be carried out by either the manufacturer or their nominated service centre. Parts inside this set are subject to high voltage.

18. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased.
- The product must be correctly installed and operated in accordance to the instructions given in this user manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main units, and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufactures disclaim any liability for incidental or consequential damages.
- Please consult our customer adviser before returning any product; we are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Please note:

1. A LCD display panel comprises a very large number of pixels and each pixel contains three sub-pixels - red, green and blue. Due to the complex manufacturing process, occasional pixel anomalies may occur. Pixel anomalies cannot be fixed or repaired and can happen at any stage in the LCD's life. August products should not be deemed as faulty if there are no more than three bright and dark pixels respectively.

2. Portable TV antennas included in the box are for people to watch Freeview TV in areas where the signal is very strong and there may be difficulties in receiving signal with the included portable antennas in some regions at present. This is due to the fact that Freeview is yet to operate in full power in the UK. August TVs should not be deemed as faulty if it can receive Freeview by connecting to a proper digital rooftop aerial.

Customer Service:

Telephone: +44 (0) 845 250 0586 (Carrier Rates Apply)

Email: service@augustint.com



This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The Declaration of conformity may be consulted online at <http://www.augustint.com/en/declaration>.