

V1.0
09-21



1.5 LITRE JUG KETTLES

INSTRUCTION MANUAL

SK19020LIVBN & SK19020LIVRN
www.swan-brand.co.uk/support

ESTABLISHED
1892



IMPORTANT INFORMATION

Please retain these instructions for future use.

When using this kettle, basic safety precautions should always be followed including the following:

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and / or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.



IMPORTANT INFORMATION

- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.



IMPORTANT INFORMATION

- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system.
- **DO NOT OVER FILL PAST THE MAX LEVEL.**
- This appliance is intended to be used in households and similar applications such as: staff kitchen areas, in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.



TECHNICAL DATA

Description:	1.5 Litre Jug Kettle
Model:	SK19020LIVBN / SK19020LIVRN
Input Voltage:	220-240V
Frequency:	50/60Hz
Power consumption:	3000 Watts



CAUTION!

Do not immerse in water

DOCUMENTATION

We at Swan Products Ltd declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU The EMC Directive
(The Electromagnetic Compatibility Directive)

2014/35/EU. The LVD Directive *(Low Voltage Directive)*

2011-65-EU. The RoHS directive
(Restriction of Hazardous Substances Directive)

EC 1935/2004 Food Contact

2009/125/EC Eco Design Regulation



BEFORE FIRST USE

- Any traces of water remaining inside the kettle are from routine factory tests and is perfectly normal.
- Fill the kettle with water via the spout or you can also fill the kettle by opening the lid. Ensure the lid is firmly closed after filling.
- Check that the water level is between the MIN and MAX lines on the water gauge.
- PLEASE DO NOT OVERFILL THE KETTLE PAST THE MAX LEVEL. DOING SO POSES A SCALDING RISK.
- Place the kettle on its base, connect the plug to the mains supply and press the power switch down.
- The kettle will switch itself off once the water has boiled.
- If this is the first time you have used the kettle, discard the water from the first boiling.

Unusual smell or taste in the water

If you have discarded the first boil and are finding an unpleasant smell or taste, this can happen from the manufacturing processes and can be remedied easily by following the instructions below:

Add the juice of one lemon to the kettle, or slice a lemon and place in the kettle, fill to max level with cold water and boil. Leave to stand for at least 2 hours. Empty the kettle, refill, re-boil and discard.



CLEANING & MAINTENANCE

DAMAGE TO THIS PRODUCT CAUSED BY EXCESSIVE LIME SCALE BUILD UP IS NOT COVERED BY YOUR WARRANTY.

- If you live in a hard water area, it will be necessary to de-scale the kettle from time to time. Most supermarkets sell de-scaling tablets, powders or liquids.
- These are inexpensive, easy to use and perfect for ensuring your kettle provides many years of faithful service.
- An excessive build up of lime scale will damage your kettle and increase the boiling time/electricity consumption!
- For cleaning external surfaces, a soft cloth moistened with a mild detergent solution is all that is required.
- DO NOT USE ABRASIVE OR STRONG CHEMICAL CLEANERS.
- DO NOT IMMERSE ANY PART OF THE PRODUCT IN WATER.
- ALWAYS ENSURE THE PRODUCT IS UNPLUGGED FROM THE MAINS SUPPLY AND COMPLETELY COOL BEFORE CLEANING.



WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.



The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.

Helpline: **0333 220 6050**

Find advice online: **www.swan-brand.co.uk/support**



BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE - NEUTRAL

BROWN - LIVE

GREEN/YELLOW - EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked with the letter E (or earth symbol) and is coloured GREEN or GREEN/YELLOW.

WARNING: THIS APPLIANCE MUST BE EARTHED

DISPOSAL OF UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items. Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.





PART OF THE L.F.C. RANGE

AVAILABLE IN RED OR BLACK

LIVERPOOLFC.COM/STORE

© OFFICIAL LFC PRODUCT

Made In China.

Distributed by: Swan Products Ltd, PO Box 3117, Stoke-on-Trent ST4 9GD