

Triple Trickle Honey Pots Feature




1. Pull out the flexible hose through the back of the unit
2. Connect the hose to the pump outlet as shown in image below:



3. Close the back cover to the water feature
4. Fill with water from the bottom jar and position pump in place
5. Connect to Power Supply

If you find that the water is splashing out of the reservoir, or the flow is too fast, you can adjust the flow on the pump as shown in the image below:

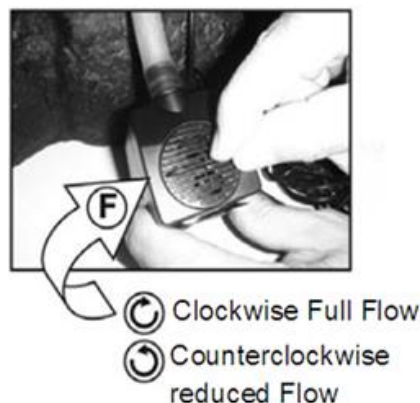

Do not allow feature to run dry as this will cause the pump to burn out and invalidate your warranty.