

5-PIECE PAN SET

Product Instructions

Product No. 1013228 / 1500088

vonshef

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME



Need further help?
support@vonhaus.com

See our full range at
www.vonhaus.com

Information

Important Safety Notice

This product is **not suitable for use by children** or by individuals with **physical, sensory, or mental impairments** that may limit their ability to operate the equipment safely, **unless** they have been given supervision or instruction concerning the safe use of the product by a person responsible for their safety.

Improper use may result in serious injury. Always ensure the operator is capable of understanding and following all safety instructions provided in this manual.

Before First Use

Remove all packaging, stickers and labels. Wash thoroughly with warm, soapy water using a soft cloth, then dry completely with a clean towel - never air-dry as this can tarnish the surface. Condition the coating by rubbing a thin film of vegetable or corn oil over the cooking surface with a paper towel, then rinse with hot water and dry thoroughly. Your cookware is now ready to use.

General Safety

This cookware is not suitable for use in microwave ovens or freezers.

This cookware is not suitable for storing food. Do not fill the cookware to more than 2/3 the capacity (where applicable).

To protect the cookware, use only suitable heat-resistant silicone or wooden tools. Do not use any metal tools, or cut food directly in your cookware.

Use medium and low heat settings on all heat sources and allow your cookware to heat gradually and evenly. A medium to high heat can be used initially, but this should be lowered

once the cookware is hot and the food has been added.

The cookware should never be used on a maximum, boost or high heat setting for pre-heating or cooking for any extended period of time.

Take care not to allow the cookware to boil dry. Should this happen, stop all heat and ventilate the area immediately. Only attempt to move the cookware when cool and safe to do so; when all parts are cool and when all smoke has cleared.

On any hob (particularly glass top or induction), always lift the cookware on and off. Never slide the cookware as this may cause damage to the base of the cookware as well as to the surface of your hob.

Always use heat-resistant gloves when handling hot cookware. Don't toss cookware or twist handles as this may cause damage or injury.

Avoid sharp impacts and extreme temperature changes. Don't store food in cookware as ingredients can damage the surface.

Cleaning & Maintenance

Allow your cookware to cool fully before cleaning. Do not plunge into, or fill with, cold water when hot.

Clean your cookware thoroughly after every use.

Wash your cookware in clean, hot water with a dish washing detergent and a soft cloth/soft brush or sponge.

Do not use metal, harsh abrasive or very stiff pads/washing brushes. Do not use abrasive cleaning agents or bleaches.

This product is dishwasher safe, but to prolong the product life, it is recommended to hand wash.

Usage & Safety



Not suitable for freezer use



Materials approved for food use



Not suitable for microwave use



Not suitable for oven use



Dishwasher safe


Refer to the symbols displayed below to ensure suitability for your hob.

IMPORTANT Always dry the base of your cookware before cooking.

IMPORTANT Always match the base to the hob or heat zone. Gas flames must always be confined to the base area and never allowed to extend up and around the sides of your Cookware. Take care to centre your cookware to get the most from your hob.



Electric Hob

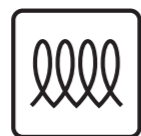

Induction



Gas



Ceramic



Halogen

Information

Customer Service

If you are having difficulty using this product and require support, please contact support@vonhaus.com

Warranty

To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returns

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

Copyright

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank You

Thank you for purchasing your product/appliance.

Should you require assistance with your purchase, please contact us at support@vonhaus.com

VonHaus is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd.
Unit 30, Stakehill Industrial Estate
Middleton, Manchester, M24 2RW

EU Authorised Representative

Authorised Representative Service
77 Camden Street Lower
Dublin, D02 XE80
Ireland

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME

