

2500452



Please read all instructions carefully before use and retain for future reference.



Do not use outdoors.



ATTENTION This appliance has a thermal cut out switch. The thermal cut out will activate and shut down the appliance should the appliance overheat. Unplug from the mains and or battery and allow to cool for 60 minutes before re-use.



This product is only suitable for well insulated spaces or occasional use.



INTENDED USE.

This appliance is designed for light domestic use only. It is not intended for heavy duty, commercial or industrial use, and is not suitable for use outdoors.

WARNING! Do not use this appliance to dry clothes. This appliance is not intended for use by children or infirm persons without supervision. Extreme caution is necessary when used near children, and whenever the appliance is left operating unattended. Take adequate precautions if such persons are to be left alone in the vicinity of the appliance.

Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.



CAUTION Do not immerse in water.

PRIOR TO USE.

Remove the packaging and make sure that the appliance is intact. If in doubt, do not use the appliance and contact DOMU Brands Customer Services.

Do not leave packaging materials such as bags and staples within reach of children.

Dispose of packaging carefully and with consideration for the environment.

It is recommended that you retain the appliance box for seasonal storage.

For your convenience, record the date you received the appliance on the 'Warranty' page of these instructions and attach your proof of purchase. Retain this information in the event that a warranty service is required.



CAUTION hot surfaces



Do not cover.

SAFETY INFORMATION.

When using any electrically-powered appliance, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, or injury to persons or property:

CABLES AND PLUGS.

Check to ensure your electricity supply matches

that shown on the rating label of the appliance . The appliance must only be used as rated.
Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for service and repair.
Do not connect the appliance to the mains voltage until completely assembled and adjusted.
Unroll the cord before operating. Operating with a coiled cord may cause overheating and risk of fire.
The use of an extension cord with this appliance is not recommended.
Do not allow the cord to come into contact with the appliance surface during operation.
Do not run the cord under carpeting, mats or rugs etc. Arrange the cord away from traffic areas so that it will not be tripped over.
Do not twist, kink or wrap the cord around the appliance as this may cause the insulation to weaken and split.
Always unplug the appliance when not in use. Do not leave unattended.
Always switch off the appliance before unplugging from the power socket.
Always hold the plug when removing it from the wall, do not pull the cord.
CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off.

RISK OF PERSONAL INJURY.

Use this appliance only as described in this manual. Do not use this appliance with any type of external timer.
Always operate upright, on a flat surface only.
This appliance heats up when in use. To avoid burns, do not touch the front of the appliance or any of the grilles or vents.

WARNING! DO NOT COVER.

Do not cover or restrict airflow to the inlet or outlet grilles in any manner as the appliance may overheat and become a fire risk.
To avoid overheating, keep airflow grilles clear of dust and hair build up, especially if you have indoor pets.
Do not cover grilles or block entry or exits of airflow by placing the appliance against any surface.
Keep all objects at least 1 metre from the front, side and rear of the appliance .
Do not insert or allow foreign objects or metal utensils into any ventilation or exhaust openings as this may cause an electric shock, fire or damage to the appliance.
Do not operate the appliance with wet hands.
Do not immerse in liquid or use the appliance near water as this could create an electrical shock hazard.
If the appliance accidentally comes into contact with water, switch off the power supply and do not touch the appliance.
Never attempt to remove the cover of the appliance . Repairs requiring opening the appliance or access to internal parts must be carried out by a qualified electrician or repair service professional. There are no user-serviceable parts of this appliance (excluding the plug fuse).
Before moving the appliance , switch it off by unplugging it from the wall and allowing it to cool.


POSITIONING YOUR HEATER.

This appliance is designed to be placed on a hard, level surface. When positioning, please keep the following points in mind:
Do not locate in areas of high foot traffic. To avoid accidents, always ensure that the power cord and appliance are in full view.
If you are placing the appliance in an alcove, make sure that there is at least 150mm of space on all sides to ensure good air circulation.
Do not fit the appliance in confined spaces such as

cupboards or wardrobes.
Keep hearth rugs and other soft furnishings away from the front of the appliance as this could obstruct the free flow of hot air to the fan and damage both soft furnishings and the appliance .
Do not operate the appliance in areas where gasoline, paint or other flammable liquids are used or stored.
Do not operate the appliance in bathrooms, laundry areas or similar moist indoor locations. Do not use in the immediate surroundings of a bath, shower or swimming pool.
The appliance must not be located immediately below or in front of a socket outlet.
The socket must always be accessible in order to disconnect the appliance from the electrical supply for maintenance.

Rated Voltage 220V - 240V ~
Rated Power 1600W - 1900W
Rated Frequency 50Hz

COMPONENTS

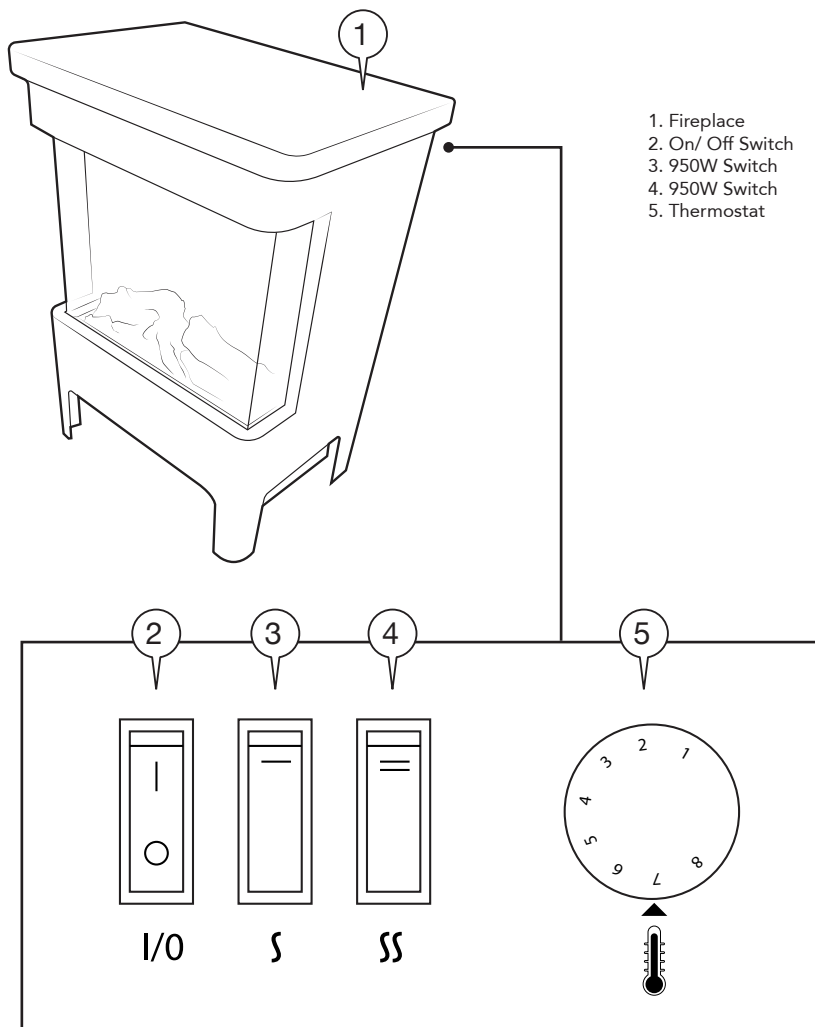


OPERATION

Thermostat Dial:
Turn the dial till you hear a click,
this will be the current room
temperature.

Turn the dial past and when the
room has reached its desired
temperature turn the dial back
until it clicks, the heater will now
maintain this heat.

On/Off Switch
Flame Effect Switch

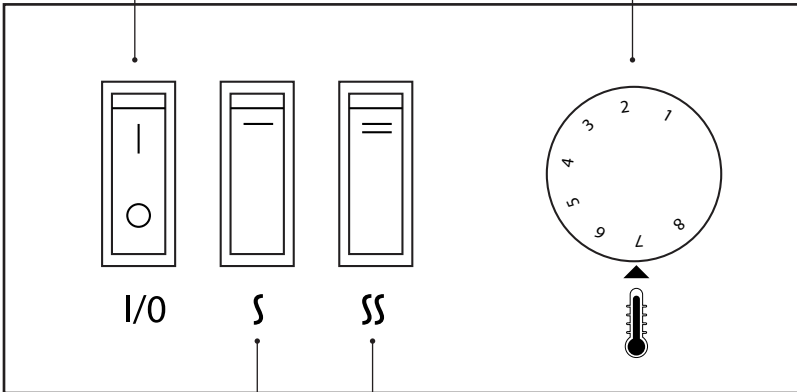

I Switch: Press this to
activate low heating
(950W).

II Switch: Press this to activate High heating (1900W)
when pressed with the other switch.

INFORMATION REQUIREMENTS FOR ELECTRIC LOCAL SPACE HEATER

Model	2500452		
Item	Symbol	Value	Unit
Heat Output			
Nominal Heat Output	P_{nom}	1.8	kW
Minimum Heat Output (indicative)	P_{min}	0	kW
Maximum Continuous Heat Output	P_{max}	1.8	kW
Auxiliary electricity consumption			
At nominal heat output	EL_{max}	N/A	kW
At minimum heat output	EL_{min}	N/A	kW
In standby mode	EL_{sB}	N/A	kW
Type of heat input for Electrical Storage Heaters only (select one)			
Manual heat charge control with integrated thermostat.			N/A
Manual heat charge control with room and/or outdoor temperature feedback.			N/A
Electronic heat charge control with room and/or outdoor temperature feedback			N/A
Fan assisted heat output			N/A
Type of heat output/room temperature control (select one)			
Single stage heat output and no room temperature control			no
Two or more manual stages, no room temperature control			no
With mechanical thermostat room temperature control			yes
With electronic room temperature control			no
Electronic room temperature control plus day timer			no
Electronic room temperature control plus week timer			no
Other control options (multiple selections possible)			
room temperature control with presence detection			no
room temperature control with open window detection			no
with distance control option			no
with adaptive start control			no
with working time limitation			no
with black bulb sensor			no
Contact Details	DOMU Brands Ltd, 4th & 5th Floor, The Tower, Deva City Office Park, Salford, M3 7BF		

EN

DISPOSAL INFORMATION Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE If you are having difficulty using this product and require support, please contact support@domu.co.uk

WARRANTY To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty.

Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty. Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT All material in this instruction manual are copyrighted by DOMU Brands. Any unauthorised use may violate worldwide copyright, trademark, and other laws.

THANK YOU

Thank you for purchasing your product/appliance. Should you require further assistance with your purchase, you can contact us at support@domu.co.uk

VonHaus is a registered trademark of DOMU Brands Ltd.
Made in China for DOMU Brands. Unit 30, Stakehill Industrial Estate, Middleton, Manchester M24 2RW.
Authorised Representative: Authorised Representative Service, 77 Camden Street Lower, Dublin, D02 XE80, Ireland.