

EMtronics

EMRCDSTCR1-5 1.5L Rice Cooker



User Manual

Contents

Important.....	3
General Description.....	5
Accessories.....	5
Before First Use.....	5
Preparing for Use.....	6
Using the Appliance.....	7
Using the Steamer Pot.....	8
Storage.....	8
Plug Safety.....	9
Troubleshooting.....	10
Technical Data.....	10
Disposal.....	11
Help Line.....	11

Important

Important Safeguards

 
1. When using electrical appliances, basic safety precautions should always be followed, including the following:
2. Read all instructions.
3. To protect against electrical shock, do not immerse cord, plug or base unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the Service Center for examination, repair or adjustment.
6. Non-recommended accessory may cause hazard.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in heated oven.
10. Extreme caution must be used when moving an appliance containing hot food, water, or other hot liquids.
11. Do not use appliance for other than intended use.
12. Lift and open cover carefully to avoid scalding. Do not allow water to drip into Rice Cooker, or wash Rice Cooker with water.
13. To reduce the electrical shock, cook only in removable container. Do not pour liquid into outer pan.
14. CAUTION: This appliance generates heat and escapes steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other damage to persons or property.
15. The cord to this appliance should be plugged into a 220-240V~50/60Hz electrical outlet only.
16. When using this appliance, provide adequate air space

above and on all sides for air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.

17. Never use the cooking vessel to store leftover cooked rice. Always transfer the leftover rice to a proper storage container and keep it in the refrigerator until ready for use.
18. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
19. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
20. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacture or its service agent.
21. Children should be supervised to ensure that they do not play with the appliance.
22. Never attempt repairs yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee, take the appliance to a qualified repair agent.
23. This appliance is intended to be used in household and similar applications such as Staff kitchen areas in shops, offices, and other working environments; farmhouses; by clients in hotels, and other residential environments; bed and breakfast type environments.

DO NOT IMMERSER THE HEATING BODY OF THE RICE COOKER IN WATER OR ANY OTHER LIQUID!

General Description

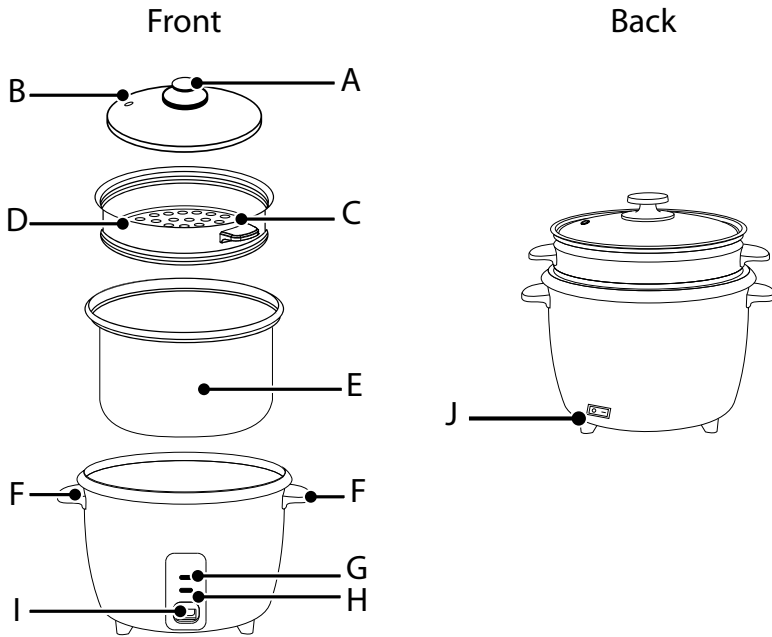

- A. Lid Handle
- B. Hot Steam Vent
- C. Steamer Pot Handle
- D. Steamer Pot
- E. Removable Rice Bowl

- F. Handle
- G. Keep Warm Indicator Light
- H. Cooking Indicator Light
- I. Cook / Keep Warm Switch
- J. Power Switch

Accessories

- 1 x Measuring Cup
- 1 x Spoon

- 1 x Steamer Pot

Before First Use

1. Remove all packing material.
2. Remove any stickers or labels from the appliance – other than the rating label.
3. Thoroughly clean the outside layer of the appliance with a lightly dampened cloth. To clean the 'Removable Rice Bowl' and 'Steamer Pot', please use warm water and washing-up liquid or washing soap with a non-abrasive sponge.
Note: You can also clean the removable parts of the Rice Cooker in a dishwasher.
4. Wipe the outside of the appliance with a moist cloth.

Preparing for Use

Please read these instructions carefully before using the appliance.

CAUTIONS TO NOTE BEFORE USING RICE COOKER:

 
Do not place or rest anything on top of the appliance or cover the air vent. This disrupts the airflow and will affect the overall cooking result.

Keep all body parts away from the air vent to avoid being burnt by the emitted hot steam.

1. Place the appliance on a heat resistant stable, horizontal and level surface.
2. Only use this product with the correct AC voltage outlet. (For correct rated voltage, see box and label featured at the bottom of rice cooker.)
3. Press the power switch to the setting "O (Power Off)" before plugging the appliance into the mains. Do not turn on the appliance if the rice bowl is not in the cooker, or when cooker is not being used. **DISCLAIMER:** The "KEEP WARM" function operates whenever the cord is plugged in and the power switch is set to "I (Power On)".
4. Place the rice bowl inside the cooker before operating the appliance. Turn the rice bowl gently to right and left to ensure it is securely positioned inside the cooker.
5. If the switch button is difficult to press to your desired setting, do not try to force the switch to move. The switch usually becomes stiff when the rice bowl is not securely positioned inside the Rice Cooker.
6. Place the lid, making sure it is securely fitted to your rice bowl whilst in operation; keep the lid in place after serving to prevent your rice from drying out or discolouring.
7. Keep the bottom of the rice bowl and the surface of the heater plate free of loose grains of rice, residue and other potential items as this will encourage operating malfunctions and decrease the appliances longevity.

CAUTION

BEFORE USING THE APPLIANCE, CLEAN THE BOTTOM OF THE RICE BOWL AND THE SURFACE OF THE HEATER PLATE, THEN TURN THE RICE BOWL CLOCKWISE AND ANTI-CLOCKWISE SO THAT IT SITS PROPERLY ONTO THE HEATER PLATE INSIDE THE RICE COOKER. OTHERWISE, THE RICE COOKER WILL NOT FUNCTION CORRECTLY AND POTENTIALLY BECOME DAMAGED.

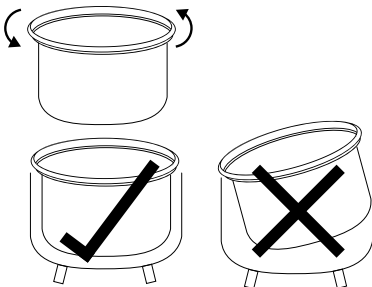

Using the Appliance

Note: A scale for water level, based on the number of cups of rice used, is provided on the side of the rice bowl for time saving when adding water direct from the tap or large jug. Only use the supplied cup for the rice measurement, although for 2 cups and below it is recommended to use the cup for the water as better accuracy will be obtained.

1. Using the measuring cup provided in the box, measure and add rice to the rice bowl.
2. Add the correct amount of water to rice ratio (a ratio guide has been provided below). You are able to use either the supplied cup or you can fill the bowl by using the scale marked inside the rice bowl. The amount of water can be varied depending on the result required.

Cups of Raw Rice	Water
2 cups	2 – 2 1/2 cups
4 cups	4 – 5 cups
6 cups	6 – 7 1/2 cups
8 cup	8 – 10 cups

3. Place the rice bowl into the cooker. Turn the rice bowl gently to the right and left to ensure it is securely positioned inside the cooker, then fit the lid securely.
4. Plug in the power cord. Please do not plug in the appliance until you are ready to cook, otherwise the rice may be spoiled. **DISCLAIMER:** If the rice bowl is not in the cooker, the cooking process will not begin.
5. Push the power switch to the "I (Power On)" position. Then press the "COOK" switch on the front of the cooker. The power indicator light will illuminate when the cooking process has started.
6. When timed cooking process has completed, the switch will automatically pop up to the "O (Power Off)" position. After the switch pops up, leave the lid on for at least 15 minutes to steam rice further.
The "KEEP WARM" function will operate whenever the cord is plugged in and the power switch is positioned to "I (Power On)". Never remove the lid during the cooking process and do not stir the rice/food item whilst the cooking process is ongoing, or in the process of steaming otherwise the rice/food item may be spoiled.
7. Push the power switch to the "O (Power Off)" position and unplug after each use. When removing the plug from the socket, please grip the plug instead of the cord to prevent damages and hazards.
8. To reduce the risk of scalding and burns, do not touch the ventilating holes.

During heat up and cool down the metal expansion ring round the glass lid can make a 'pop' sound, this is perfectly normal

Using the Steamer Pot

The Rice Cooker can be used as a steamer as well, by using the provided 'Steamer Pot'.

1. Add water to the rice bowl. For steaming purposes, fill up about 1/3 of the rice bowl with water.
2. Fit the Steamer Pot on top of the rice bowl securely.
3. Plug in the power cord.
4. Push the power switch to the "I (Power On)" position.
Then press the "COOK" switch on the front of the cooker. The power indicator light will illuminate when the cooking process has started.
5. When the water is boiling, carefully place the food you want to steam into the Steaming Pot and place the lid securely onto the Steaming Pot.
Note: Please do not overload the steamer pot; leave some space between the food and the lid for steam ventilation and air circulation.
6. Set your own external timer and wait for the timer to finish before pushing the power switch to the "O (Power Off)" position, then power off at the mains and unplug after use.

Caution:

Make sure to check the water level regularly to prevent the rice bowl drying out during the steaming process.

Storage

1. Unplug the appliance and let it cool down.
2. Make sure all parts of the appliance are clean and dry. Then safely store away.

Plug Safety

For your own safety read the following instructions carefully before attempting to connect this unit to the mains.

You should only plug the appliance into a 220-240V AC 50/60Hz power supply. Connecting it to other power sources may damage the appliance.

PLUG REPLACEMENT (UK and Ireland only)

Should you need to replace the plug please observe the following

Never connect live or neutral wires to the earth terminal of the plug.

Only fit an approved 13 Amp BS1363/A plug and the correct rated fuse. If in doubt, consult a qualified electrician.

WARNING:

 
The wire in the mains lead are coloured as follows:

Blue-Neutral


Brown-Live

Yellow&Green-Earth

As the colours of the wires in the mains lead this appliance may not correspond with the coloured markings identifying the terminals in your plug, processed as follow:

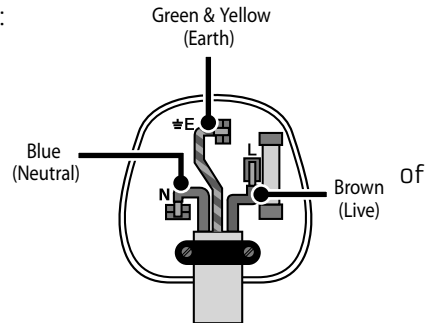

The wire which is coloured Blue must be connected to the terminal, which is marked with N or coloured Blue.

The wire which is coloured Brown must be connected to the terminal which is marked L or coloured Brown. The wire which is coloured Yellow & Green must be connected to the terminal indicated E or Symbol 

CAUTION

To prevent electric shock disconnect from the mains before removing cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

SAFETY PRECAUTION

Do not allow this unit to be exposed to rain or moisture.

Mains Supply: 220-240Volts 50/60Hz, AC only

Troubleshooting

Problem	Possible cause	Solution
The rice cooker does not work	The appliance is not plugged into the mains.	Place the mains plug into an earthed wall socket which matches the necessary voltage.
The Rice is too dry	The amount of water is not enough	Cook the rice using more water.
The Rice is too wet	The amount of water is too much	Cook the rice using less water.

Technical Data

Voltage	:	AC220-240V 50/60Hz
Power Consumption	:	500 W
Protection class	:	1 (This appliance must be earthed)
Model	:	EMRCDSTCR1-5

Disposal

- Disposal of this appliance: The appliance is designed and manufactured with high quality materials and components, which can be recycled and reused.
- Please make yourself aware of the local collection/disposal system for electrical and electronic products.
- Please act according to your local rules and do not dispose this appliance with your normal household waste.
- Please dispose of this appliance correctly. If the correct procedures are followed, the disposal of your appliance will help prevent potential negative consequences for the environment and human health.

Help Line

If you have any question, please feel free to call our supporting hotline 01189 775506 or email us enquiries@electricmania.co.uk

Produced for ELECTRIC MANIA LTD.

Unit 16, Anglo Industrial Park

Fishponds Road, Wokingham

RG41 2AN

Made in China