 


ZANUSSI

PTC Tower Heater

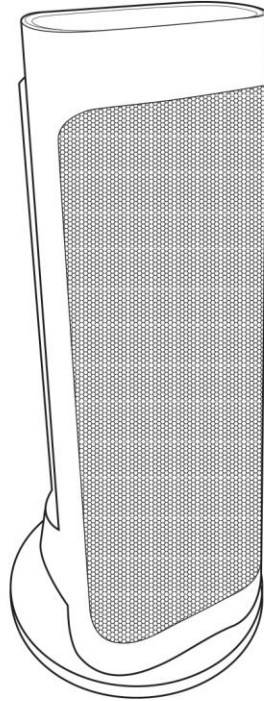

Model Number:

ZPTCH3002B

220-240 VAC, 50Hz, 2000W

Product only suitable for well insulated spaces or occasional use

For Customer Services & Spare Parts please call **0330 1230 597**

Or visit us at www.zanussiheatingandcooling.uk

PLEASE RETAIN
FOR FUTURE REFERENCE

CONTENTS

	Page(s)
Safety Instructions	3 - 5
Information	6
Product Overview	7
Using your Heater	8-10
Cleaning and Care	11
Problem Solving	12
Guarantee and Customer Services	13
Connection to the Mains Supply	14
Specification	15
Disposable Information	16

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be observed, including the following:

- Read all instructions.
- Check that the your mains voltage corresponds with the rating on the appliance.
- The appliance must not be left unattended while it is connected to the mains supply.
- This appliance must be positioned upright on the floor away from curtains, furniture or wall coverings and other flammable items.
- Do not touch hot surfaces. Use the handle or the controls.
- To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquid. Do not operate with wet hands.
- Do not let the cord hangover the edge of a worktop, table etc. or touch hot surfaces.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
- To disconnect remove the plug from the mains outlet. Do not pull the plug out by the cord.
- Never remove parts from the appliance, such as the feet, screws
- This appliance must never be immersed in water. Never use the appliance near a bath, shower or a swimming pool.
- Never use the appliance on or near hot surface.
- Never place flammable objects or clothing on top of the appliance.
- Allow at least 15cm safe area around the appliance on the top, at the front and sides to provide good air circulation.
- Prevent overheating of the appliance by keeping the air inlets and outlets clean and free of anything that may cause blockage. Check all inlets and outlets from time to time for accumulated dust. **DO NOT COVER.**

SAFETY INSTRUCTIONS

- Never move the heater when it is operating. Turn the heater off before move it. Never move the appliance by pulling the cord.
- Never use the appliance in a room with explosive gas such as petrol, or while using any kinds of flammable glues, sprays or solvents.
- The appliance must not be used with an extension lead.
- Do not place any part of your body near the air inlet, outlet or on the fins ,to avoid personal injury, electric shock or fire.
- If overheating should occur, the built-in overheating safety device will shut the appliance off.
- Caution: Some parts of this product can become very hot and cause burns. Particular attention must be given when children vulnerable people are present.
- Do not insert any foreign objects into the grill.
- Keep all grills clear of any draped fabric or curtains.
- The appliance must not be located immediately below a mains socket. Do not use the appliance with a programmer, timer or any other device that switches the appliance on automatically. A fire risk exists if the appliance is covered or positioned incorrectly.
- Do not operate this appliance for any thing other than its intended use.
- This appliance is not intended for commercial use
- **This product is intended for household use only.** Do not use outdoors.
- This product is only intended for heating.
- **Warning:** It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to electrical parts.
- **Warning:** Children should not use this appliance. Close supervision is necessary when any appliances are used near children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

SAFETY INSTRUCTIONS

- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- **Warning:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to make sure that they do not play with the appliance.

Electrical Safety



- Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on 220 – 240V AC; 50Hz. Connection to any other power source may damage the unit.
- This product may be fitted with a non re-wireable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained.
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged in any way, it should be cut off and an appropriate plug fitted. This should be carried out by a qualified electrician. The plug removed must be disposed of safely, as insertion into a 10 Amp socket is likely to cause an electrical hazard.

INFORMATION

Information requirements for electric local space heaters

Model number				ZPTCH3002B	
Item	Symbol	Value	Unit	Item	Unit
Heat Output				Type of heat input, for electric storage local space heaters only	
Nominal heat output	P _{nom}	2.0	kW	Manual heat charge control, with integrated thermostat	No
Minimum heat output (Indicative)	P _{min}	1.2	kW	Manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max, C}	2.0	kW	Electronic heat charge control with room and/or outdoor temperature feedback	No
				Fan assisted heat output	No
Auxiliary electricity consumption				Type of heat output/room temperature control	
At nominal heat output	e ^l Max	2.008	kW	Single stage heat output and no room temperature control	No
At minimum heat output	e ^l Min	1.251	kW	Two or more manual stages, no room temperature control	No
In standby mode	e ^l SB	0.34	W	With mechanic thermostat room temperature control	No
				With electronic room temperature control	Yes
				Electronic room temperature control plus day timer	N/A
				Electronic room temperature control plus week timer	N/A
				Other control options (multiple selections possible)	
				Room temperature control, with presence detection	No
				Room temperature control, with open window detection	No
				With distance control option	No
				with adaptive start control	No
				With working time limitation	No
				With black bulb sensor	No
Contact details	Product Care Trading Limited. Wigan, WN2 4AY				
	PCT (NI) Ltd. Belfast, BT5 5AD				

  PRODUCT OVERVIEW

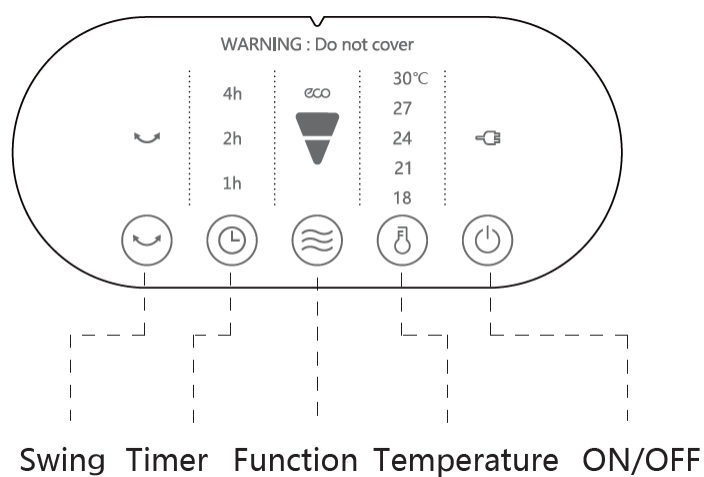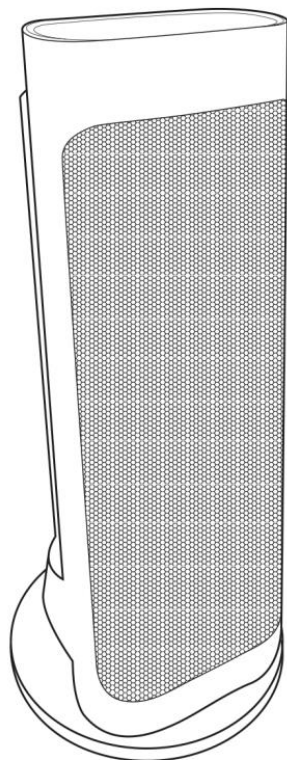

WARNING: In order to avoid overheating, do not cover the heater.

USING YOUR HEATER

HOW TO TURN THE HEATER ON



 




1. Use the standby button on the appliance or press the ON/OFF button on the remote control to turn the appliance on.
2. There will be a light indicating that the appliance is now on


HOW TO TURN THE HEATER OFF

1. Use the standby button on the appliance, or the remote control and ensure the light is out, indicating the machine is now off.
2. Unplug the heater from the mains socket and allow the heater to cool before storing it away.

NOTE: The heater will run on fan mode for a short period of time to cool the unit, after which it will turn off.

Allow the heater to cool prior to any movement

	ON/OFF key
	Function key
	“+” key
	“-” key
	Timer key
	Oscillating key
	ECO key

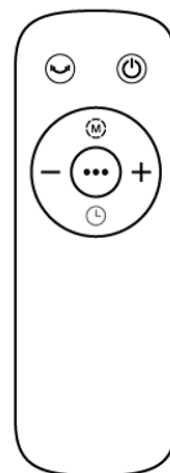 

MDY-35

USING YOUR HEATER

SETTINGS

There are 2 settings on the machine;
Low gear and High gear.

These can be changed using the function key on the remote, or the “function” button on the unit’s control panel.

There is also an Eco mode which can be selected Eco key “...”

TEMPERATURE CONTROL

The temperature setting range is 18-30 °C.

Tap the temperature setting key on the unit, or the "+ /-" key on the remote control to set the target temperature.

When the rooms ambient temperature reaches your chosen setting, the unit will stop heating and the mode indicator will flash for 15 seconds.

When the ambient temperature drops below your chosen setting the heater will resume normally.

TIMER

1. Timed shutdown

Tap the timer button on the unit or the remote and select between 1-7 hours.

2. Timed Start-up

When on standby, tap the timing button on the unit or the remote and set time for start-up between 0-7 hours.

USING YOUR HEATER

OSCILLATING FUNCTIONS

Tap the oscillating button to start and stop the oscillating function.

HIGH TEMPERATURE PROTECTION

When the ambient temperature exceeds 50°C, the output will cease. The "1h, 2h and 4h" indicator lights will flash together and the buzzer will sound 10 times.

To reset the heater, the ambient temperature must be lower than 50°C, and be rebooted.

TEMPERATURE SENSOR FAULTS

When there is an open circuit fault with the temperature sensor, under any working mode, the "1h" indicator light will flash repeatedly and the buzzer sound 10 times

When there is a short circuit fault with the temperature sensor, the "2h" indicator light will flash repeatedly and the buzzer sound 10 times

ECO FUNCTION

The default setting temperature is 24 °C when in ECO energy-mode. The speed will be selected automatically based on the ambient temperature and chosen setting temperature.

TIP OVER SWITCH

The appliance needs to be placed on a flat, firm and stable surface. In the event that the unit tips over or is placed on an uneven or very soft surface the "1h, 2h" lights will flash and the buzzer will sound 10 times. The machine will shut down automatically and require restarting.

CLEANING AND CARE

WARNING: Electrical Shock Hazard.

Before you clean the appliance, disconnect the mains plug from the wall socket.

- Allow the appliance to cool down completely before cleaning.
- Do not immerse cord, plug or appliance in any liquid or allow moisture to come into contact with electrical parts.
- Clean the outer surface using a moist cloth and wipe over with a dry, soft cloth.
- Do not use harsh detergents, abrasives or spray on cleaners.
- Don't allow water to seep into the openings or come into contact with electrical connections.
- Allow sufficient drying time before operating again.
- Clean the air inlets and outlets regularly with a vacuum cleaner using the brush attachment (with a regular use, at least twice a year).
- When the appliance is not in use. We recommend that, the heater is re-packed in its original packaging and stored in a cool, dry place.

PROBLEM SOLVING

My appliance does not work when I turn it on:

1. Check that your appliance is plugged in and the power is turned on at the mains socket.
2. Try another mains socket.
3. Check the appliance is in an upright position.
4. Check that the thermostat setting has not been set too low.
5. If the appliance still doesn't work, do not try to repair it yourself.

If your appliance power is automatically cut off, follow the step below:

1. Unplug your appliance from the mains socket and allow it to completely cool down.
2. Inspect your appliance. Clean the air inlet and air outlet with a vacuum cleaner if necessary. If there are any signs of physical damage (e.g. melting, or burning of the case), do not attempt to use the appliance. Please leave all maintenance work to qualified personnel.
3. Plug in the appliance and switch it on again. If it cuts off again, move the appliance to a better ventilated location.

GUARANTEE AND CUSTOMER SERVICES

At Zanussi, we take all our customer feedback seriously.

**Feel free to contact our Customer Service Team on
0330 1230 597
who will be more than happy to assist you.**

This product is guaranteed for **12months** from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

CONNECTION TO THE MAINS SUPPLY

 
This appliance is designed to operate from a mains supply of 220-240V~50Hz.

Check that the voltage marked on the product corresponds with your supply voltage.

How to change the fuse

1. Slot the end of a screwdriver into the recess in the fuse holder of the plug.
2. Pull the fuse holder upwards until free of the plug and slide the fuse out.
3. Replace the fuse and replace fuse holder, pushing down until locked into place.

Important: Only ever use a 10 amp fuse.

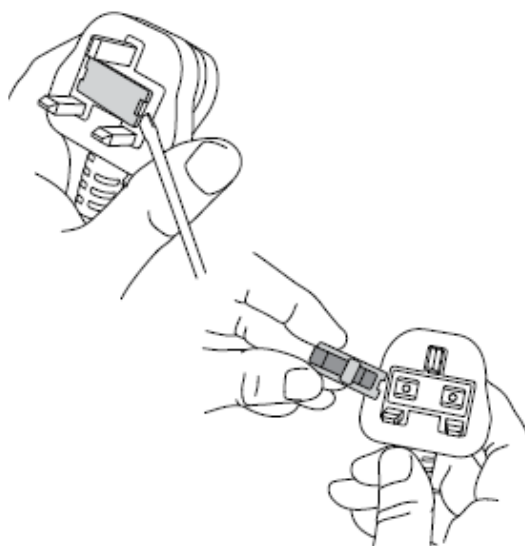


SPECIFICATION

Model	ZPTCH3002B
Voltage	220 – 240V 50Hz
Power Input (Heating)	2000W
Suitable Room Size	16-20 (m2)
Oscillation	60°
Handle Type	Integrated
Number of Heat Settings	3
Castors/Feet/Base	Base
Overall Size (H x W x D)	19.6 x 19.6 x 45.2 (cm)
Weight (KG)	2.25

ZANUSSI

ZANUSSI is a registered trademark used under license from AB Electrolux (publ). Made under license by Product Care Trading Limited, Wigan, WN2 4AY/ PCT (NI) Ltd, Belfast, BT5 5AD.

 For Customer Services & Spare Parts please call: 0330 1230 597
Or visit us at www.zanussiheatingandcooling.uk

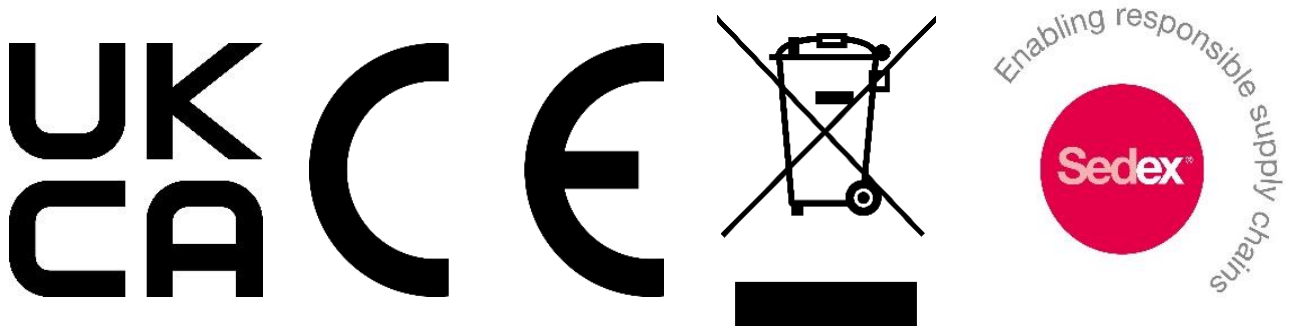

The 'wheeie bin' symbol is known as the 'Crossed-out wheeie bin Symbol'.

When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

Revision 4