 


# abode

## Abode Digital Air Fryer User Guide

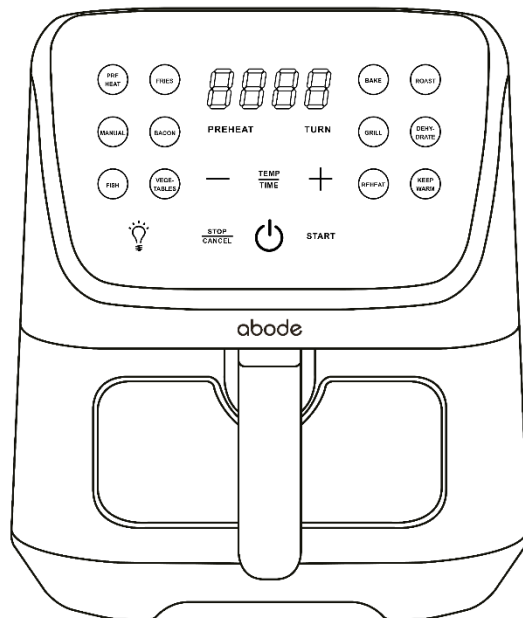

**Model Number:  
AAF6200**

For Customer Services & Spare Parts please call **0345 209 7461**

**PLEASE RETAIN FOR FUTURE  
REFERENCE**

# CONTENTS

	Page(s)
<b>Safety Instructions</b>	<b>3-5</b>
<b>About Your Air Fryer</b>	<b>6</b>
<b>Getting Started</b>	<b>7</b>
<b>Using Your Air Fryer</b>	<b>8-10</b>
<b>Maintaining Your Air Fryer</b>	<b>11-12</b>
<b>Menu Presets</b>	<b>13</b>
<b>Product Information</b>	<b>14-16</b>
<b>Warnings</b>	<b>17</b>
<b>Guarantee and Customer Service</b>	<b>18</b>
<b>Connection to the Mains</b>	<b>19</b>
<b>Notes</b>	<b>20-21</b>

# **SAFETY INSTRUCTIONS**

## **READ CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE**

- Check that the voltage indicated on the rating label corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Children should not perform cleaning or user maintenance.
- Keep the appliance and its power supply cord out of the reach of children.
- This appliance is not a toy.
- This appliance does not contain user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances. Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

# **SAFETY INSTRUCTIONS**

## **READ CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE**

- Do not immerse the appliance in water or any other liquid.
- Do not operate the appliance with wet hands.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.
- Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.
- Always unplug the appliance after use and before any cleaning or user maintenance.
- Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

# **SAFETY INSTRUCTIONS**

## **READ CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE**

- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- The outer surface of the appliance may get hot during operation.

**Caution:** Hot surface - do not touch the hot parts or heating components of the appliance.

**Caution:** Take care not to pour water on the heating element.

 
**Warning:** Keep the appliance away from flammable materials.

**FOR HOUSEHOLD USE ONLY**

**INSTRUCTIONS SHOULD BE KEPT**

# ABOUT YOUR AIR FRYER

## Parts

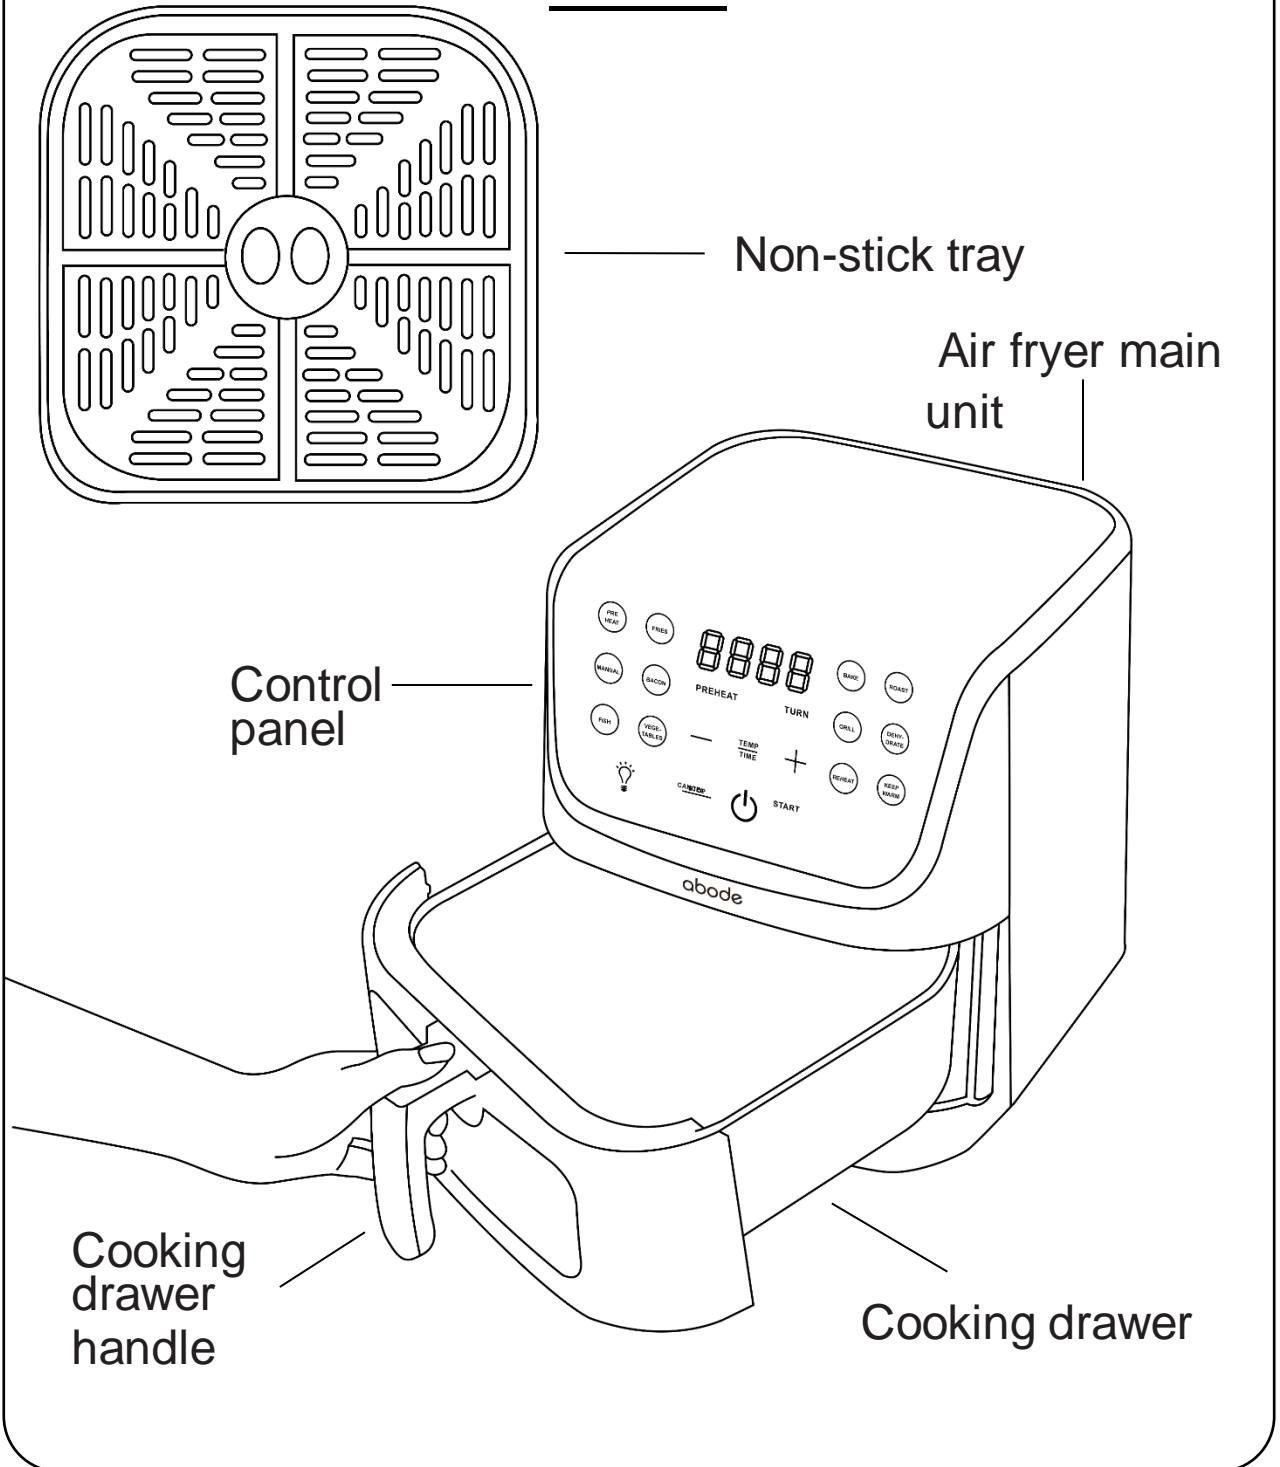

# GETTING STARTED

## Before first use

1. Remove all packaging materials and stickers or labels.
2. Check that the air fryer is switched off and unplugged from the mains power supply.
3. Clean the drawer in warm, soapy water and then rinse and dry thoroughly. Do not immerse the main unit in water or any other liquid.
4. Never use harsh or abrasive cleaning detergents or scourers to clean the air fryer or its accessories, as this could cause damage.
5. Wipe inside and outside of the appliance with a soft, damp cloth and dry thoroughly.
6. Place the appliance on a stable, horizontal and even surface at a height comfortable for the user.
7. Allow for sufficient ventilation around the air fryer during use.

**Warning: Do not place the appliance on a non heat-resistant surface.**

**Note: When using the air fryer for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside.**

It is advised to run the air fryer without food for approximately 10 minutes before first use; this will prevent the initial smoke or odour from affecting the taste of the food.

# USING YOUR AIR FRYER

## Operating Instructions

- Fit the non-stick coated cooking tray into the drawer.
- Slide the cooking drawer into the air fryer main unit to close it.

Note: The air fryer comes pre-assembled. The drawer should be closed securely before use, or the air fryer will not work.

- Plug in and switch on the air fryer at the mains power supply.
- Press on/off to turn the unit on.
- The air fryer will automatically select re-heat.
- Select the required programme and the temperature and time will be displayed.
- Remove the drawer by pulling it out of the air fryer using the handle.
- Place the drawer onto a flat, stable, heat-resistant surface.
- Place the ingredients into the non-stick coated cooking drawer and then slide the cooking drawer back into the air fryer to close it.
- To begin cooking press the start button.
- The selected programme will then remain illuminated along with the timer countdown.

### **Setting the temperature**

- The temperature button will adjust the temperature by 5° C at a time. Keeping the button held down will rapidly change the temperature.
- The temperature control range is 80° C – 200° C.
- This can be adjusted at any time.

# USING YOUR AIR FRYER

## Setting the cooking time

- The timing control button will adjust the cooking time by one minute at a time. Keeping the button held down will rapidly change the time. This can be adjusted during cooking at any time.
- Some ingredients may require shaking partway through the cooking time. The air fryer may prompt you to do this dependent on the programme selected.
- To shake your food, remove the drawer by pulling the handle, shake the drawer gently and then slide it back into the air fryer to close it and continue to cook.
- Once cooking is complete and the preset time has elapsed, check whether the food is ready by carefully opening the drawer.
- If the food is not cooked, close the drawer and use the timer to increase the cooking time.
- If the food is cooked, remove the non-stick coated drawer and then tip the contents into a bowl or onto a plate.
- To pause the air fryer press “stop/cancel” once, press again to turn the unit off.
- On switching the unit back on, it will default to re-heat again.

**Tip:** Select the light icon to view the food through the window.

**Note:** Use a pair of heat-resistant tongs (not included) if the food is large or fragile.

# USING YOUR AIR FRYER

- If the cooking time or temperature setting needs to be changed during use, simply use the control panel to set it as required and the air fryer will automatically adjust the settings.

**Caution:** Do not tip the food directly into a bowl or onto a plate, as excess oil may collect at the bottom of the drawer and leak onto ingredients.

**Warning:** Voltage is still present even when the appliance is turned to the off position. To permanently switch off the air fryer, turn it off at the mains power supply.

- Check that the air fryer is cool, clean and dry before storing in a cool, dry place.
- Never wrap the cord tightly around the air fryer; wrap it loosely to avoid causing damage.

## **AUTOMATIC SWITCH-OFF**

The air fryer is fitted with an automatic switch-off and this will activate if:

- The set cooking time has elapsed. The timer will sound and the automatic switch-off will activate, turning off the air fryer.
- The cooking drawer is pulled out from the air fryer during cooking. Once the cooking drawer is reinserted, the timer will continue to count down until the cooking time has elapsed.

# MAINTAINING YOUR AIR FRYER

## Cleaning

- Clean the appliance after every use.
- Before cleaning, remove the mains plug from the mains supply.
- Make sure your appliance has cooled down completely before cleaning.
- Wipe the outside of the appliance with a moist cloth.
- Clean the nonstick basket with warm, soapy water, then rinse and dry thoroughly.

**CAUTION: Do not immerse the main unit in water or any other liquid.**

**CAUTION: Never use harsh or abrasive cleaning detergents or scourers to clean the air fryer or its accessories, as this could cause damage.**

 
**WARNING: Always unplug the appliance from the electrical outlet before assembling, disassembling, relocating, servicing or cleaning it**

# MAINTAINING YOUR AIR FRYER

## Storage

- Ensure all parts are dry before storage.
- Store the appliance in a dry box or in a clean, dry place.
- Never store the appliance while it is still wet or dirty.
- Never wrap the power cord around the appliance.

# MENU PRESETS

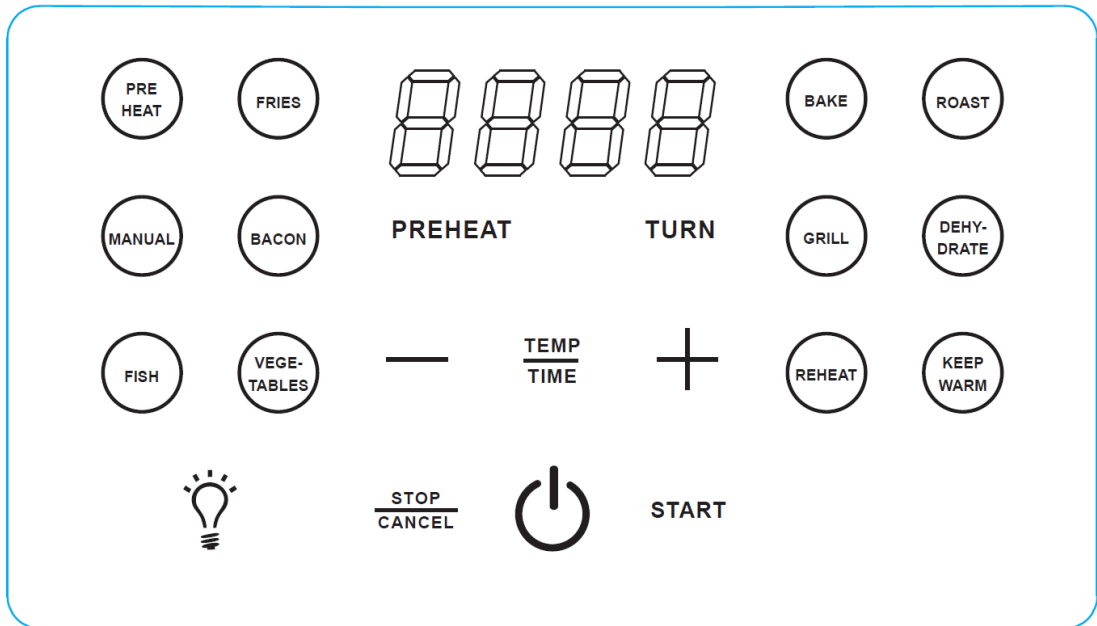

	Pre-Set Temp	Pre-Set Time
Pre Heat	Varies	Varies
Fries	200	15 mins
Manual	Adjustable	Adjustable
Bacon	190	8 mins
Fish	190	10 mins
Vegetables	200	20 mins

	Pre-Set Temp	Pre-Set Time
Bake	160	25 Mins
Roast	200	25 mins
Grill	200	12 mins
Dehydrate	70	8 hours
Reheat	150	15 mins
Keep Warm	100	30 mins

All presets are a guide, the air fryer can be adjusted to your personal preference of time and temperature

# PRODUCT INFORMATION

## Technical Specification

<b>Model number</b>	AAF6200
<b>Rated Voltage</b>	220-240V~50Hz/60Hz
<b>Net capacity (litres)</b>	6 litres
<b>Wattage (W)</b>	1600 – 1800W

# PRODUCT INFORMATION

This product contains a light source of energy efficiency class G.

Information sheet of halogen light source based on regulation 2019/2015

<b>Product information sheet of halogen light source</b>			
<b>COMMISSION DELEGATED REGULATION (EU) 2019/2015 with regard to energy labeling of light sources</b>			
Supplier's name or trade mark: Product Care Trading Limited			
Supplier's Address: Product Care Trading Limited, Wigan, WN2 4AY/ PCT (NI) Ltd, Belfast, BT5 5AD			
Model identifier: G6.35-50			
Type of light source: OVEN LAMP			
Lighting technology used:	oven lamp	Non-directional or directional:	NDLS
Mains or non-mains:	MLS	Connected light source (CLS):	NO
Colour-tuneable light source:	NO	Envelope:	NO
High luminance light source:	NO		
Anti-glare shield:	NO	Dimmable:	NO
<b>Product parameters</b>			
Parameter	Value	Parameter	Value
<b>General product parameters:</b>			
Energy consumption in on-mode (kWh/ 1 000 h)	50	Energy efficiency class	G
Useful luminous flux (lm)	125	Beam angle correspondence( $\Phi$ use) indicating if it refers to the flux in a sphere (360°), in a wide cone (120°) or in a narrow cone (90°)	in sphere 120°
Correlated colour temperature type, rounded to the nearest 100 K (single value) , or the range of correlated colour temperatures(range), rounded to the nearest 100 K(steps), that can be set	single value	Correlated colour temperature (K)	2400
On-mode power (Pon), expressed in W	50	Standby power (Psb), expressed in W and rounded to the second decimal	0

# PRODUCT INFORMATION

Networked standby power (Pnet) for CLS, expressed in W and rounded to the second decimal		-	Colour rendering index, rounded to the nearest integer, or the range of CRI values that can be set	-
Colour rendering index range(Minimum)			Colour rendering index range(Maximum)	
Outer dimensions without separate control gear, lighting control parts and moonlighting control parts, if any (millimeter)	Height	13mm	Spectral power distribution in the range 250 nm to 800 nm, at full-load	
	Width	12.5mm		
	Depth	30mm		
Claim of equivalent power ( c )		NO	If yes, equivalent power (W)	50W
			Chromaticity coordinates (x and y)	N/A
				N/A
Parameters for directional light sources:				
Peak luminous intensity (cd)		N/A	Beam angle in degrees, or the range of beam angles that can be set	N/A
Beam angle range(Minimum)		N/A	Beam angle range(Maximum)	N/A
Parameters for LED and OLED light sources:				
R9 colour rendering index value		N/A	Survival factor	N/A
the lumen maintenance factor		N/A		
Parameters for LED and OLED mains light sources:				
displacement factor (cos $\phi$ 1)		N/A	Colour consistency in McAdam ellipses	N/A
Claims that an LED light source replaces a fluorescent light source without integrated ballast of a particular wattage		N/A	If yes then replacement claim (W)	N/A
Flicker metric (Pst LM)		N/A	Stroboscopic effect metric (SVM)	N/A

# WARNINGS



**WARNING:** To reduce the risk of personal injury, always unplug the Air Fryer before performing maintenance or trouble shooting checks.

- Only hold the cooking compartment by the drawer handle.
- Take care when removing the non-stick coated cooking drawer, as steam may be emitted.
- Do not overturn the non-stick cooking basket with food inside, as excess oil may collect at the bottom of the pan.
- Do not cover the air fryer or its air inlets, as this will disrupt the airflow and could affect the cooking results.
- Do not fill the inside of the air fryer with oil or any other liquid.
- Do not touch the inside of the air fryer during or straight after use, as it gets very hot. Only hold the drawer by the handle.



This symbol  
means:  
**CAUTION:**  
**Hot Surfaces**

# **GUARANTEE & CUSTOMER SERVICES**

At Abode, we take all our customer feedback seriously.

**Feel free to contact our Customer Service Team on**

**0345 209 7461**

**who will be more than happy to assist you.**

This product is guaranteed for **12 months** from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

## **The following conditions apply:**

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

# CONNECTION TO THE MAINS SUPPLY

## **WARNING- THIS APPLIANCE MUST BE EARTHED**

This appliance is designed to operate from a mains supply of  
220-240V~ 50/60Hz.

Check that the voltage marked on the product corresponds with  
your supply voltage.

 
This product is fitted with a 10A plug complying with BS1363.  
If this plug is unsuitable or needs to be replaced, refer to customer  
services.

Important: The wires in the mains lead are coloured in  
accordance with the following code:

**GREEN/YELLOW – EARTH**

**BLUE - NEUTRAL**

**BROWN – LIVE**

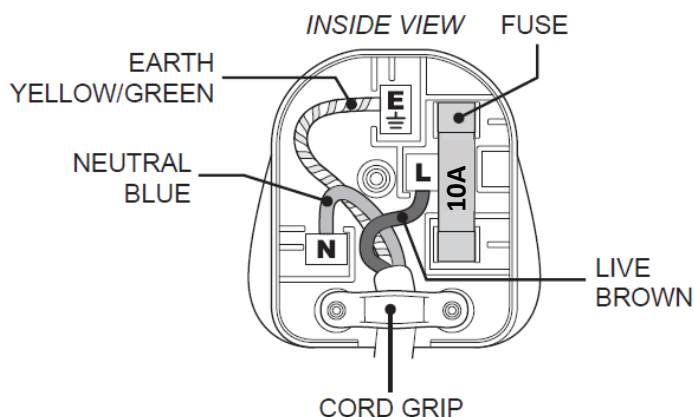

# NOTES

A large, empty rounded rectangular box with a thin black border, intended for taking notes. The box is centered on the page and occupies most of the vertical space below the title and above the footer.

# NOTES

A large, empty rounded rectangular box with a thin black border, intended for writing notes. The box is centered on the page and occupies most of the vertical space below the title.

# abode

Made by Product Care Trading Limited

 
Product Care Trading Limited, Wigan, WN2 4AY/ PCT (NI) Ltd, Belfast, BT5  
5AD

Abode Support: call **0345 209 7461**

UK  
CA

C

E

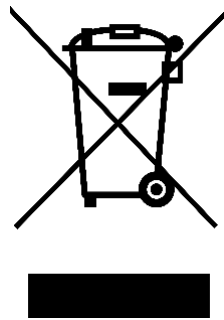

The 'wheeie bin' symbol is known as the 'Crossed-out wheeie bin Symbol'.

When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit [www.sedex.org.uk](http://www.sedex.org.uk) for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

Revision 1.4