 


Operating Manual for RHPCF360

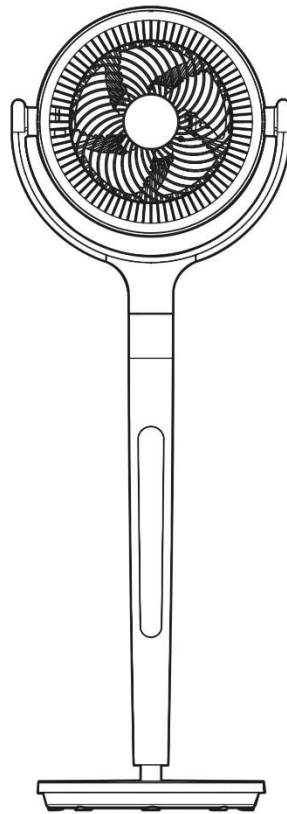

**REGISTER TODAY
FOR YOUR FREE
ADDITIONAL YEAR
GUARANTEE**

GUARANTEE

At Russell Hobbs, we take all our customer feedback seriously. Feel free to contact our Customer Services Team who will be more than happy to assist you.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.
- This does not affect your statutory rights.

Region	Contact	Website
UK & Northern Ireland	0345 209 7461	mda.russellhobbs.com
Ireland	1 800 938982	ie.mda.russellhobbs.com
Rest of Europe	² europe@productcaregroup.com	de.mda.russellhobbs.com fr.mda.russellhobbs.com es.mda.russellhobbs.com it.mda.russellhobbs.com nl.mda.russellhobbs.com

Note your serial number below for future reference

Image for illustration purposes only



IMPORTANT SAFETY INSTRUCTIONS

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- Do not use with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This product is intended for household use only.
- Do not use outdoors.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
- Do not operate this appliance for anything other than its intended use.
- Do not immerse the whole unit in water or other liquids for cleaning.
- Unplug from outlet when not in use. Do not leave unattended while plugged in.
- Do not use if it has been dropped, damaged, left outdoors or submerged in water.
- Keep the appliance away from water and do not allow it to get wet. If the unit is wet, do not plug the unit into wall sockets or turn the unit on.

 
 
IMPORTANT SAFETY INSTRUCTIONS

- Do not handle the appliance with wet hands.
- Do not pull or carry by the cord, use the cord as a handle, close doors on the cord, pull the cord around sharp corners or edges, or expose the cord to heated surfaces. Do not unplug by pulling on the cord.
- To protect against electrical shock do not immerse the cord, plug, or appliance in water or other liquids.
- Unplug from the mains outlet when not in use, before putting on and taking off parts, and before cleaning.
- Only use the unit when fully assembled.
- Never place your fingers or other objects into any part of the appliance. Be aware that loose clothing or hair may become trapped in the appliance if improperly used.
- Before use, ensure that all of the air vents of the appliance are clear and that there is no restriction of air flow.
- Caution: Appliance may disturb ashes in an open fire. Always avoid directing the appliance toward naked flames.


WARNING: Only the power adaptor supplied with the unit can be used with the appliance. (Adaptor model number: GM42-240150-3D)

PARTS

Fixed Pole

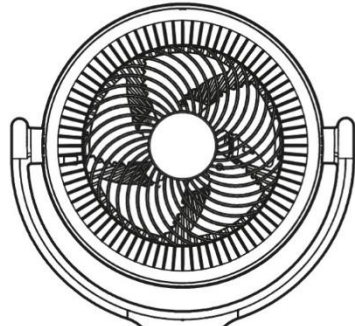


Remote Control

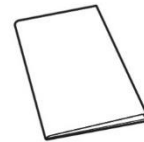 

Instruction Manual

 Pole

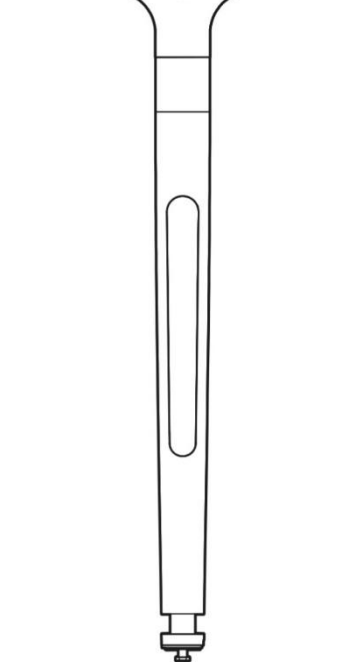

Adapter



Batteries

Base



 
Bolt and Washer



L shaped
Screwdriver

ASSEMBLY

1. Align the groove on the lower end of the pole to the convex in the base, and then tighten and secure from the bottom with bolt and washer.

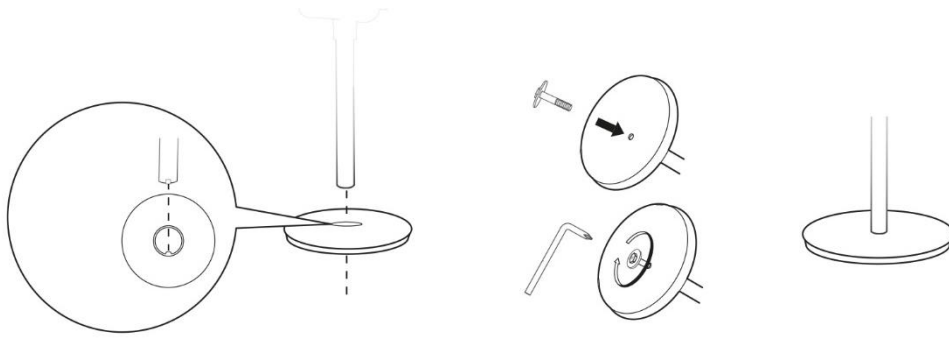

USING YOUR FAN

Display

Digital Display

8.8

Vertical Oscillation



Horizontal Oscillation



Timer Indicator



Circulating Wind Indicator

Normal Wind Indicator

Sleep Wind Indicator


Control Panel






Note: When powered on for the first time, the fan will be in circulating wind mode and the vertical and horizontal oscillation will be set to the maximum angle.

Button	Description	Function
	Mode Key	Press to cycle through the modes. Sequence: Circulating wind → Normal wind → Sleep wind.
	Wind Speed Key	Press to adjust the wind speed level from 1-12. In sleep wind mode, it will run from 1-3.
	Vertical Oscillation	Press to cycle through the oscillation options of - 30° - 60° - 135° - Stop. The display will show “--” for 30°, “==” for 60° and “===” for 135°.
	Horizontal Oscillation	Press to cycle through the oscillation options of - 30° - 60° - 120° - Stop. The display will show “--” for 30°, “==” for 60° and “===” for 120°. * If you press and hold this button for 2 seconds, it will take you to the timer function. Short press this button to set the timer for a maximum of 12 hours.


USING YOUR FAN







Button	Description	Function
	On/ Standby	When in standby, press to power on. When powered, press to enter standby

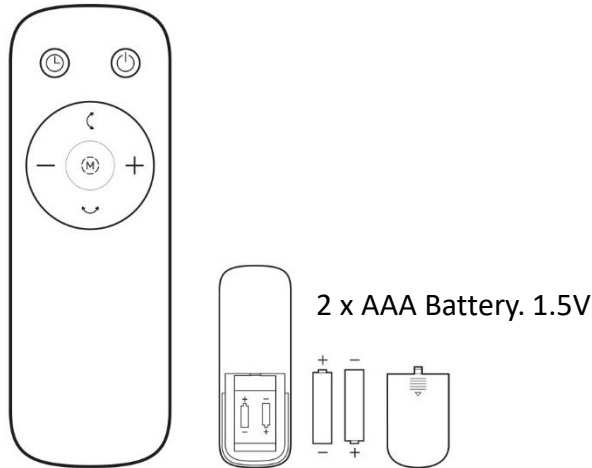 Icon	Mode	Function
	Circulating Wind	When this icon is lit, the wind speed adapts to changes in the ambient temperature.
	Normal Wind	When this icon is lit, the fan is in Normal Wind Mode. There are 12 levels in Normal Mode, and they can be adjusted by using the wind speed buttons.
	Sleep Wind	When this icon is lit, the fan is in Sleep Wind Mode. There are 3 levels in Sleep Wind Mode, and they can be adjusted by using the wind speed button.

REMOTE CONTROL

- The remote control can be used normally within 5m in front of the product and within an angle of 30°.
- The battery contains heavy metals, acid and alkali substances, which threaten human health; waste batteries should be sorted and recycled.



Button	Function
	On/Standby
	Press directly to set the scheduled on and off time and set the scheduled time
	Press this key to switch on the vertical oscillation
	Press to set the wind mode: Circulating wind → Normal wind → Sleep wind
	Press the switch the horizontal oscillation
	Press to increase or decrease the wind speed or set the scheduled time in timer mode

Note:

- Use manganese or alkaline batteries of type "AAA". DO NOT use rechargeable batteries.
- DO NOT mix old and new batteries and DO NOT mix alkaline, standard (carbon-zinc) or rechargeable(ni-cad, ni-mh, etc.) batteries.

BATTERY REPLACEMENT INFORMATION

 
This appliance comes with 2 AAA (1.5V) batteries which are to be fitted into the remote.



CAUTION: Batteries are a chemical burn and choking hazard. Keep batteries away from children.

- Ensure that the battery compartment is always completely secure. If the battery compartment does not close securely, stop using the remote, remove the batteries, and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Dispose of cells properly and keep away from children. Even used cells may cause injury.
- Please dispose of or recycle the remote control batteries according to municipal or provincial laws.

To place the batteries into the remote/replace the batteries please follow the instructions below:

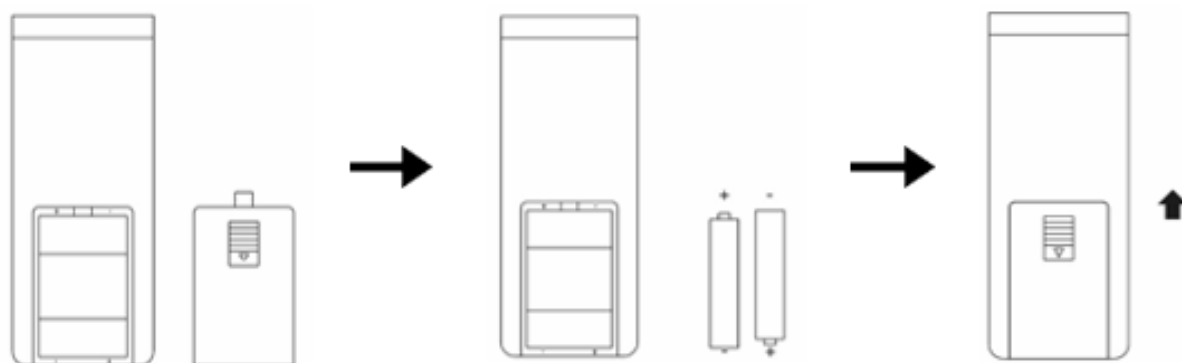

1. Remove the cover from the back of the remote.
2. Insert 2 AAA (1.5V) batteries as shown above.
3. Replace the cover onto the back of the remote.

CLEANING & MAINTENANCE

The fan requires minimal maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, unplug the fan power.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
3. Please wipe the exterior parts with a soft cloth soaked in mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface.
5. Do not use any of the following as a cleaner: gasoline, thinner.
6. Do not allow water or any other liquid to enter into the motor housing or interior parts.
7. Be sure to unplug from the electrical supply source before cleaning.
8. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soapsuds with a dry cloth afterwards.

IMPORTANT!

KEEP BLADES CLEAN

Wash the blades with cold water at least once every 3 months.

The blades may require more frequent washing if in dusty environments.

3 MONTHS

PROBLEM SOLVING

The fan doesn't switch on	<ul style="list-style-type: none">• Check the fan is plugged in• Check the socket is switched on• Check another appliance in the socket• Unplug and check for any obvious signs of damage to the cord or plug• If recently used, allow to cool for 1 hour then try again
The fan is rattling	<ul style="list-style-type: none">• Check the grill is secured properly• Check all screws are securely fastened• Check there is nothing in contact with the fan
Fan will not oscillate	<ul style="list-style-type: none">• Check that nothing is interfering with the fan preventing oscillation
Fan is making a grinding sound	<ul style="list-style-type: none">• Immediately switch off and contact Customer Services
The air is dusty	<ul style="list-style-type: none">• Ensure fan is unplugged• Carefully remove grill• Carefully remove blades from fan• Using mild soapy water and a sponge, gently rinse the blades• Allow to dry naturally for 24 hours then refit the blades
The remote does not work	<ul style="list-style-type: none">• The battery needs replacing• The remote is being used more than 5m away from the machine. Use the remote closer to the machine and make sure it is pointing directly at the display panel.

This appliance is designed to operate from a mains supply of AC100V - 240V; 50/60Hz.

Check that the voltage marked on the product corresponds with your supply voltage.

For UK use only – Plug fitting details (where applicable):

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The GREEN/YELLOW wire is the EARTH and must be connected to the terminal which is marked with the letter E or by the earth symbol or coloured GREEN or GREEN/YELLOW.

The BLUE wire is the NEUTRAL and must be connected to the terminal marked with the letter N or coloured BLACK.

The BROWN wire is the LIVE wire and must be connected to the terminal marked with the letter L or coloured RED.

Always ensure that the plug cord grip is fastened correctly.



Important: Only ever use a BS1362 fuse with the same rating marked on the non-rewirable plug.

Notes

 
Notes



Russell Hobbs

Made by Product Care Trading Limited under license from Spectrum Brands (UK) Limited. Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom / Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland. Russell Hobbs is the registered trademark of Spectrum Brands (UK) Ltd.

UK
CA

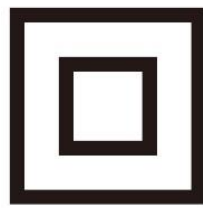

The 'wheellie bin' symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

Revision 1.5