 


# abode

## Bladeless Fan

ABLDL2001 (B)

### Operating Manual

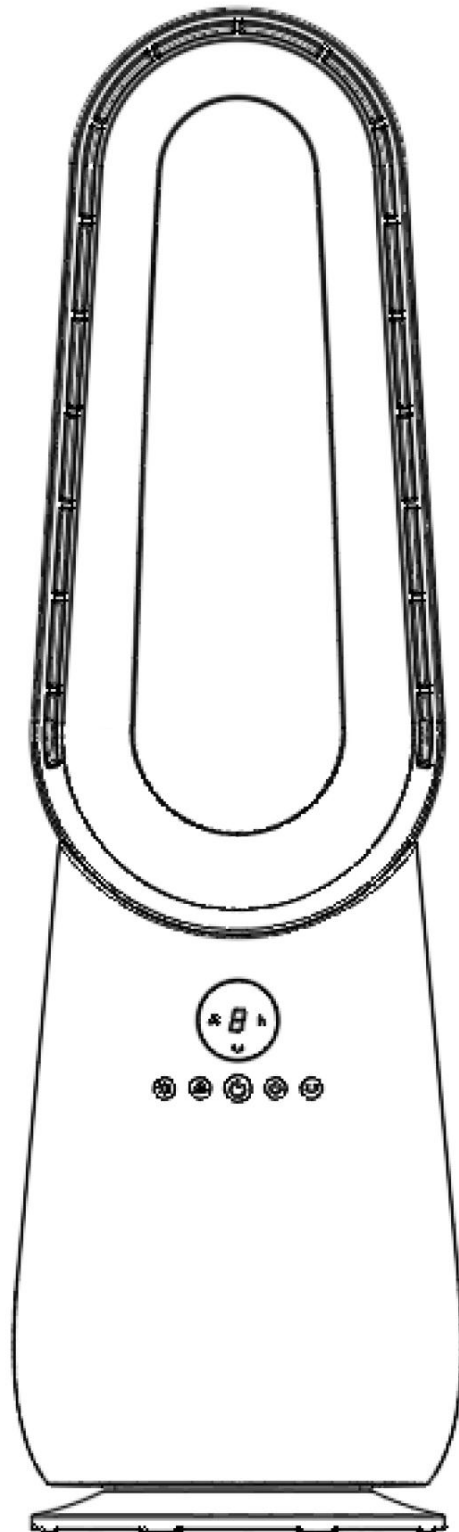

# CONTENTS

Safety Instructions	3
Battery Warnings	5
Product Overview	6
Product Setup	7
Controls and Display	8
Remote Control	9
Cleaning and Maintenance	13
Problem Solving	14
Technical Specification	15
Guarantee	16
Notes	17



Read this guide carefully before installing or operating your new fan and keep it somewhere safe for future reference.

## SAFETY INSTRUCTIONS

- It is hazardous for anyone other than a qualified electrician to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- Do not use with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified technicians to avoid a hazard.
- This product is intended for household use only.
- Do not use outdoors.
- Children aged 8 and older may only use the appliance or carry out cleaning and maintenance duties under supervision and after being instructed on safe use.
- Do not allow children to play with the appliance.
- This appliance can be used by people with reduced physical, sensory or cognitive abilities, or by individuals with limited experience and knowledge, provided they have received proper supervision or instruction on how to use the appliance safely and understand the associated risks.
- Do not operate this appliance for anything other than its intended use.
- Do not immerse the whole unit in water or other liquids for cleaning.
- Unplug from outlet when not in use. Do not leave unattended while plugged in.
- Do not use if it has been dropped, damaged, left outdoors or submerged in water.

 
 
 
## SAFETY INSTRUCTIONS

- Keep the appliance away from water and do not allow it to get wet. If the unit does get wet, do not plug it into a wall socket or turn it on.
- Do not handle the appliance with wet hands.
- Do not pull or carry by the cord, use the cord as a handle, close doors on the cord, pull the cord around sharp corners or edges, or expose the cord to heated surfaces. Do not unplug by pulling on the cord.
- To protect against electrical shock, do not immerse cord, plug, or appliance in water or other liquids.
- Unplug from the mains outlet when not in use and before cleaning.
- Only use the unit when fully assembled.
- Never place your fingers or other objects into any part of the appliance. Be aware that loose clothing or hair may become trapped in the appliance if improperly used.
- Before use, ensure that all the air vents of the appliance are clear and that there is no restriction of air flow.
- Caution: Appliance may disturb ashes in an open fire. Always avoid directing the appliance toward naked flames.
- Do not remove the rotor guard once assembled.

## BATTERY WARNINGS

- Do not try to recharge batteries. Recharging is only allowed for batteries which are marked as “rechargeable”. There is a danger of explosion.
- Regularly check the batteries. Leaking chemicals can cause heavy damage to the device. Dealing with damaged or leaking batteries, exercise a particular caution.
- Different types of batteries or accumulators, as well as new and old batteries, must not be used together.
- When inserting the battery, pay special attention to the correct polarity. Wrong polarity can cause risk of bursting.
- Remove the batteries from the unit if you are not going to use it for a long time or if you want to store it.
- Do not allow children to replace batteries without supervision by an adult.
- Always choose the right size and the right battery type for the intended use.
- Clean the battery contacts and equipment contacts before installing the batteries.
- Remove used-up batteries immediately.
- Do not dismantle the batteries.
- If the battery compartment does not close securely, do not use the remote control anymore and keep it away from children.
- Please avoid extreme conditions and temperatures which can adversely affect the batteries (e.g., placing them on radiators/direct solar radiation).
- The connection terminals must not be short-circuited.

# PRODUCT OVERVIEW

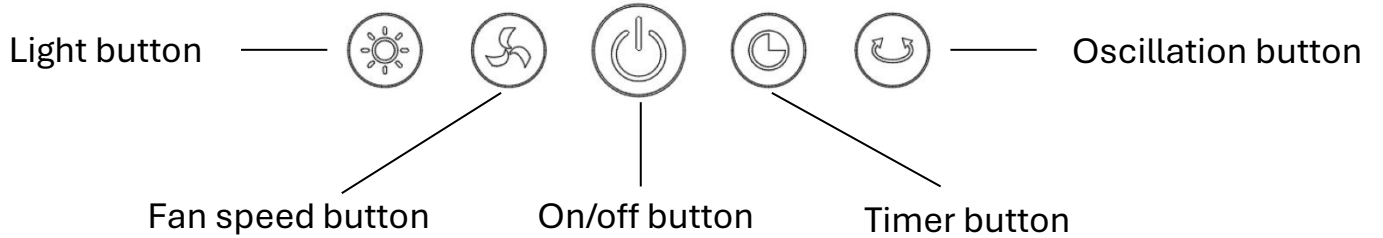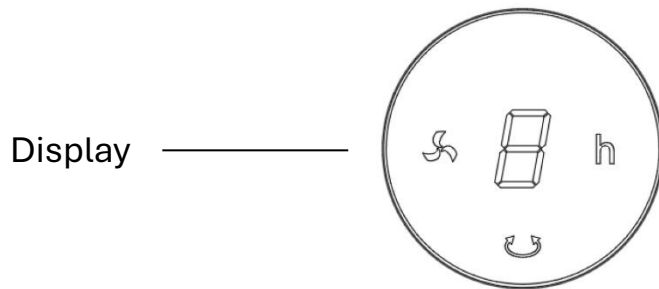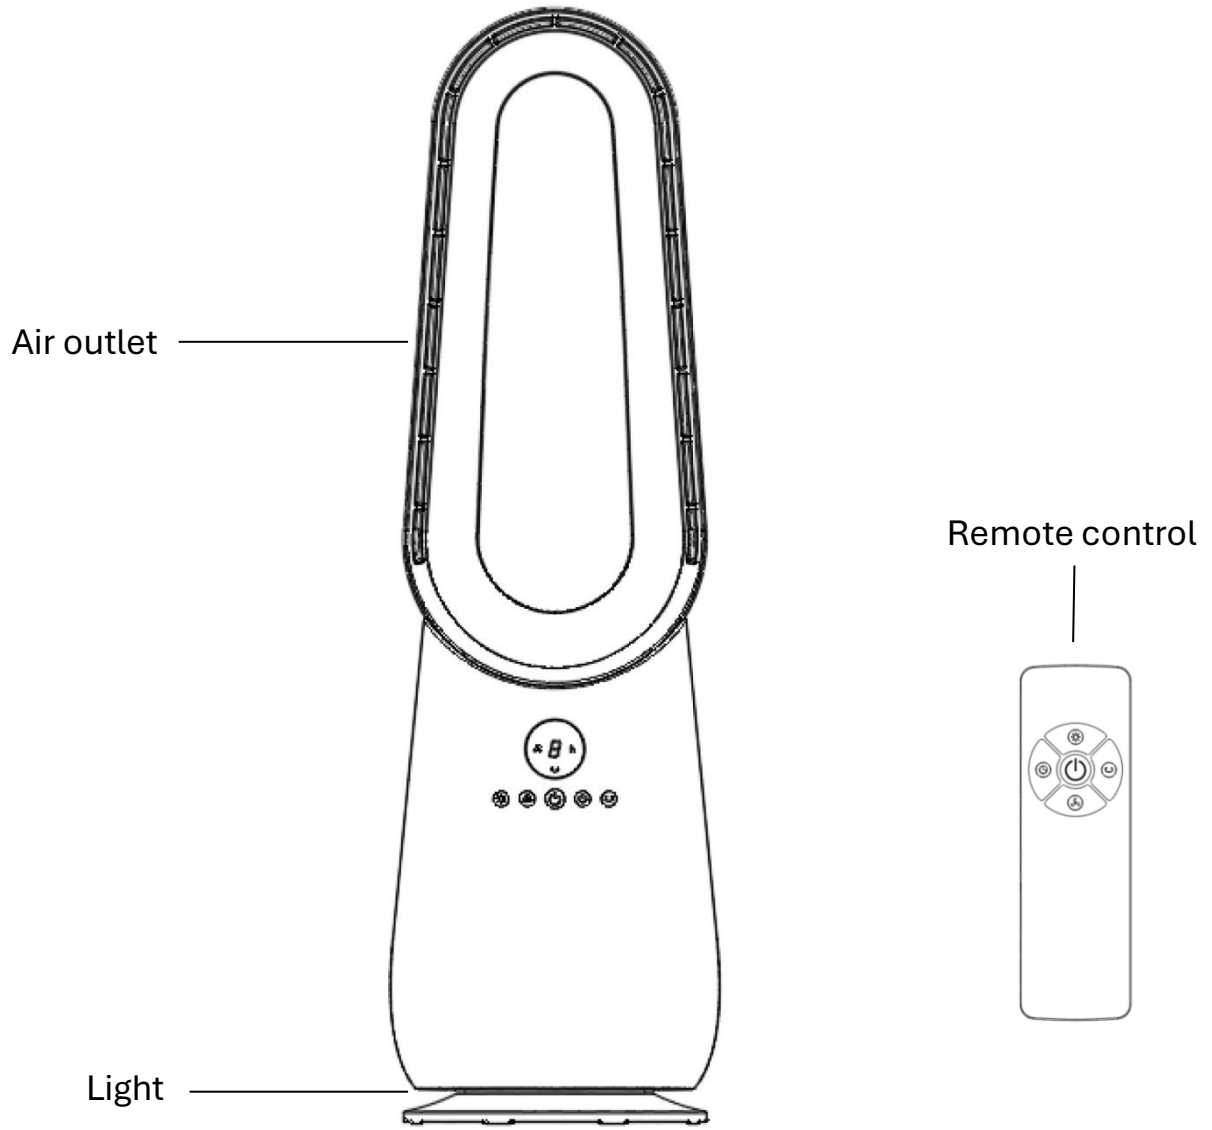

## PRODUCT SETUP

 
 
Remove all packaging materials and all transport bracing from the device.

For safe and trouble-free running of the device, choose the installation location which meets the following requirements:

- The floor should be firm, flat and horizontal.
- Keep the following minimum clearances from the device housing:
  - 30 cm from its lateral side
  - 30 cm above
  - 30 cm from its rear side
  - 1 m from its front side
- Do not place the device in a hot and wet or very humid environment or near combustible material.
- The socket should be easily accessible so that the mains connection cable can be easily disconnected, if necessary.
- Temperature range: from 0 to + 40 °C .
- Humidity (no condensation): 5 - 75%.



**Note:** Do not place fan near curtains

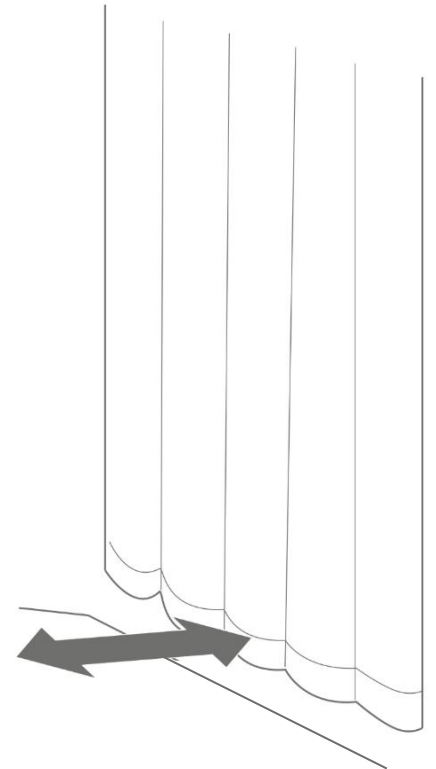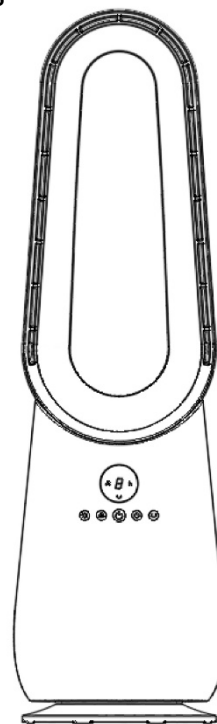

## CONTROLS AND DISPLAY



### **Power**

Press to turn the appliance on. Press again to turn off the appliance.



### **Fan Speed**

To change the fan speed, press the button repeatedly until the desired speed (1-4) is shown on the display.



### **Timer**

When the power is on you can schedule to turn off the fan. To set the timer, press the timer button and the display will show 1h. This indicates that the unit is set to turn off in 1hr. Press it again and it will show 2h. Continue to press the timer button until the required time is displayed. The time range is 1 to 9 hours. After the timer function is set, other functions can be used normally. When the device is turned off, the timer will be cancelled.



### **Oscillation**

Press once to turn on the Oscillation function. The unit will automatically rotate from left to right up to a maximum oscillation of 75°. Press again to turn off Oscillation function.



 
### **Light**

Press once to turn on the light at the base of the unit. Press again to turn off the light function.

## REMOTE CONTROL



**Note:** The remote should be used within 5m of the front face of the fan.

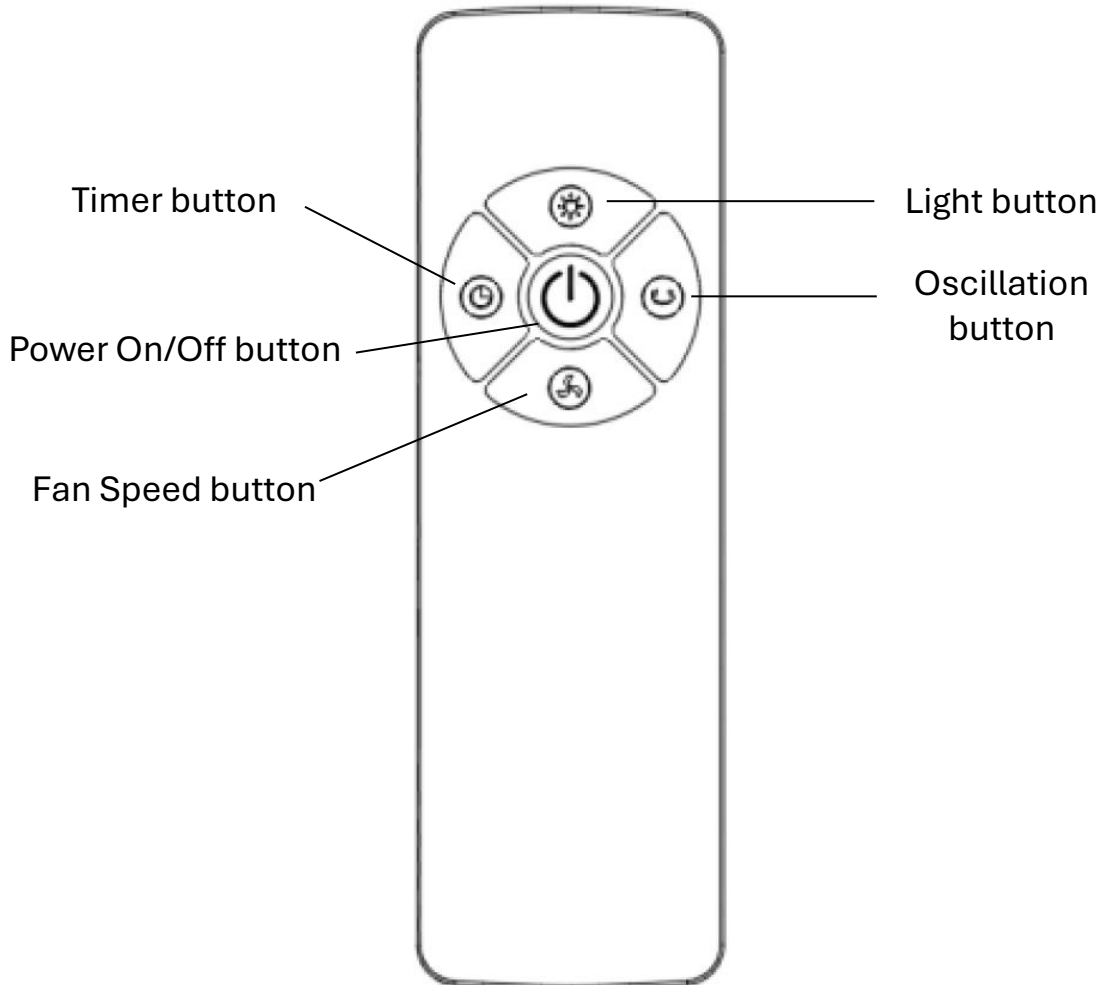

Press this to turn the fan On/Off.



Press this button to turn the light On/Off at the base of the unit.



Press once to turn on Oscillation function, the oscillation angle is 75°. Press again to turn off Oscillation function.

## REMOTE CONTROL



When the power is on you can schedule to turn off the fan. To set the timer, press the timer button and the display will show 1h. This indicates that the unit is set to turn off in 1hr. Press it again and it will show 2h. Continue to press the timer button until the required time is displayed. The time range is 1 to 9 hours. After the timer function is set, other functions can be used normally. When the device is turned off, the timer will be cancelled.

 


Press this button to adjust the fan speed.

## REMOTE CONTROL

To replace the battery, follow these steps:

1. Remove the battery compartment cover by sliding the cover in the direction of the arrow.
2. Insert 2 AAA battery aligning the + and – polarity with the markings.
3. Replace the battery cover.

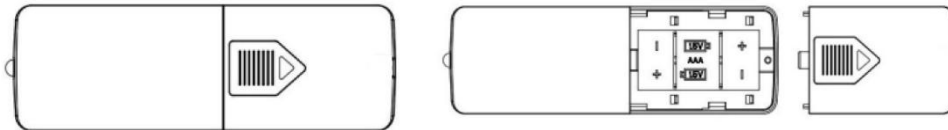

**Note:** Do not charge this battery. If it hasn't been used for a long time, please remove the battery. Keep out of reach of children and, if swallowed, seek medical attention immediately.

Possible remote-control interference:

- This fan may respond to remote controls for other devices.
- If you use the remote control for this fan, other devices may respond.

This is due to the overlapping frequencies of the remote controls. It doesn't indicate quality issues with the product itself. To avoid misuse, keep the remote control away from other electrical devices during operation.

The remote control should be directed towards the display to maximize the remote-control signal.

## REMOTE CONTROL

The appliance comes with 2 AAA (1.5V) batteries which are to be fitted into the remote control.



CAUTION: Batteries are a chemical burn and choking hazard. Keep batteries away from children.

- Ensure that the battery compartment is always completely secure. If the battery compartment does not close securely, stop using the remote, remove the batteries and keep it away from children.
- If you think the batteries might have been swallowed or laced inside any part of the body, seek medical attention. Dispose of batteries properly and keep away from children. Even used batteries may cause injury.
- Please dispose of or recycle the remote control batteries according to municipal or provincial laws.
- Do not expose to high temperature.
- Do not charge the batteries.
- If the remote has not been used for a long time, please remove the battery.
- **WARNING** – Batteries are to be inserted with the correct polarity (+ & –). Incorrect installation may cause leakage, fire or explosion.

## CLEANING AND MAINTENANCE



**Note:** This model should only require minimal maintenance. Do not try to fix it yourself. If service is needed, contact a qualified technician.

- Ensure the unit is unplugged before assembly and before cleaning.
- During maintenance, do not soak or splash water on the fan. Getting the unit wet will damage it.
- Do not use gasoline, alcohol, bleach or metal objects to wipe the fan surface. This can cause the fan surface to discolour and deteriorate.
- To ensure adequate air circulation to the motor, keep vents at the rear free of dust. Do not disassemble the fan to remove dust.
- Do not use any abrasive detergent or solvents to avoid scratching the surface.
- Do not allow water or any other liquid into the motor housing or interior parts.

### Unit Surface

- Gently wipe the fan surface with a soft dry cloth.
- If the surface of the fan is dirty, the debris can be diluted with neutral detergent and then wiped with a soft cloth.

### Air Inlet and Outlet

- Use a soft brush or vacuum cleaner to remove dust at the air inlet and outlet.
- Too much dust can reduce effectiveness. To maintain the fan, clean it when only a minimal amount of dust has accumulated.

### Storage

- Avoid places with vibration and electrical appliances with cooling/heating function.
- Avoid placing it in direct sunlight, high temperatures and humidity.
- Keep out of the reach of children.

## PROBLEM SOLVING

Fan doesn't switch on	<ul style="list-style-type: none"><li>• Check the fan is plugged in.</li><li>• Check the socket is switched on.</li><li>• Check another appliance in the socket.</li><li>• Unplug and check for any obvious signs of damage to cord or plug.</li><li>• If recently used, allow to cool for 1 hour then try again.</li></ul>
Fan makes a rattling sound	<ul style="list-style-type: none"><li>• Check there is nothing in contact with the fan.</li><li>• Check the fan is on a level surface.</li></ul>
Remote control doesn't work	<ul style="list-style-type: none"><li>• The batteries may need replacing.</li><li>• The remote is being used more than 5m away from the product.</li></ul>
Fan makes a grinding sound	<ul style="list-style-type: none"><li>• Immediately switch off and contact Customer Services.</li></ul>
Air coming out is dusty	<ul style="list-style-type: none"><li>• Ensure fan is unplugged and set to OFF.</li><li>• Using a vacuum and crevice brush, gently vacuum the front grille.</li></ul>

# IMPORTANT!

## KEEP THE GRILLE CLEAN

Vacuum the grille at least once every 3 months.  
The fan may require more frequent vacuuming if in a dusty environment.  
Ensure that the fan is unplugged before cleaning.

# 3

## MONTHS

 
## SPECIFICATION

### TECHNICAL SPECIFICATION

Model Number	ABLDL2001 (B)
Rated Voltage	220-240V~
Rated Frequency	50-60Hz
Rated Power Input	70W
LED Luminaries	4.7W

This product contains a light source of energy efficiency class F.

The following symbol indicates that the light source in this appliance should only be carried out by a qualified engineer.

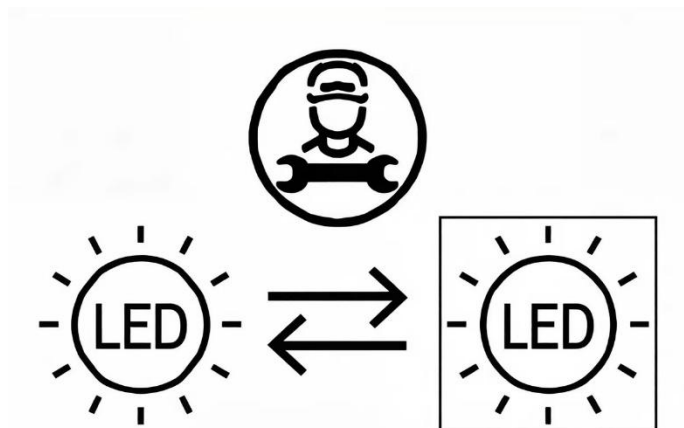

# GUARANTEE

Feel free to contact our Customer Services Team who will be more than happy to assist you.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.
- This does not affect your statutory rights.

Region	Contact	Website
UK & Northern Ireland	0345 209 7461	www.thisabode.co.uk
Ireland	1 800 938982	
Rest of Europe	europe@productcaregroup.com	

Note your serial number below for future reference

Image for illustration purposes only



# NOTES

# NOTES

# NOTES

 
# abode

Made by Product Care Trading Limited

Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane,  
Hindley Green, Wigan, WN2 4AY, United Kingdom

Product Care (Ireland) Ltd, Unit 3D North Point House, North Point  
Business Park, New Mallow Road, Cork, T23 AT2P, Ireland

Abode Support: call 0345 209 7461

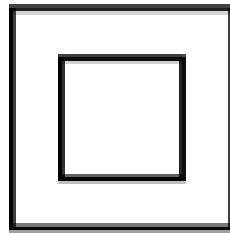

The 'wheeie bin' symbol is known as the 'Crossed-out wheeie bin Symbol'.

When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit [www.sedex.org.uk](http://www.sedex.org.uk) for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.