


GEORGE FOREMAN®

3 BURNER GAS BBQ GFGBBQ3B

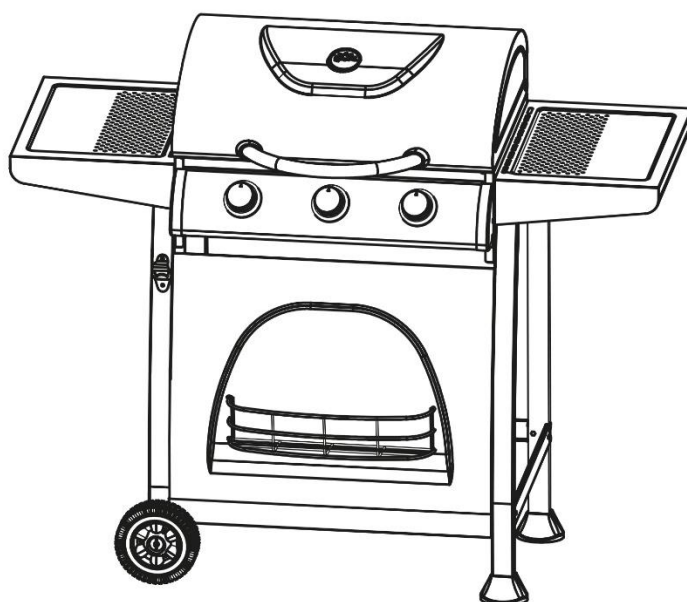

**WARNING: PLEASE ENSURE YOU HAVE READ
THROUGH THE SAFETY AND OPERATING
INSTRUCTIONS BEFORE USE.**

PLEASE RETAIN INSTRUCTIONS FOR FUTURE REFERENCE

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 9am – 5pm
Or visit us at **www.productcare.co.uk**

CONTENTS

	Page(s)
Safety instructions	3-5
BBQ Feature Diagram & Parts List	6-7
BBQ Assembly	8-15
Attaching Gas Cylinder	16
Disconnecting Gas cylinder	17
Lighting your BBQ	18
Food Safety	19
Tips for use	20
Storage	21
Cleaning and care	22
Troubleshooting	23-24
Guarantee and customer services	25
Notes	26-27

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS **READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

WARNING:

- The Barbeque must be installed on a secure level base prior to use.
- Read the instructions before using the appliance.
- Always light the barbecue with the lid open.
- Check and clean the grease trays regularly.
- The gas hose should be checked regularly for leaks (especially after long breaks).
- **NEVER** use water to extinguish flames.
- Turn off the gas supply at the gas cylinder after use.
- Any modification to the appliance may be dangerous and will void the guarantee.
- Do not store or use gasoline or mentholated fuels or any other flammable vapors and liquids in the vicinity of this appliance. Never light a gas grill with gasoline or similar flammable fluids.
- When the wind speed is above 7 km/h don't use the appliance facing in to the wind as this may cause the flame to extinguish.
- **NEVER** mount the gas cylinder under the appliance or near any parts of the appliance which becomes hot as this could result in serious injury or death.
- Use protective heat resistant gloves (not provided) when handling particularly hot components.



- The appliance must be installed with 1m clearance in all directions around the appliance and should not be used underneath any overhead obstruction or in an enclosed space.
- In the event of a gas leak, turn off the gas supply at the gas cylinder, extinguish any open flames and keep the lid open. If the leak continues contact your local gas dealer immediately.
DO NOT USE AN OPEN FLAME TO CHECK FOR GAS LEAKS
- Always test the gas line for leaks with soapy water. If there are leaks you should see bubbles forming.
- The lid must always be open when lighting the appliance.
- Be prepared if an accident or fire should occur. Know where the first aid kit and fire extinguishers are and how to use them.
- Use only dry powder fire extinguishers on gas flames.
- Do not place any unopened glass or metal container on the grill. Pressure may build up and cause the container to burst, possibly resulting in serious personal injury or damage to the appliance.
- **WARNING! This barbecue will become very hot, do not move it during operation or whilst hot.**
- **Do not use indoors or in enclosed spaces. Ensure there is adequate ventilation.**
- **WARNING! Do not use spirit or petrol for lighting or re-lighting. Use only firelighters complying to EN 1860-3.**
- **WARNING! Do not allow children or pets near the BBQ whilst lit or hot.**


WARNING! Do not use the barbecue in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats. Danger of carbon monoxide poisoning.

SAFETY CHECKS BEFORE USE


- If you smell gas shut off gas to the appliance and at the cylinder, extinguish any open flames, open lid and if the odour continues, keep away from the appliance and immediately call your gas supplier or the fire brigade. Leaking gas may cause a fire or explosion which can cause damage to property, serious bodily injury, or death,.
- Never operate this appliance unattended.
- Check hose before each use of grill for damage, cracking, abrasions or cuts. If the hose is found to be damaged in any way, do not use the grill.

Technical data

G2S Ltd. Swan Lane Hindley Green Wigan, WN2 4AY United Kingdom		GEORGE FOREMAN 3 BURNER GAS BBQ GFGBBQ3B Pin Code: 0063CN7292		
Country of Destination	Appliance Category	Gas and Supply Pressure	Main Burner Injector Size Ø	Model No.: GFGBBQ3B
				Total Nominal Heat inputs (Hs)
BE, CH, CY, CZ, ES, FR, GB, GR, IE, IT, LT, LU, LV, PT, SK, SI	I3+ (37) 	Propane (G31) 37 mbar	0.86mm	9.0kW 642g/h
BE, CY, DK, EE, FI, HU, LT, NL, NO, SE, SI, SK, RO, HR, TR, BG, LU, MT	I3B/P (30) <input type="checkbox"/>	Butane/Propane 30 mbar	0.86mm	9.0kW 654g/h
AT, CH, DE, SK	I3B/P (50) <input type="checkbox"/>	Butane/Propane 50 mbar	0.75mm	9.0kW 654g/h
PL	I3B/P (37) <input type="checkbox"/>	Butane/Propane 37 mbar	0.82mm	9.0kW 654g/h
<p>Use outdoors only. Read instructions before using the appliance. The gas cylinder should not be placed inside the BBQ. Warning : Accessible parts may be very hot. Keep young children away. Made in China</p>				 0063-18

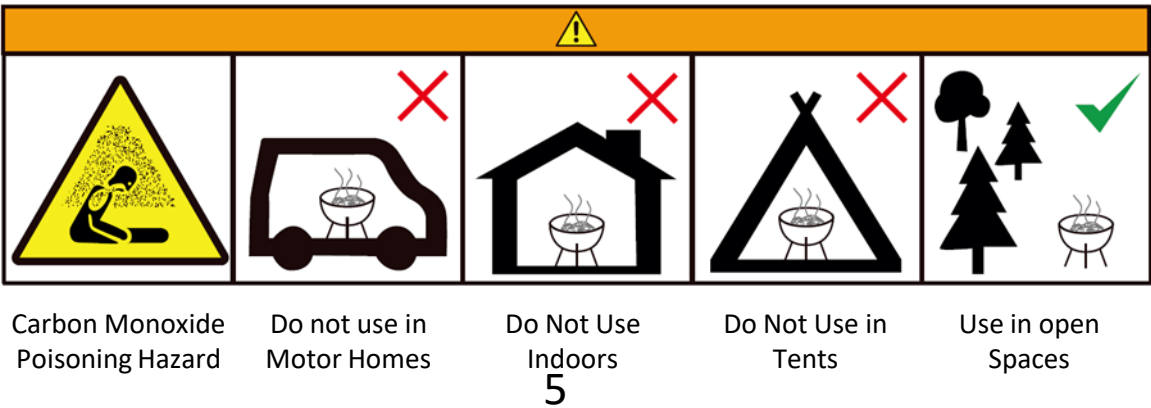



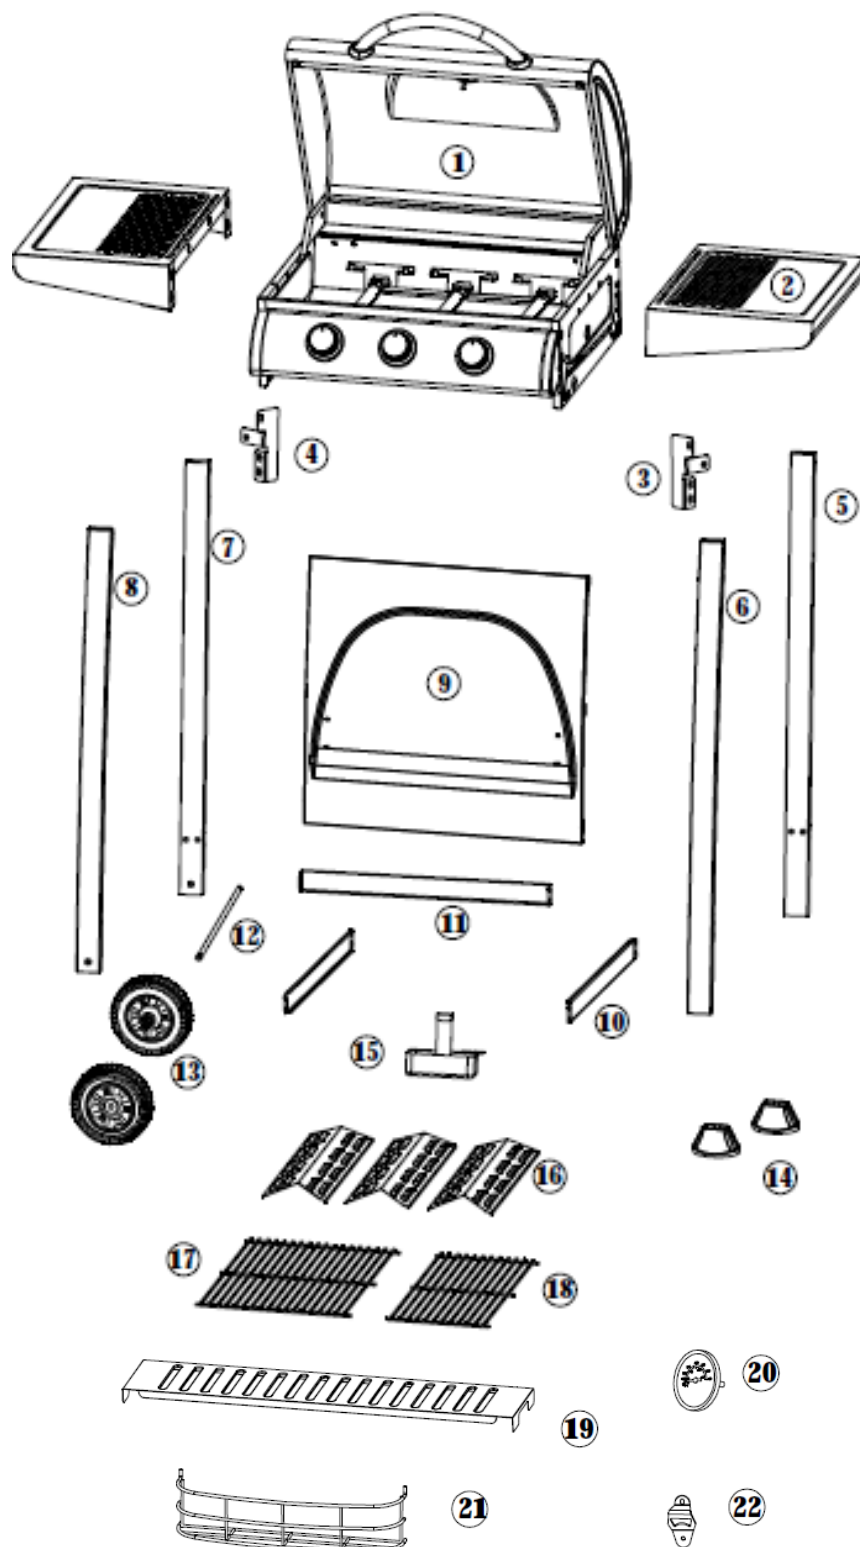

























BBQ FEATURE DIAGRAM



BBQ PARTS LIST

PART	DESCRIPTION	QTY
1	Barbeque	1
2	Shelves	2
3	Right Bracket	1
4	Left Bracket	1
5	Right Back Leg	1
6	Right Front Let	1
7	Left Back Leg	1
8	Left Front Leg	1
9	Front Fascia	1
10	Side Support	2
11	Back Support	1
12	Wheel Axle	1
13	Wheel	2
14	Rubber Anti-Slip Feet	2
15	Grease Drip Tray	1
16	Flame Tamers	3
17	Left Grill Rack	1
18	Right Grill Rack	1
19	Warming Rack	1
20	Thermostat	1
21	Condiment Rack	1
22	Bottle Opener	1
A	M5 55mm Bolt	16
B	M5 10mm Bolt	12
C	M5 Hexagonal Nut	12
D	R Clip	2
E	Plastic Washer	2
F	M4 8mm Bolt	2

1 *1 	2 *2 	3 *1(R) 
4 *1(L) 	5 *1(RB) 	6 *1(RF) 
7 *1(LB) 	8 *1(LF) 	9 *1 
10 *2 	11 *1 	12 *1 
13 *2 	14 *2 	15 *1 
16 *3 	17 *1 	18 *1 
19 *1 	20 *1 	21 *1 
22 *1 		
A M5-55*16 	B M5-10*12 	C M5*12 
D *2 	E *2 	F M4-8*2 


You will need...

- Cross Head Screwdriver
- Adjustable Spanner


BBQ ASSEMBLY

Assembling the Right Shelf

1. Place right shelf aligned with the two screw holes.
2. Using the screws (B) from the inside, screw onto the shelf.

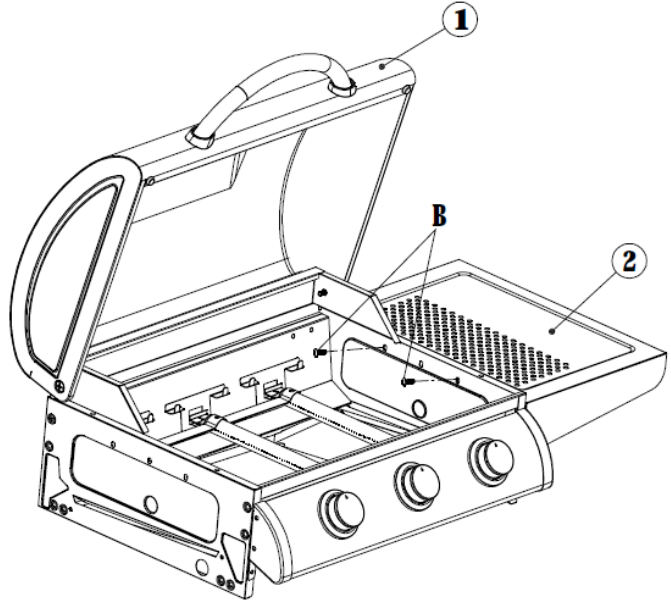


You will need:

 


Assembling the Left Shelf

1. Place left shelf aligned with the two screw holes.
2. Using the screws (B) from the inside, screw onto the shelf.

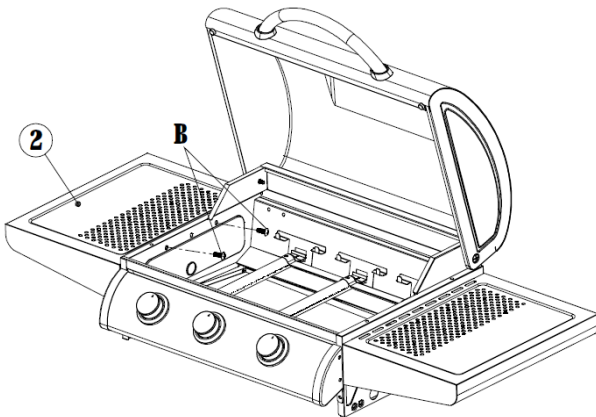


You will need:

 

BBQ ASSEMBLY

Attaching the Right Legs

1. Line up the rear right leg (5) with the screw holes underneath the barbeque.
2. Using bolt (A) screw into the second hole from the top.
3. Repeat the process with the front right leg (6).

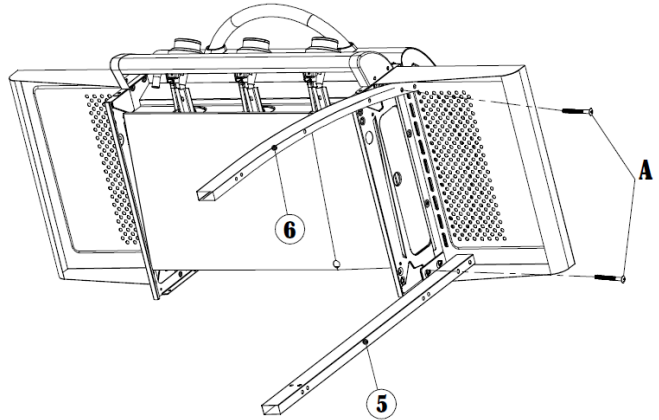


You will need:

A		2PCS
----------	--	-------------

Attaching the Left Legs

1. Line up the rear left leg (7) with the screw holes underneath the barbeque.
2. Using bolt (A) screw into the second hole from the top.
3. Repeat the process with the front left leg (8).

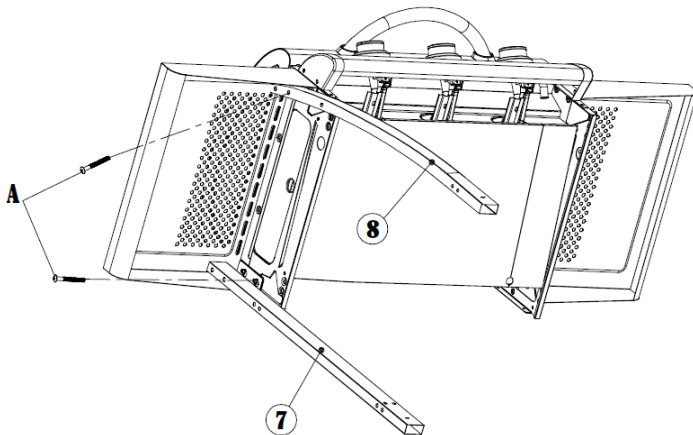


You will need:

A		2PCS
----------	--	-------------


 
BBQ ASSEMBLY

Attaching the Front Plate

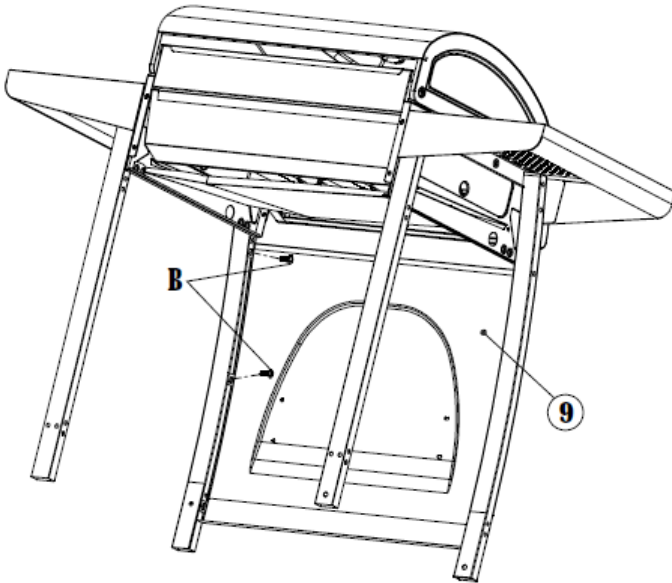


1. Line the front plate (9) with the front legs screw holes with the flat fascia facing down.
2. Using the screws (B) attach the plate (9) on the inner legs.

You will need:



B			4PCS
----------	---	--	-------------

Attaching the Crossbars

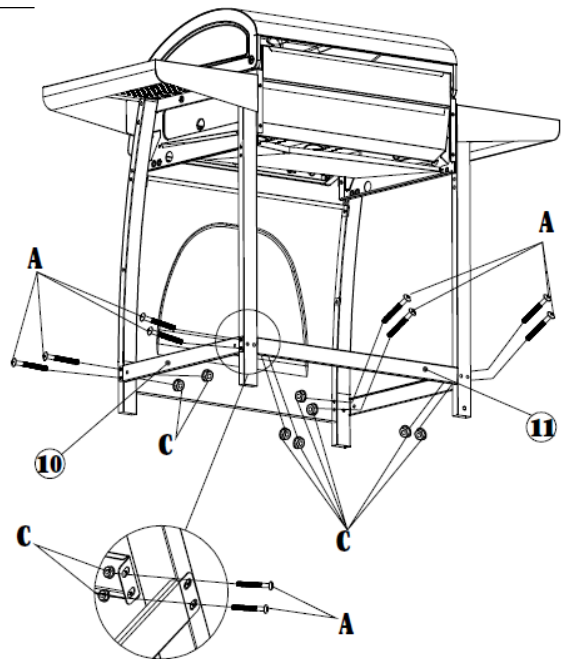1. Hold the back support (11) in position by placing 4 of the bolts (A) through the holes in the back legs
2. Attach the bent end of the side supports (10) onto the bolts (A) that have been passed through the back legs and secure using 4 of the screw nuts (C).
3. Secure the front end of the side supports to the front legs using 4 of the bolts (A) and 4 of the screw nuts (C)




You will need:

A		8PCS
C		8PCS

BBQ ASSEMBLY

Attaching the Wheels

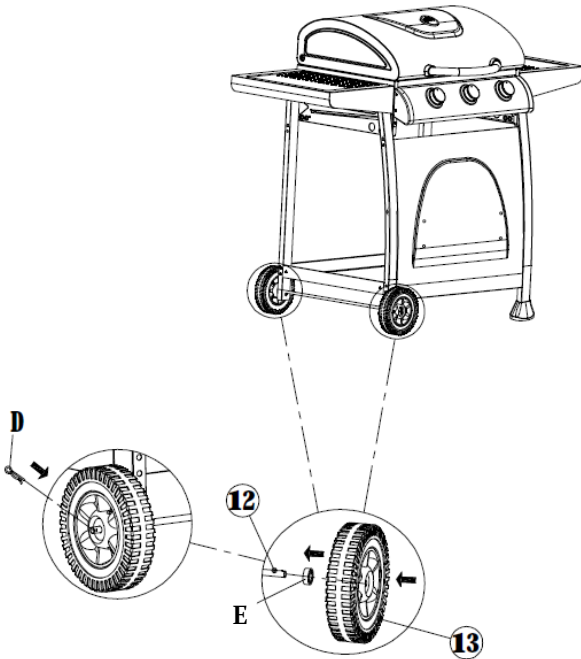


1. Push the bar (12) through the holes on the base of the left legs.
2. Attach a washer (E) on the outside of both sides of the bar (12).
3. Attach a wheel on both sides of the bar (12).
4. Push an R clip through the hole of the bar (12) to secure the wheels to the barbeque.

You will need:

E		2PCS
D		2PCS


Attaching the Feet

1. Lay the barbeque on its left hand shelf.
2. Push the feet (14) onto the right legs.
3. Gently stand the barbeque upright.

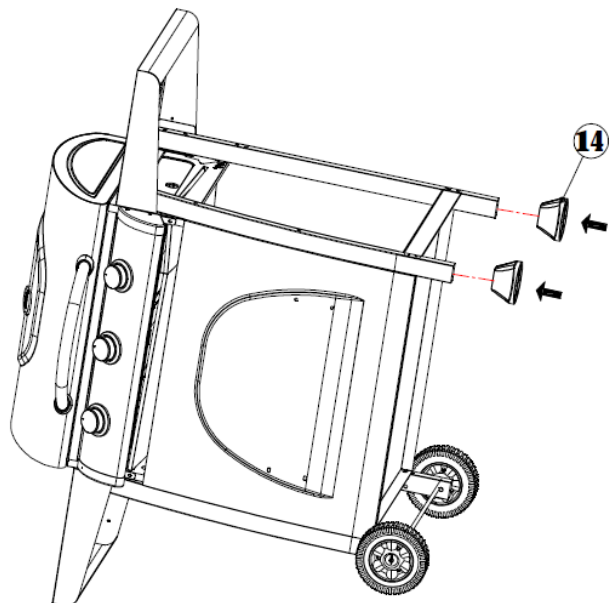

BBQ ASSEMBLY

Attaching the Rear Bracket

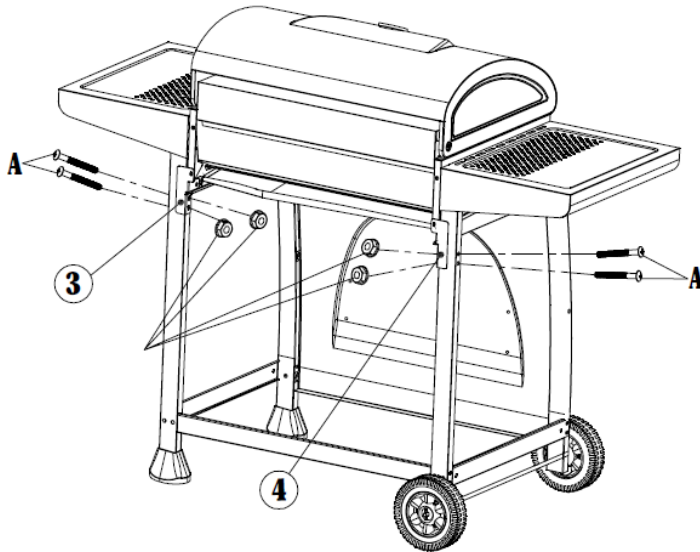


1. Place the left bracket (3) aligning the screw holes at the top of the rear right leg (5).
2. Push 2 bolts (A) through the leg and into the bracket.
3. Secure the bolts with the screw nuts (C).
4. Repeat the process on the left rear leg using bracket (4).

You will need:

A		4PCS
C		4PCS

Assembling the Brackets

1. Using screw (B), fix the top of the left bracket to the barbeque.
2. Repeat the process with the right bracket.

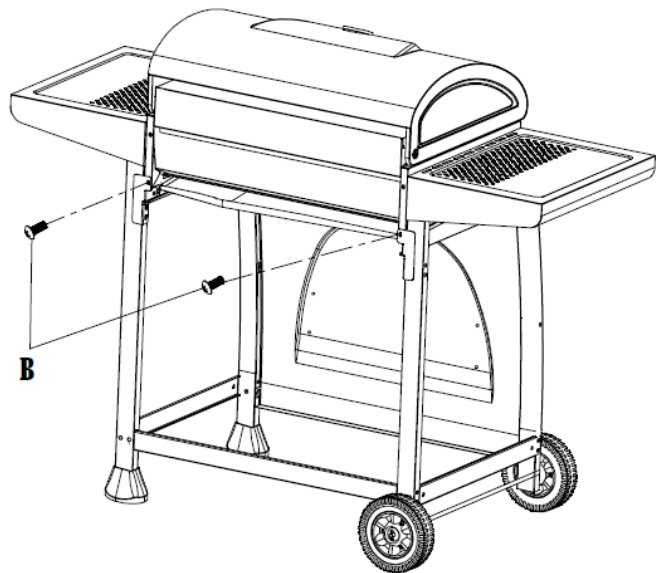


You will need:

B		2PCS
----------	--	-------------

BBQ ASSEMBLY


Attaching the Brackets

1. On the sides of the rear legs, secure the mounting bracket to the body using the bolts (B) on each side.

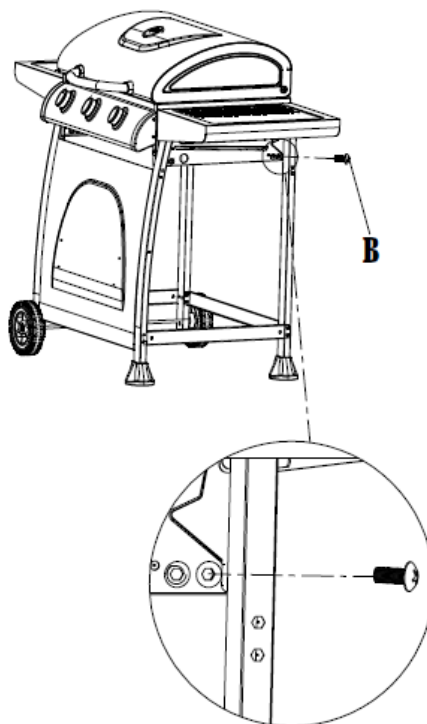


You will need:

 B



2PCS


Attaching the Grease Tray

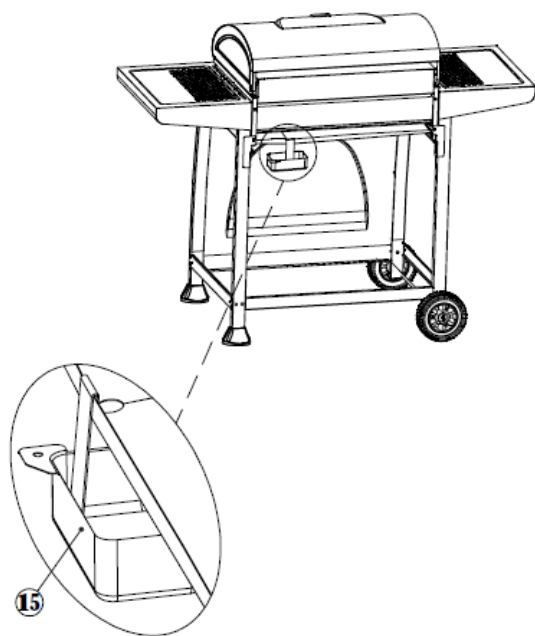

1. Hang the grease collection tray (15) over the tray on the rear of the barbeque.


BBQ ASSEMBLY

Installing the Flame Tamers

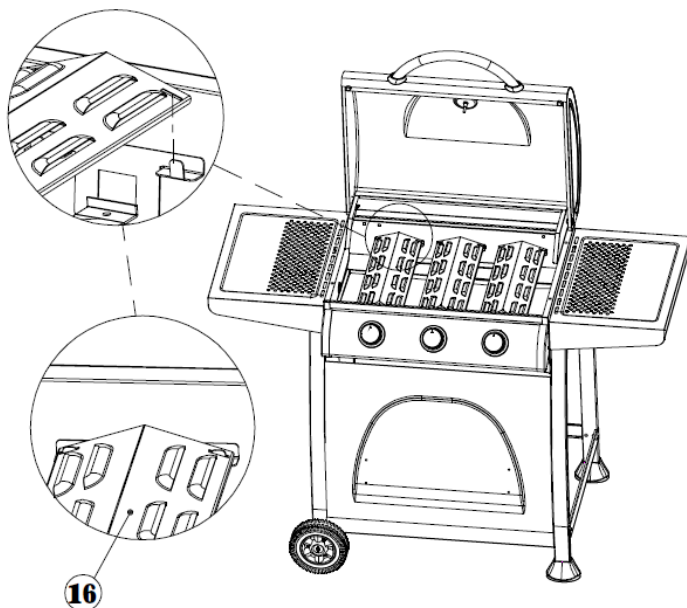

1. Place the flame tamers (16) across the three bars of the barbeque onto the hooks.
2. Ensure all the covers are flat and flush.


Fitting the Grill Racks

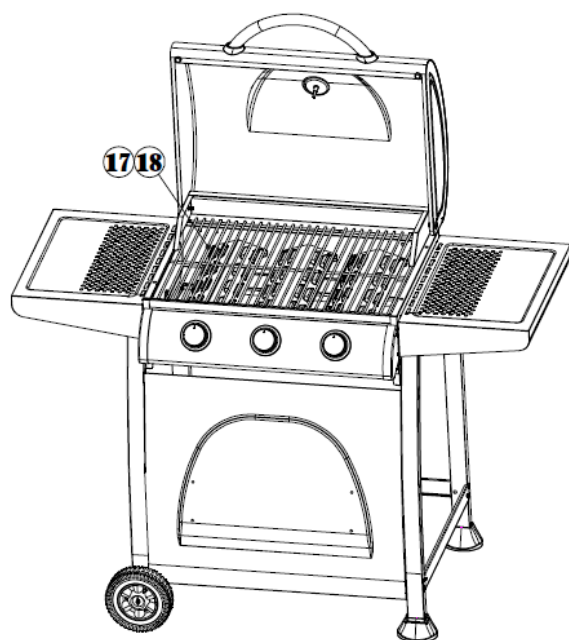

1. Place the left grill rack (17) onto the barbeque so it is resting on the lip.
2. Repeat the process with the right grill rack (18).


BBQ ASSEMBLY

Attaching the Thermostat

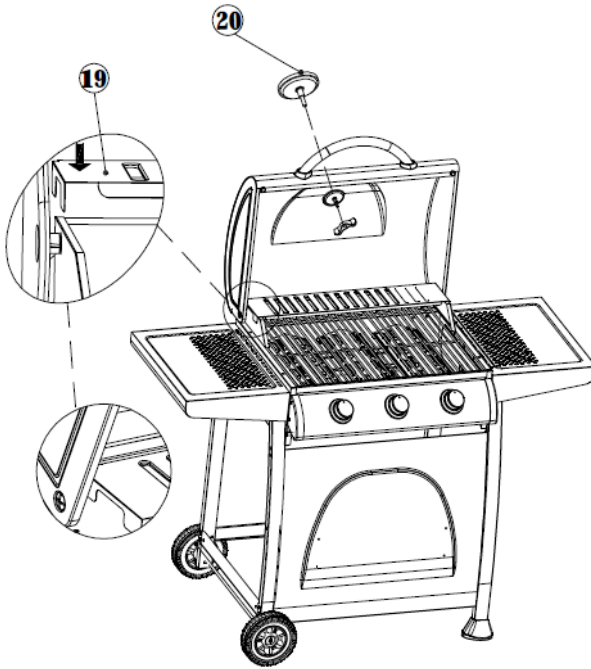

1. Slot the warming rack (19) on to the frame of the gas BBQ so that the rear of the warming rack is over the back plate of the frame.
2. Push the thermostat (20) through the hole on the lid.
3. On the underside, attach the wingnut to the screw on the thermostat and tighten.

Attaching the Bottle Opener and Condiment Rack

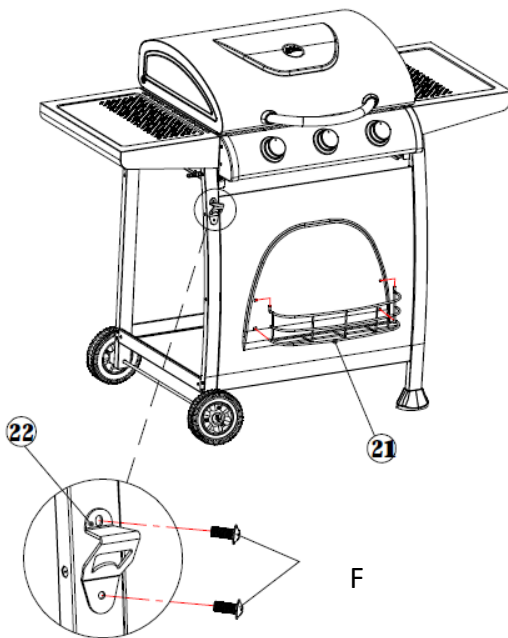

1. Align the top hole of the bottle opener (22) with the screw hole on the left front leg.
2. Using bolt (F), screw the top of the bottle opener (22) to the leg.
3. Repeat for the bottom hole.
4. Take the condiment rack (21) with the upward facing hooks at an angle, slot them into the top holes on the front fascia (9).
5. Lower the rack and the bottom hooks will go in.


F



2PCS

BBQ ASSEMBLY

Checking for Gas Leaks

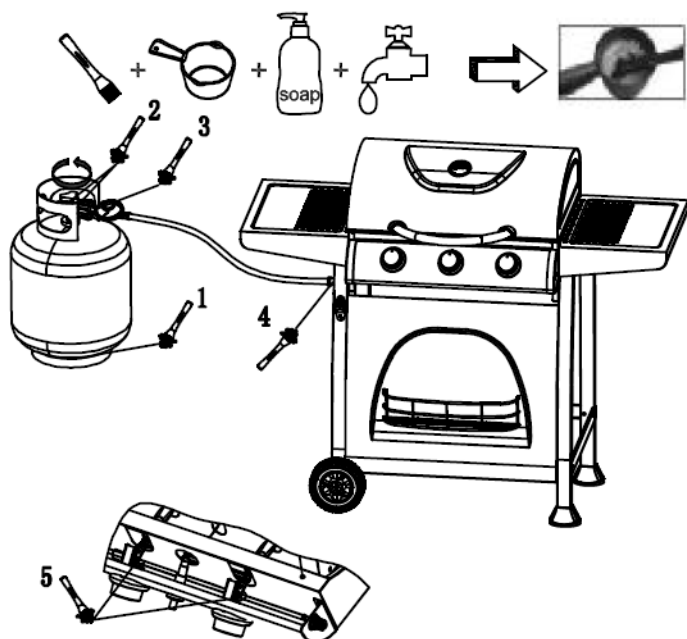

1. When fully attached, turn on the gas cylinder.
2. Using soapy water, rub along the length of the gas hose and the valve.
3. If there are any leaks, bubbles will form. Immediately turn off the gas and replace the hose.

WARNING:

Do not operate the BBQ with the gas cylinder housed within the BBQ legs

ATTACHING YOUR GAS CYLINDER

After purchasing your gas cylinder you will then be ready to set it up with your gas grill. **When changing the gas cylinder it must not be near any source of ignition such as matches, cigarettes, direct sunlight or any open flame.**

Position the gas cylinder at the left side of your gas grill, keeping in mind that the bottle must be kept away from heat and in a safe position. **NEVER** store the gas cylinder inside the barbeque or behind the front plate.

- When ready to use your gas grill place the regulator onto the gas bottle valve and push down firmly until you hear it click in to place.
- Attach the hose to the regulator gas outlet, you will need to push firmly as it is a tight fit.
- Once the hose is connected to regulator it must be secured in place using one of the two jubilee clips supplied.
- Attach the other end of the gas hose to the gas inlet on the appliance, again you will need to push firmly as it is a tight fit.
- Once the hose is connected use the second jubilee clip to secure in place.
- Ensure that the hose is not subjected to twisting which will affect the gas flow when installing your gas grill. Also the hose must not have undue tension and must not touch any part of the gas grill which may be hot.
- Once the gas cylinder is connected to the appliance you can then start the flow of gas by turning the small lever on the regulator from its closed position (vertical) to its open position (horizontal).

WARNING: Always test gas line for leaks by rubbing soapy water around all connections.

DISCONNECTING **YOUR GAS CYLINDER**

When you have finished using the appliance you must remove the gas cylinder.

In order to do this you turn the small lever on the regulator from its open position (horizontal) to its closed position (vertical).

Once the gas supply has been turned off you then need to remove the regulator from the gas cylinder. To do this you need to push in the button release which is located below the small lever on the regulator and lift away from the gas cylinder.

LIGHTING YOUR BBQ


USING THE AUTOMATIC IGNITION

Caution: The lid must be always open when lighting the barbeque. Do not stand with your face directly over the gas grill when lighting it.

1. Ensure the dial is in the “OFF” position.
2. Turn the gas cylinder valve to the “ON” position at the regulator.
3. To create a spark, press the control dial (A) into the BBQ and hold in position for 3-5 second to allow the gas to flow.
Then turn the control dial anticlockwise to “HIGH” (B).
4. This will create a spark to the burner lighting tube (C) and this should make a “snap” sound and produce an orange flame from the burner lighting tube at the left side of the burner (D)
5. Continue to hold the control dial in position for a further 2 seconds to allow the gas to flow (E) and ensure ignition.

On the “HIGH” setting, the flame should be approximately 12-20mm (1-2cm) high with an orange flame.

Turn the gas control fully anticlockwise for the minimum heat setting

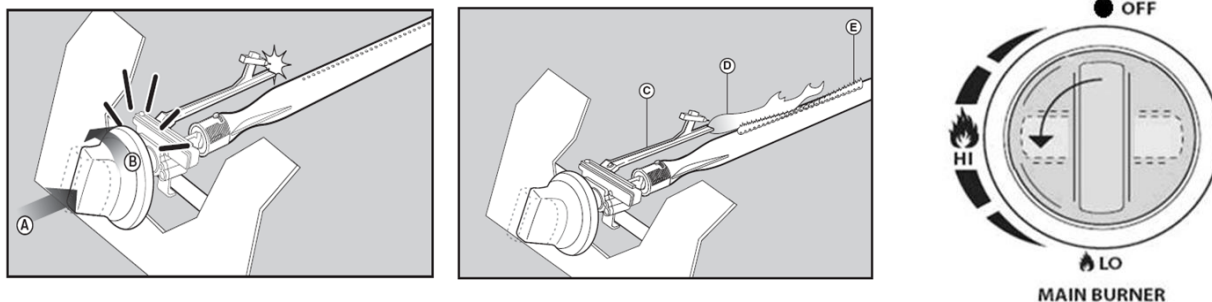

Warning : If the burner still does not light ,turn the burner control dial to” OFF”, ensure the lid is open and wait 5 minutes to let the gas clear before lighting again.

Warning: If the burner goes out while the grill is in operation, turn the control dial to the “OFF” position. Open the lid and wait 5 minutes before attempting to relight the BBQ.

FOOD SAFETY

Thoroughly defrost frozen meat and poultry in the refrigerator before cooking. Keep raw meat and poultry separate from cooked foods.

Always wash hands before and after handling raw meat and poultry, and before handling any ready to eat foods.

Wipe and disinfect all surfaces that have been in contact with raw meat and poultry.

When barbecuing meat and poultry, make sure the barbecue is really hot. Place the larger, thicker portions furthest away from the most intense heat to ensure thorough cooking without burning and turn regularly.

Use separate utensils for handling raw meat/poultry and cooked food on the barbecue, or wash them thoroughly between uses.

To check whether meat, particularly poultry, is cooked, pierce the flesh with a skewer or fork; the juices should run clear. Ensure the product is piping hot throughout.

TIPS FOR USE

It is important to preheat the grill before starting to barbeque.

Follow the Lighting your BBQ instructions on Page 18, then turn control dial to the “HIGH” position and close the lid to preheat the grill.

This will take 10 to 15 minutes depending on conditions such as air temperature and wind. After preheating, you can adjust the control dial as desired.

WARNING: the lid will become hot, only use the handle to open the lid.

Food can be barbecued with the lid up or down. Cooking with the lid down will ensure more even cooking.

For every 5 minutes that the lid is down, open the lid for 1 minute to release heat.

To save energy, we recommend:

- Minimising the time the lid is open
- Turn off the BBQ and gas supply as soon as cooking is completed
- Do not preheat the grill for longer than 10 to 15 minutes
- Do not use a higher heat setting than is required.

STORAGE

Your gas bottle must be stored outdoors in a well ventilated area and must be disconnected from your gas grill when not being used.

Ensure that you are outdoors and away from any sources of ignition before attempting to disconnect your gas bottle from your barbeque.

We recommend that your barbeque is stored indoors, or in a garage or shed.

When using your barbeque after a period of storage, always check for damage to the gas hose, gas leaks and any obstructions in the burner before using.

CLEANING INSTRUCTIONS

Ensure the appliance is completely cool before cleaning.

Empty the grease tray after each use and wash with warm soapy water.

Grill trays should be cleaned by soaking and washing with warm soapy water.

The interior surfaces of the grill housing cover should also be washed with warm, soapy water. Use a wire brush, steel wool or a scouring pad to remove stubborn grease.

Periodically check the burner to see that it is free from insects and spiders which may clog the gas system and interrupt the gas flow.

Ensure the venturi pipes on the burner are clean, and ensure there are no obstructions. We recommend that you use a pipe cleaner to clean the venturi pipe area regularly.

Any modifications of this appliance may be dangerous and can lead to danger of injury or death. Your warranty is void if any modifications are made by any unauthorised party.

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	PREVENTION/ SOLUTION
Gas leaking from cracked/cut/burned hose	Damaged hose	Turn off gas at LP tank, if hose is cut or cracked, replace hose.
Gas leaking from LP tank	Mechanical failure due to resting or mishandling	Turn off LP tank valve and replace.
Gas leaking from LP tank valve	Failure of tank valve from mishandling or mechanical failure	Turn off LP tank valve and replace.
Gas leaking between LP tank and regulator connection	Improper installation, connection not tight, failure of rubber seal	Turn off LP tank valve, remove regulator from cylinder and visually inspect rubber seal for damage.
Fire coming through control panel	Fire in burner tube section of burner due to partial blockage	Turn off control knobs and LP tank valve. After fire is out and grill is cold, remove burner and inspect for spider nests or rust.
Grease fire or continuous excessive flames above cooking surface	Too much grease buildup in burner area	Turn off LP Tank. Leave lid open to allow flames to die down. After cooling, clean food particles and excess grease from inside firebox area, grease cup/pan/tray, and other surfaces
Burner will not light using ignitor	Gas issues 1. Burner not engaged with control valve 2. Obstruction in burner 3. No gas flow 4. Coupling nut and LP tank valve not fully connected.	1. Make sure valve are positioned inside of burner tubes. 2. Ensure burner tube is not obstructed with spider webs or other material, see cleaning section of use and care 3. Make sure LP tank is not empty. If LP tank is not empty, refer to "sudden drop in gas flow." 4. Turn the coupling nut approximately one-half to three-quarters

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	PREVENTION/ SOLUTION
Burner will not light using ignitor	Electrical issues: 1. Electrode cracked or broken;" sparks at crack." 2. Electrode tip not in proper position 3. Wire and/or electrode covered with cooking residue. 4. Wires are loose or disconnected 5. Wires are shorting (sparking) between ignitor and electrode. 6. push button sticks at bottom sparking between ignitor and electrode	1. Replace electrode. 2. Tip of electrode should be pointing toward port hole in burner. The distance should be 1/8" to 3/16". Adjust if necessary. 3. Clean wire and or electrode with rubbing alcohol and clean swab. 4. Reconnect wires or replace electrode/wire assembly. 5. Replace ignitor wire 6. Replace ignitor 7. Inspect wire insulation and proper connection. Replace wires if insulation is broken.
Sudden drop in gas flow or low flame	1. Grease buildup. 2. Excessive fat in meat. 3. Excessive cooking temperature	1. Clean burners and inside of grill/ firebox 2. Trim fat from meat before grilling.
Flames blow out	1. High or gusting winds. 2. Low on LP gas. 3. Excess flow valve tripped.	1. Turn front of grill to face away from wind or increase flame height. 2. Refill LP tank. 3. Refer to "sudden drop in gas flow" above.
Persistent grease fire	Grease trapped by food buildup around burner system.	Turn knobs to OFF. Turn gas off at LP tank. Leave lid in open position and let fire burn out. After grill cools, remove and clean all parts.
Flashback... (fire in burner tube(s))	Burner and burner tubes are blocked	Turn knobs to OFF. clean burner and/or burner tubes. See burner cleaning section of use and care manual
Flare-up	1. Grease buildup. 2. Excessive fat in meat. 3. Excessive cooking temperature	1. Clean burners and inside of grill/ firebox 2. Trim fat from meat before grilling. 3. Adjust (lower) temperature

GUARANTEE AND **CUSTOMER SERVICES**

This product is guaranteed for **12 months** from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 9am – 5pm

Or visit us at **www.productcare.co.uk**

NOTES

NOTES

GEORGE FOREMAN[®]

3 BURNER GAS BBQ GFGBBQ3B

Made by G2S under license.
G2S Ltd, Wigan, WN2 4AY
George Foreman is the registered trademark
of Spectrum Brands (U.K.) Ltd.

Revision 2.1