

# LIGHT UP HOVER FOOTBALL

Please read this manual carefully before using this product and keep for future reference

## How to use

- Simply unscrew and remove the battery cover on the back of the product and insert 3 x AA batteries. Close the battery cover, and securely reapply the screw.
- Move the power switch on the back of the product to "ON".
- Your football is now ready to be used and can be placed on both tile and hardwood floor.
- All you have to do is kick the football and it will move!
- You will notice that the football plays music and lights up too!
- Important – extra care must be taken when using this football to ensure that you do not break or damage any items.
- When you have finished using the football, move the power switch to "OFF".
- Adult supervision is required.

## BATTERY ADVICE

• Requires 3 x 'AA' 1.5V batteries. Not Included. • Batteries should only be replaced by an adult. • Alkaline batteries are recommended. • Do not mix old and new batteries. • Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. • Do not re-charge non-rechargeable batteries. • Rechargeable batteries are only to be charged under adult supervision. • Rechargeable batteries are to be removed from the product before being charged. • Ensure batteries are inserted with the correct polarity. • Exhausted batteries should always be removed. • The terminals should not be short circuited. • Remove the battery cover and insert batteries. Replace battery cover before use.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities. Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

**#winning**

Manufactured & Imported by

**The Source Wholesale**

The Atrium, Curtis Road, Dorking,  
Surrey RH4 1XA

**The Source Wholesale BV**

Joop Geesinkweg 701,  
1114 AB Amsterdam-Duivendrecht

**The Source Wholesale Inc**

2055 Limestone RD STE 200-c  
Wilmington, DE 19808 USA

Supplier item reference: CH35827

99760 11/24

Please retain the important information on this packaging for future reference.  
customer.services@giftuniverse.com



FR

Agés 8+



Made in [ ]