

RED5

WIRELESS TYPHOON 101 SPEAKER




Included

speaker 1, remote 1, Type-C USB cable 1, 3.5mm audio cable 1

IMPORTANT

- We recommend to fully charge before first use: charging time is approximately 6-8 hours.
- After this, the charging time is approximately 3-4 hours.
- Insufficient battery level will affect the output volume and sound quality.
- Ensure the speaker is turned off whilst charging.
- Please only use the cable provided for charging.
- Battery Protection Mode will turn on if the speaker output is too high for a continued period of time and the volume will then reduce.
- When Battery Protection Mode is on, some of the speaker functions may be affected (including Wireless connection, lighting etc).
- High volume output for a long period of time may cause serious damage to the battery, especially if the battery is at a low voltage state.
- When using the remote control to turn off the speaker, this will turn the speaker into Sleep Mode. To completely turn the speaker off, use the on/off switch on the speaker panel.
- High volume can cause hearing loss. Listening at a high volume for a long period of time can cause permanent hearing damage.

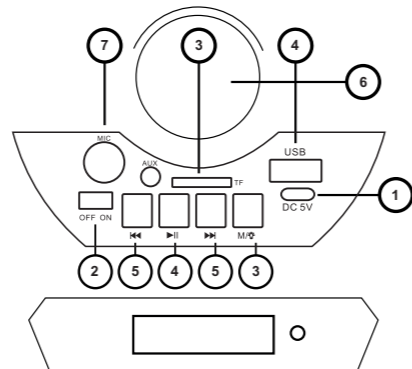

Speaker Instructions

Fully charge the speaker before you use it for the first time. Please only use the cable included for the charging.

Charge time is approx. 6-8 hours. Power off the speaker while it is charging.

1. Connect the Type-C USB cable for charging, during charging, the red indicator will be on. Light will go off when fully charged.
2. When you turn on the speaker, it will enter wireless mode if there is no USB/TF Card/ Aux. Turn on the bluetooth of your mobile or tablet, search for device name 101263 and click to connect the device. Then you can start to play music through the speaker.

Wireless/USB/Micro SD/FM/AUX IN/karaoke/TWS/LED lights

With wireless technology

With FM radio


Support USB/Micro SD/AUX

With color changing lights

3. Press Mode button to toggle between wireless/Aux/FM/USB/Micro SD card. Press and hold on the Mode button to turn on/off the LED lighting.
4. Press Play/Pause button to play or pause under wireless/Aux/FM/USB/Micro SD card; Under FM radio mode. Press and hold on the Play/Pause button to auto search the radio station; In order to provide a better signal receiving, please use the Aux cable or Type-C USB cable as the antenna;
5. Press Previous or Next button for previous song or next song under wireless/USB/Micro SD card mode, under FM radio mode, will change to previous station or next station;
6. Volume knob, turn the volume knob to decrease or increase the volume.
7. Mic input microphone for karaoke.
8. TWS connection: turn on two speaker units, under wireless mode, press and hold on Play/Pause button for 3 seconds, device will auto search each other and connect with each other; Press and hold on can also disconnected the speakers.

Remote Control Instructions

1. Power button for on/off
2. Mode button, press to toggle between different function; press and hold to turn on/off the LED lighting.
3. Mute button, press to turn speaker into mute status.
4. Play/Pause/Back/Next song
5. EQ - Equaliser
6. Volume decrease, volume increase
7. RPT: repeat one song or repeat all
8. U/SD: press to change to USB mode or Micro SD card mode
9. Numbers: enter number to choose the song you want to play; choose the FM radio station under FM mode.

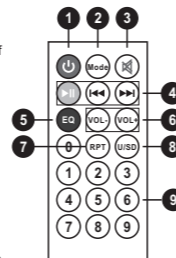

WARNING

TO REDUCE THE RISK OF FIRE OR SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION

TO REDUCE THE RISK OF FIRE OR SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL

Read these instructions

- Keep these instructions. Heed all warnings.
- Clean only with dry cloth.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not use this apparatus near water.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

SAFETY INSTRUCTIONS

When using electrical products basic safety precautions should always be followed. Keep the product and its accessories out of reach of children. This product is not a toy. This product contains no serviceable parts. If the product malfunctions or appears damaged, the unit should be recycled. Keep the product away from heat sources, direct sunlight and humidity areas. Ensure the product is well ventilated.

This product is intended for domestic use only.

Do not attempt to disassemble the speaker. Do not operate the product with wet hands. Do not operate the product if it has been exposed to water, moisture or any other liquid - to prevent against electric shock. Do not use the product for anything other than its intended use.

To prevent possible hearing damage, do not listen at high volume levels for long periods of time - this may also damage the product.

Care and Maintenance

Wipe the speaker with a dry soft cloth.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SPECIFICATIONS

Input: 5V, 1A
 Speaker power: 2X5W
 RMS: 2X5W
 PEAK: 2X5W
 Material: Plastic
 Battery Capacity: 2400mAh (around 5H at 50% VOL)
 with strap, with remote, USB cable

BATTERY WARNING

KEEP OUT OF REACH OF CHILDREN
 Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.



If the battery compartment (if applicable) does not close securely, stop using the product and keep it away from children.

No Obvious Symptoms

Unfortunately, it is not obvious when a button or coin battery is stuck in a child's oesophagus (food pipe). There are no specific symptoms associated with this. The child might:

- Cough, gag or drool a lot.
- Appear to have a stomach upset or a virus;
- Be sick;
- Point to their throat or stomach;
- Have a pain in their abdomen, chest or throat;
- Be tired or lethargic;
- Be quieter or more clingy than usual or otherwise "not themselves".
- Lose their appetite or have a reduced appetite.
- Not want to eat solid food/ be unable to eat solid food.

These sort of symptoms vary or fluctuate, with the pain increasing and then subsiding. A specific symptom to button and coin battery ingestion is vomiting fresh (bright red) blood. If the child does this seek immediate medical help.

The lack of clear symptoms is why it is important to be vigilant with "flat" or spare button or coin batteries in the home and the products that contain them.

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities. Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

Manufactured & Imported by

The Source Wholesale

The Atrium, Curtis Road, Dorking, Surrey RH4 1XA

The Source Wholesale BV

Joop Geesinkweg 701, 1114 AB Amsterdam-Duivendrecht

The Source Wholesale Inc

2055 Limestone RD STE 200-c, Wilmington, DE 19808 USA

Supplier item reference: DC-0254 **101263 09/24**
 customer.services@giftuniverse.com

RED5 Made in Shenzhen, China



Points de collecte sur www.quefairedemesdechets.fr

Please retain the important information on this packaging for future reference.