 
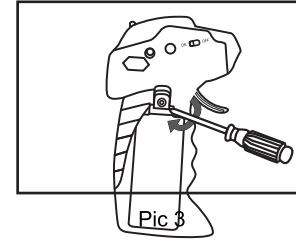 
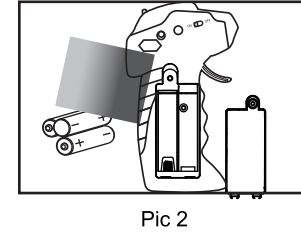 


FOLD

EN


### 3. REMOTE CONTROL BATTERY INSTALLATION

1. To open the battery cover, turn the screwdriver in counter clockwise direction. (See Pic 1)
2. Remove the battery cover. Install 3 "AAA" batteries in the battery compartment, following the polarity direction inside the remote control. (See Pic 2)
3. Install the battery cover, and tighten the screw in a clockwise direction. (See Pic 3)

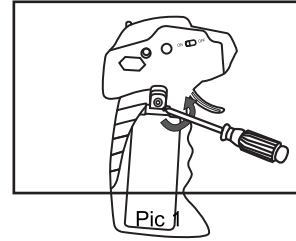


### 4. CHARGING THE FLYING UFO

1. When charging, the power switch must be in the "OFF" position. (See Pic 4)
2. To begin charging, plug the USB charging cable into the charging socket. Now plug the USB into any USB port. (See Pic 5)
3. When charging, the indicator shows a green light on the Flying UFO's body. When the light turns off, charging is complete. Charging time is about 20-30 minutes.

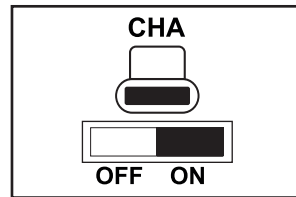

Pic 4

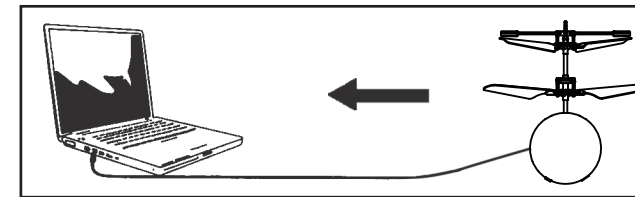

Pic 5

#### NOTE:

1. The flying UFO's wireless range will be affected if the remotes batteries are low.
2. If the flying UFO is not fully charged, take off and the maximum altitude may be affected.
3. If the flying UFO is damaged or deformed, it may affect flight performance. Please discontinue use.

#### BATTERY WARNING:

1. Do not mix alkaline, standard (carbon zinc), rechargeable (nickel hydride) batteries.
2. Do not leave the product unattended while charging.
3. The charging process and battery replacement should only be completed by an adult.
4. Store the product in a cool, dry and well ventilated area.
5. Do not mix old and new batteries.
6. Non rechargeable batteries should not be recharged.
7. Rechargeable batteries should be removed from the toy before being charged.
8. Store the product in a cool, dry and well ventilated area.
9. Depleted batteries should be removed.
10. It is recommended to only use batteries of the same or equivalent type.
11. Do not expose the battery or product to direct heat, light or water sources.
12. Ensure the product has cooled sufficiently before re-charging or handling. Charging the product while it is still hot/warm could cause swelling and damage to the product. If swelling does occur, do not attempt to charge or use the product.
13. Please remove the product from charge once the battery is fully charged. Overcharging the product could cause battery swelling and damage.
14. If the product begins to smell, change colour or become deformed/swollen, discontinue use immediately and do not attempt to recharge the battery.
15. If you do not intend to use the product for an extended period of time, please charge the battery to 50% of its capacity before storing.
16. Only use the provided charging cable.
17. Batteries should be inserted with the correct polarity.


Flying UFO Battery: 3.7V LI-Po Battery. Remote Control Battery: 3 x "AAA" Batteries.  
Flying UFO Play Time: About 5 minutes.

### 5. FLIGHT ENVIRONMENT

1. Use indoors where air is still. Do not use near fans, air conditioners, lamps, or other hazards.
2. If using outside, use in an open, safe area. Avoid air currents, winds, or drafts which may affect performance.
3. Do not operate in direct sunlight. An extreme light environment may interfere with the control system.

### 6. CONTROLS

1. Set the switch on the Flying UFO to ON and it will light up. Set the switch on the controller to ON and the LED will flash.
2. Pull the trigger on the controller and release. The LED will stop flashing and remain on.
3. Hold the UFO in one hand and the controller in the other. Press the button on the side of the controller to start the blades rotating.
4. Release the Flying UFO and gently squeeze the trigger to make it go up and down.

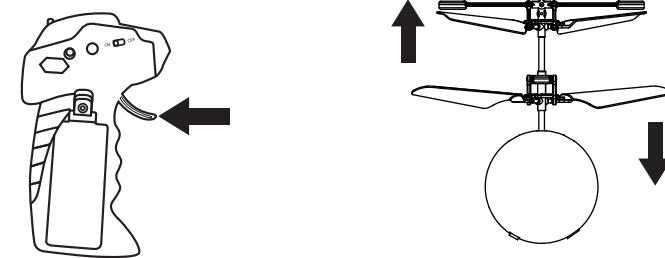

### 7. SAFETY RULES

1. Please read this manual carefully before use.
2. Small parts should be kept out of the reach of children to avoid accidents.
3. Do not leave batteries in high temperatures, or heated areas such as near a fire or stove.
4. Keep this toy at least 6 feet away from other people when flying.
5. Do not disassemble or alter this product as it may cause the product to malfunction and be dangerous.
6. Ensure that the toy is within sensing range for easy control.
7. Adult supervision is always recommended.

### 8. CARE AND MAINTENANCE

1. Use a damp cloth to clean this product. Do not use any detergents to clean this product.
2. Avoid prolonged exposure to sun or heat.
3. Do not put the toy in water. Otherwise it will damage electronic components.
4. When not in use, you should turn the power off the remote controller and flying UFO.
5. When not using for a long time, you should remove the batteries in the remote control.
6. It is recommended to use new alkaline batteries for the remote control, to ensure the toys best performance.

INSIDE

FOLD

### 9. TROUBLESHOOTING

Problem	Cause	Solution
Remote control won't work	1. Power switch is not turned on. 2. There are no batteries installed or batteries are improperly installed. 3. Batteries are dead.	1. Switch power button to ON position. 2. Ensure batteries are installed in the correct polarity position indicated. 3. Replace batteries.
UFO can't ascend	1. Main blade rotation speed is too slow. 2. Flying UFO's power is too weak.	1. Replace the batteries.
UFO won't work	1. Remote control is not turned on. 2. Flying UFO is not turned on.	1. Switch power button to ON position. 2. Switch power button to ON position.
UFO suddenly falls	1. Low battery power. 2. Light interference.	1. Charge flying UFO or replace the remote batteries. 2. Fly in a different environment to avoid strong light.

#### WARNING:

1. Make sure you always use new or fully charged batteries in the controller.
2. Do not touch the flying UFO while it is flying. Do not fly near obstacles, people, or pets.
3. Do not fly if the UFO is damaged or the batteries are low.
4. Adult supervision is always recommended.

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities. Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

**REDS**

Manufactured & Imported by

The Source Wholesale  
The Atrium, Curtis Road, Dorking,  
Surrey RH4 1XA

The Source Wholesale BV  
Joop Geesinkweg 701,  
1114 AB Amsterdam-Duivendrecht  
Supplier item reference: ZL012  
customer.services@giftuniverse.com

128455 06/25

Please retain the important information on this packaging for future reference.

Made in China




## Colour Changing FLYING UFO


## INSTRUCTION

Thank you for purchasing our product. In order to make it easier for you to use, we recommend that you read this manual carefully and keep for future reference.

### 1. PACKAGE CONTENTS

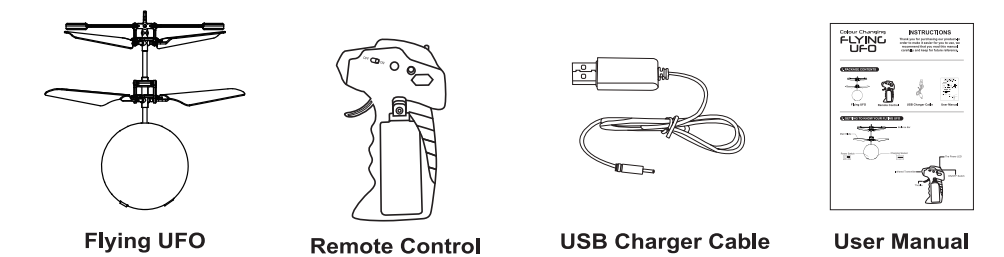

### 2. GETTING TO KNOW YOUR FLYING UFO

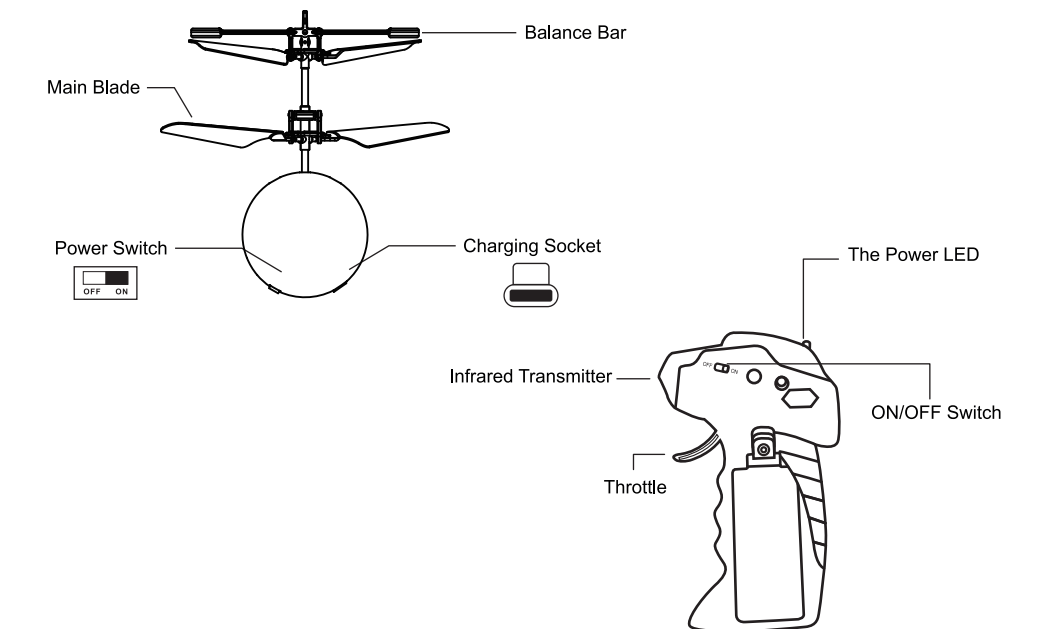

OUTSIDE