

正

280x210mm

反

Warranty certificate

Quality Description

Since its launch on the market, this product has received unanimous praise from consumers for its high quality, stability and performance. Choosing this product is the choice of "the most top-notch tool, the strongest driving force".

Warranty Description

1. Please read the user manual and safety access instructions carefully before use.
2. The warranty tool must ensure normal wear and tear of the components. If it is caused by human factors, it will not be guaranteed.
3. During the warranty period, if used incorrectly according to the operating instructions or dismantled or repaired by oneself, the warranty will not be granted. If repairs are required, they will be charged based on the price of machine parts and maintenance fees.
4. Users must return the machine to the maintenance center for repair and pay for the shipping and warranty fees themselves.

Warranty Contact Card

Model		Seal of distribution unit
Product name		
Distribution unit		
Unit of use		
Address		
Purchase date		

Certificate of conformity

The product has passed the inspection and is allowed to leave the factory.

Product model _____

Inspection number _____

Production date _____

Thank you for purchasing our company's products in order for you to use this product safely and satisfactorily, please carefully read the user manual and safety rules before use.

Main safety instructions (for all tools)

The instructions in this safety manual provide important information for the safe use of the product. Failure to comply with these instructions may result in serious injury and large-scale property damage.

1. When the tool is not in use or undergoing maintenance, failure replacement, or tool replacement, it is necessary to first unplug the power plug.
2. Use the power plug correctly and do not directly insert the wire into the plug.
3. In prevent accidental starting, it is necessary to ensure that the lock switch is turned off before inserting the plug into the power socket.
4. When working, it is necessary to fully pay attention to the workplace and look. Do not use tools when fatigued.
5. Check the damaged parts. Before using the tool, it is necessary to carefully inspect the cover or other parts of the tool for damage, check whether all movable parts are in the correct position, and whether the parts that must be fixed are securely fixed. Inspect these components that may affect normal operation. If there is any damage to the cover or other parts, please immediately ask a specialized store to repair or replace the switch if the tool is there is a problem, please ask a specialized service center to replace it and do not force it to be used.
6. Avoid electric shock. When working, the body should not come into contact with grounded conductive materials, such as iron pipes, radiators, refrigerators, etc. When using, insulated shoes or standing on insulation pads must be worn.

Precautions for using lithium batteries

1. Before installing the battery, confirm whether the switch is in the closed position and whether the forward and reverse switches are in the middle position to prevent accidental tool activation. If you press your finger on the start stop switch it do not turn off the power tool when installing the battery when carrying it, it may cause work accidents.
2. Do not open the battery as it may cause a short circuit.
3. The battery must be kept away from high temperatures, such as prolonged exposure to sunlight and flames. There is a risk of explosion.
4. If the battery is damaged or not used according to regulations, toxic gases will be emitted from the battery. The workplace must maintain air circulation and seek medical attention immediately if there is any discomfort. The gas emitted by the battery can irritate the respiratory tract.
5. Damaged batteries can leak liquid and contaminate other parts. Check for contaminated parts. Clean these parts and replace them if necessary.
6. This battery can only be used in conjunction with our company's electric tools to ensure that the battery will not overheat.
7. Only use with the provided matching charger, using other models of chargers may cause a fire.
8. Do not hit or damage the battery, and do not use batteries that have been hit or damaged. Using damaged batteries can cause explosions. Carefully handle damaged batteries.
9. Do not charge in damp or rainy conditions. Following this approach can reduce the risk of electric shock.

Precautions for using chargers

1. The charger must be kept away from rainwater or moisture. If water is allowed to seep into the machine, it will increase the risk of electric shock.
2. Do not use this charger to charge other batteries. If the machine is not used according to regulations, it may cause a fire or even an explosion hazard.
3. The charger must be kept clean, an accumulation of dirt on the charger can easily lead to electric shock.
4. Before use, the charger, wires, and plugs must be checked. If a malfunction is found, the machine cannot be continued to be used. Do not disassemble the machine without authorization. The machine can only be handled over to qualified professional electricians for repair and can only be replaced with original factory parts. Damaged chargers, wires, and plugs can increase the risk of electric shock for users.
5. Do not place the charger on flammable materials (such as paper, textiles, etc.) during charging, and do not use the charger in flammable environments. When charging, the machine will become hot, and if used under the above conditions, it is easy to cause a fire.
6. The battery voltage used must be consistent with the voltage specifications indicated on the charger.
7. When maintaining or cleaning the charger, be sure to unplug it from the socket to avoid electric shock.
8. Please unplug the charger from the socket when it is not in use.
9. Do not touch unshielded output connections or unshielded battery terminals to prevent electric shock.



SHLEDECOR

- Powering Every Project -

Wireless lightweight
Portable lawn mowing



Kind reminder Do not install the battery before installing the saw blade and ensure that the switch is turned off to avoid injury! Pay attention to safety when installing sharp saw blades!

Installation steps of the grass deflector



Installation steps of grass cover



Saw blade installation steps



Product Color Red Green Black
(The product color in the manual is for reference only, and the specific color is subject to the actual product.)

Before using this product, please carefully read and fully understand this operating manual before using, maintaining, and maintaining the machine. We reserve the right to change product specifications based on product improvement needs.

Model: HA-1821/HA-1822

Power: 1880W

Material: Steel pipe/Aluminum pipe,
ABS engineering plastic

Battery: Lithium battery

Charging time: 2-3 hours

No load speed: 10000 rpm

Standard accessories

(machine, blade, saw blade, accessory kit)

This machine is suitable for household use and is suitable for garden lawns, field weeds, rice, wheat, corn stalks, small tree branches, etc. It is not suitable for tree cutting operations. If there is grass entangled in the blade after use, please remove it in a timely manner to extend the service life of the machine.