

Recommended number of people
for pitching: 1-2

parts list

1 x Flysheet
2 x Poles
1 x Bag of Pegs

pitching instructions

A

Select your site; ideally smooth ground on a slight incline (water settles on flat). Remove any debris.






(Layout the flysheet on the ground with the door facing away from the prevailing wind. If it is windy, hammer in a few pegs to stop tent blowing away. Ensure the door is zipped closed.)

B

Assemble the poles and push them through sleeves on the outside of the flysheet.

C

Take one pole and insert it to webbing pocket and gradually apply pressure to the pole to bend it into an arch to fit into webbing pocket.

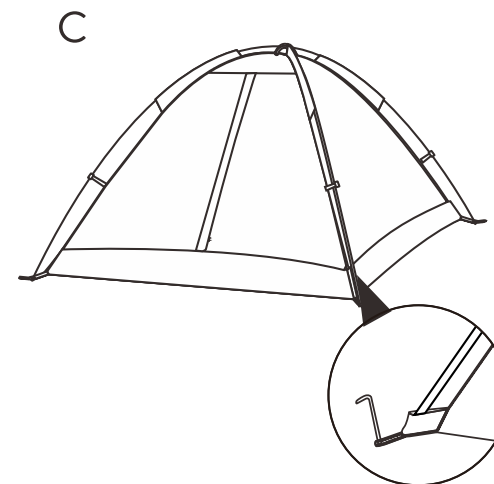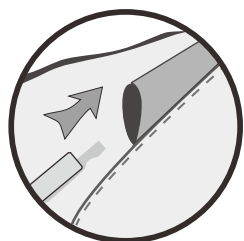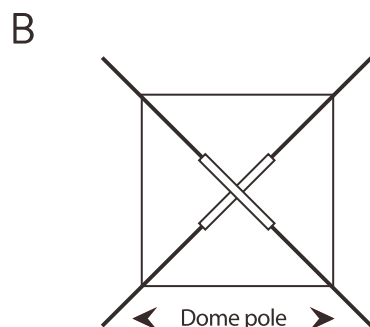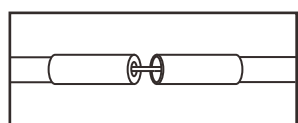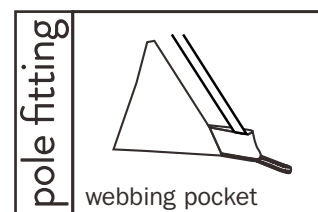

D


Fix top cap with "S" hook.

F


Peg out all guyropes and peg points.
Adjust guyropes to ensure even tension across all.

guyrope tension adjuster

Each guyrope has a plastic slider, in order for this to function correctly, create a loop as shown below. Peg through this loop and move the slider up the rope to gain tension.

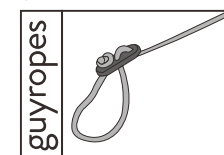

For optimum hold, pegs should be hammered into the ground at approx 45 degree angle. Guyropes should be 90 degrees to the peg.

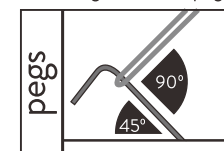

dismantling instructions

The inner tent can be left attached inside the flysheet for quicker pitching next time. Remove all pegs and neatly roll up and tie all guyropes.

TAKE CARE-poles will be under tension when removing from pins.

Remove the poles; push out of the sleeves, do not pull.

Place poles into pole bag, pegs into peg bag. Fold the tent fabric neatly and roll around the pole bag.

Roll as tightly as possible to ensure it will fit into the tent bag.

Registered address: Eurohike BL9 8RR