



pop 400 SD instructions

Recommended number of people for pitching: 1-2


How to put up your tent

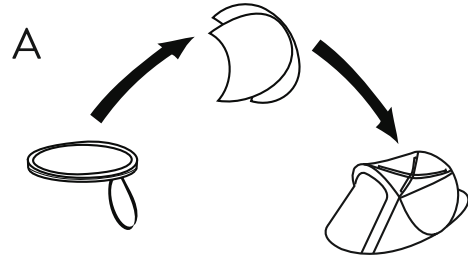

Select a site, ideally a smooth area of ground with a slight incline (as water settles in flat) Remove any sharp stones and branches as these may puncture or tear the groundsheet. Take the tent out of the storage bag, as you do this ensure that it is held firmly together. In a cleared area carefully release the tent which will self erect.

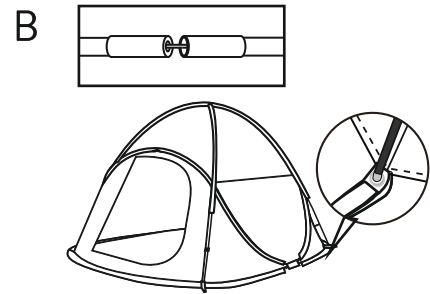

Assemble the poles and push them through the sleeves on top part of tent. Take one pole and insert the metal tip into eyelet on the webbing strap at the base of tent. then gradually apply pressure to bend the pole into an arch shape to fit the tip of the opposite end of the pole into its eyelet. Repeat process for another pole.

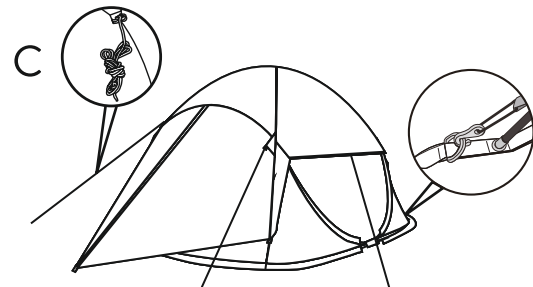


Place the flysheet over the inner tent, connect the S hooks into the D loops to secure in place. Peg out all guyropes and peg points. Adjust guyropes to ensure even tension across all.


Parts list

- 1 x Flysheet
- 4x Poles
- 1 x Bag of Pegs


How to take down your tent

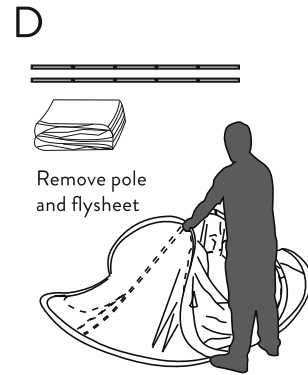

Pull the sides and top upwards.

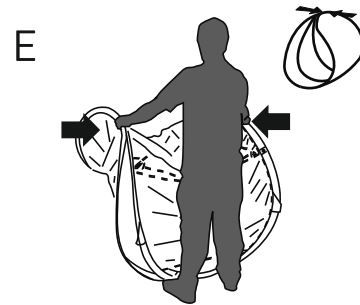

Hold the edges at the center with one hand. Keep held until step K.

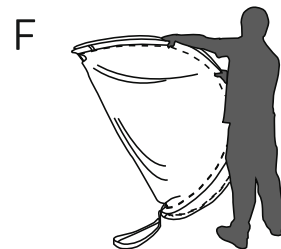


Flip the tent 90 degrees on to one end.

G



Push the top end down towards the ground.

H

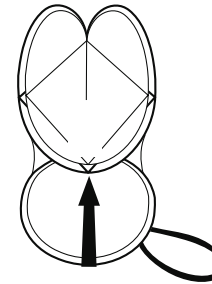


Tuck the top end in

J



And then pull the edges over to create ring shapes.

K

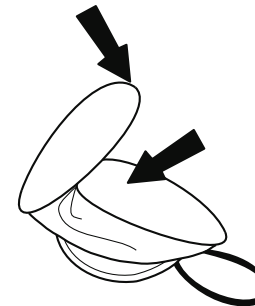

Release edges and fold the ring shapes down.


L




Align the folded rings and slide over the strap

guyrope tension adjuster

Each guyrope has a plastic slider, in order for this to function correctly, create a loop as shown below. Peg through this loop and move the slider up the rope to gain tension.

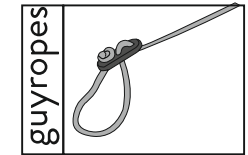

For optimum hold, pegs should be hammered into the ground at approx 45 degree angle. Guyropes should be 90 degrees to the peg.

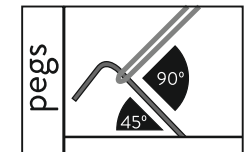

TAKE CARE-poles will be under tension when removing from eyelets.

Remove the poles; push out of the sleeves, do not pull.

Place poles into pole bag, pegs into peg bag. Fold the tent fabric neatly and roll around the pole bag.

Roll as tightly as possible to ensure it will fit into the tent

Registered address: Eurohike BL9 8RR