

Congratulations on your purchase!

We sincerely hope you are satisfied with your new product.
Here are a few points to help you prolong the life of your feature.

Ambienté recommends



Fountain Safe should be used all year round. This will help to reduce maintenance and to maintain the lustre of your feature by slowing or stopping the build up of algae etc.

Frost Free should be added to the feature as the colder months draw in. It lowers the freezing point of water helping to prevent frost damage. If water freezes in a fountain, it will expand and crack the feature.




All water features should be drained, dried and covered before severe frost or snow.

For pumps to function properly, they need to be completely free of air bubbles. Whilst submerged, a gentle shake or tap should be sufficient to dislodge any such bubbles.

If excessive noise is coming from the pump this could be due to either trapped air or the pump rattling against the sides of the reservoir. Please ensure the pump is "suckered" to the base of the reservoir by the rubber feet.

For regular pump maintenance

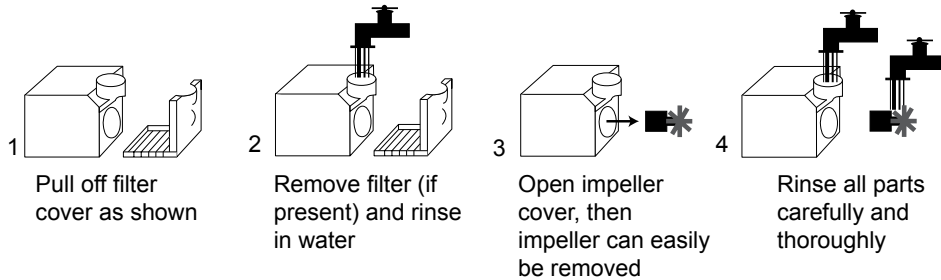

For more information:

Web: www.ambientewaterfeatures.co.uk

Address: Ambienté – Fynzi Limited, 173 Curie Avenue, Didcot, OX11 0QG

Phone number: UK: 0800 161 3832 Int: +44 (0)2087 785 612

Email: info@ambientewaterfeatures.com

F3136B, F3145B, F0922B, F0924B

Installation Instruction



**Brushed 28 – 60cm Stainless Steel Sphere
Water Feature, LED lights**




Installation Instruction



Brushed 28 – 60cm Stainless Steel Sphere Water Feature, LED lights


Step 1

Connect hose to pump via the valve and place pump in reservoir feeding hose up through the centre hole (2) in lid.

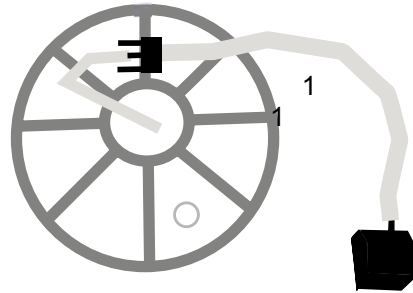

Step 2

Feed light cable from sphere down through the centre hole in lid and back up through the side hole of the lid.

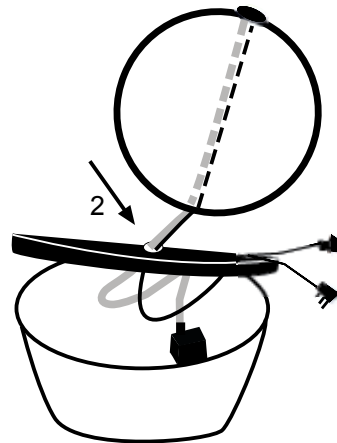


Step 3

Connect hose to sphere and place lid and sphere onto reservoir.

Step 4


Centralise the sphere over the centre hole (3) and fill the reservoir with clean water ensuring the pump is fully covered.

Connect the LED lights ensuring the waterproof screw nut is secure and tight.

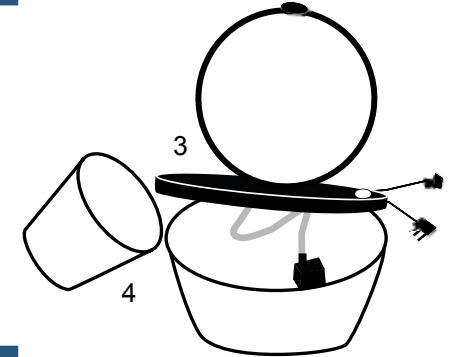

Step 5

Connect LED transformer to the lights cable. Use adjustable button on pump and valve (1) to adjust the volume of water.

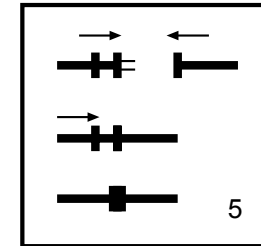


Step 6

Plug* in, wait until trapped air has worked its way out of the pump.



As this pump is water cooled, allowing it to run dry may result in the pump burning out, invalidating the warranty.

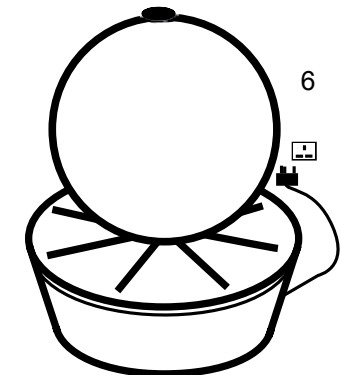

DO NOT allow the pump to run dry!

*Plugs not always supplied with feature