




Russell Hobbs

Operating Manual


GLIDE PRO PLUS

RHHS4101


ASSEMBLY

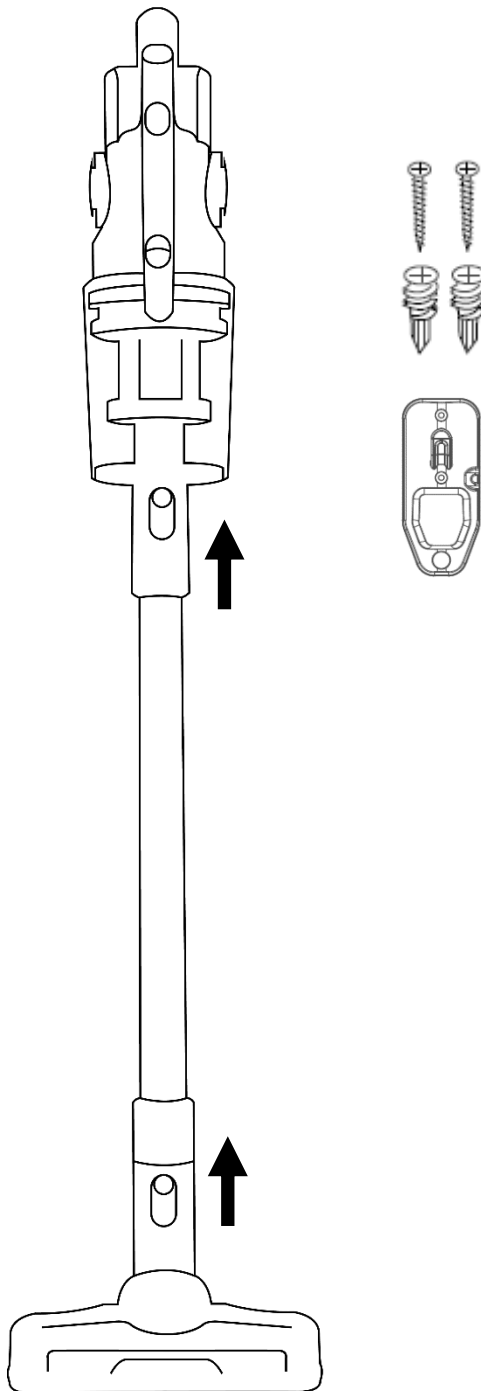

FIRST TIME SETUP

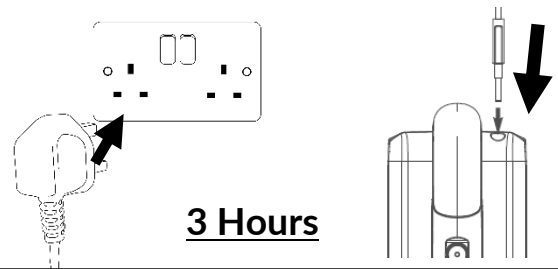

SUITABLE FOR USE

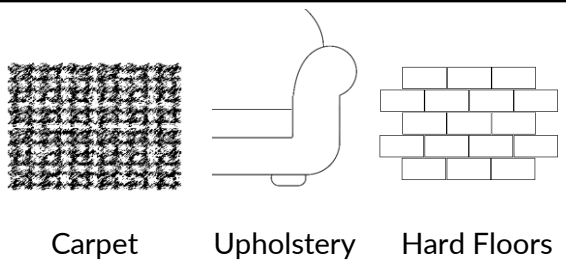

WASH FILTERS
Wash the filters with cold water at least once a month

1
MONTH

**REGISTER YOUR
FREE 1 YEAR
GUARANTEE
TODAY**

GUARANTEE

At Russell Hobbs, we take all our customer feedback seriously.

Feel free to contact our Product Care Team, on **0345 209 7461** who will be more than happy to assist you.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.
- This does not affect your statutory rights.

RUSSELL HOBBS CONTACT DETAILS

Website: mda.russellhobbs.com

Telephone: 0345 209 7461

Address: Product Care Customer Service, Green Bank Business Park, Hindley Green, Wigan, WN2 4AY

Note your serial number below for future reference.



Image for illustration purposes only

REGISTER ONLINE

Visit our website to register your full parts and labour guarantee online.

mda.russellhobbs.com

REGISTER BY PHONE

Call our friendly Product Care team.

0345 209 7461

IMPORTANT SAFETY INSTRUCTIONS

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- The appliance is only to be used with the power supply unit provided with the appliance. The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- This appliance contains batteries that are only replaceable by skilled persons. Battery must be removed before scrapping appliance. Battery must be disposed of safely.
- **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance. (Adaptor model number: MC2508B-B)
- If the adapter cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not use with damaged cord or plug. Do not run the vacuum cleaner over any cables, as this will result in damaging the cable.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.


IMPORTANT SAFETY INSTRUCTIONS

- This product is intended for household use only. Do not use outdoors. Do not direct at people, animals, electrical outlets, or equipment containing electrical components.
- Unplug from outlet when fully charged, and before putting on and taking off parts, and before cleaning. Do not leave the cleaner unattended while plugged in.
- Do not use vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not operate this appliance for anything other than its intended use.
- Keep the vacuum cleaner and adapter away from water; do not allow it to get wet. If unit is wet, do not plug unit into wall socket or turn unit on. Do not immerse in water or other liquids for cleaning. Do not handle the vacuum cleaner with wet hands.
- The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury. Only use the accessories supplied by the manufacturer. Only use the unit when fully assembled.
- Do not use this vacuum to pick up water or any other liquids, combustible substances or hot/burning objects. Never place your fingers or other objects into any part of the cleaner. Be aware that loose clothing or hair may become trapped in the cleaner if improperly used.



LED WARNINGS

The two LED lights on the appliance will indicate different status of the vacuum.

Light Sequence	Status
1 Flashing, 2 OFF during charging	Vacuum is charging
1 ON, 2 Flashing	Vacuum half charged
1 & 2 ON for 10min then OFF during charging	Vacuum is fully charged
1 & 2 ON for 10min then OFF during charging	Vacuum
1 Flashing, 2 OFF during use	Low Battery
(1 & 2 ON) 3 White	Mid Speed
(1 & 2 ON) 3 Blue	High Speed
(1 & 2 ON) 3 Off	Low Speed

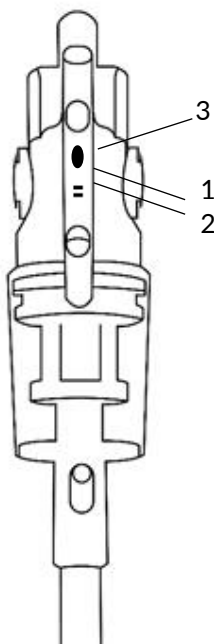

OPERATION

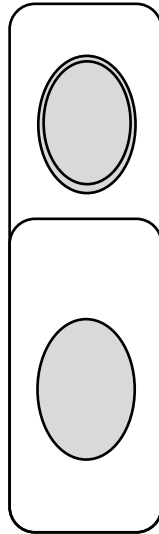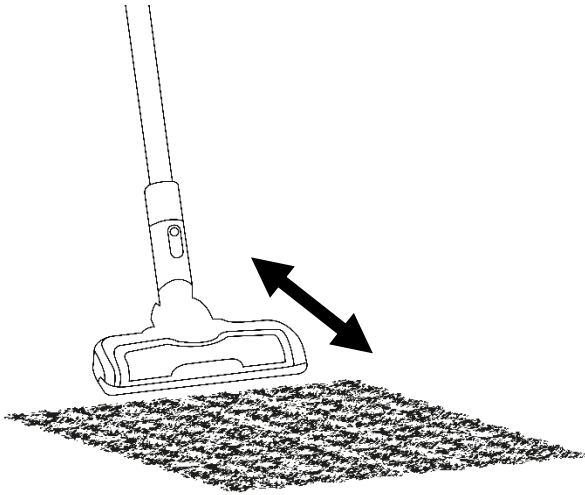


←
Power On

←
Speed
Control


⚠ CAUTION ⚠
Exhaust air discharged
from the sides of the
cleaner may extinguish
an open flame

CARRYING THE APPLIANCE


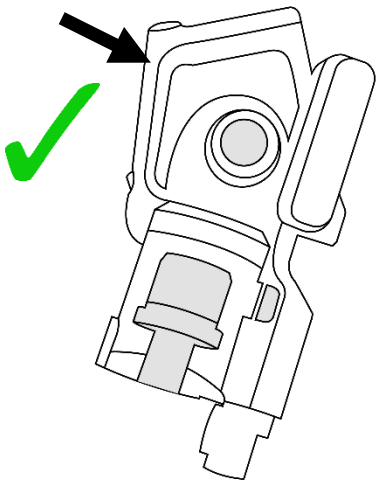


⚠ CAUTION ⚠
Take care using
as a carry handle

TOOL ATTACHMENTS

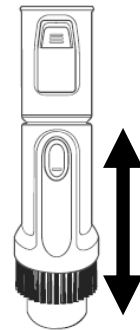



TOOL ATTACHMENTS

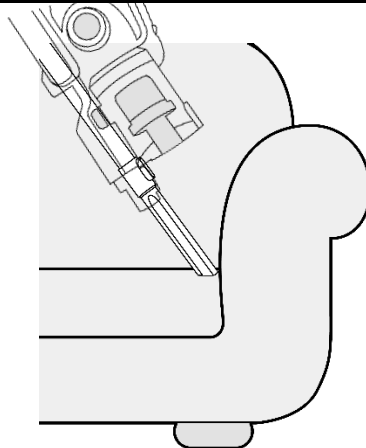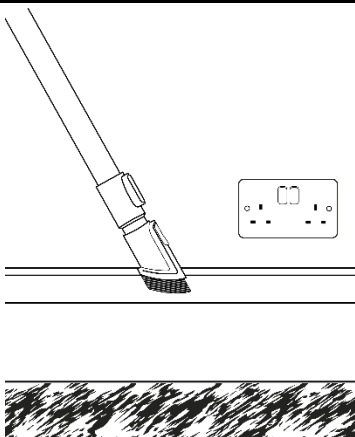


**Do not use on animals*




EMPTYING THE BIN

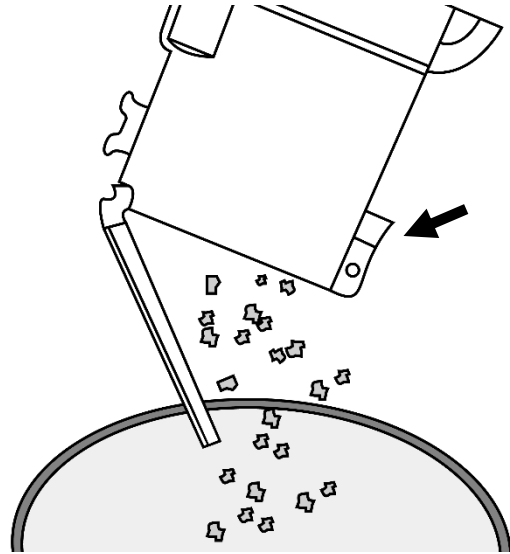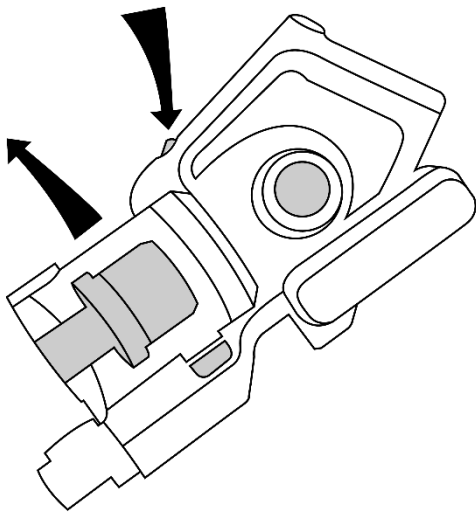

CARPETS OR HARD FLOORS

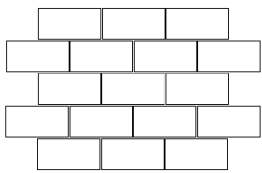


Normal Power

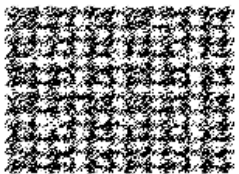


All modes suitable



STAIRS

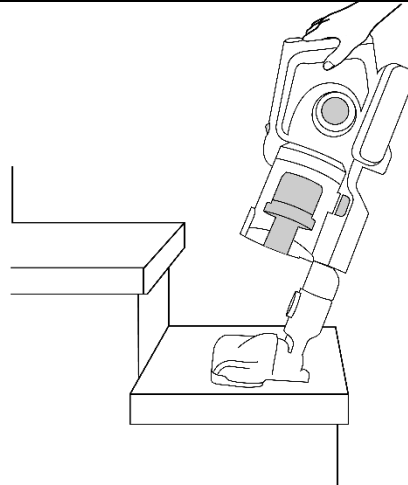

CHECKING FOR BLOCKAGES

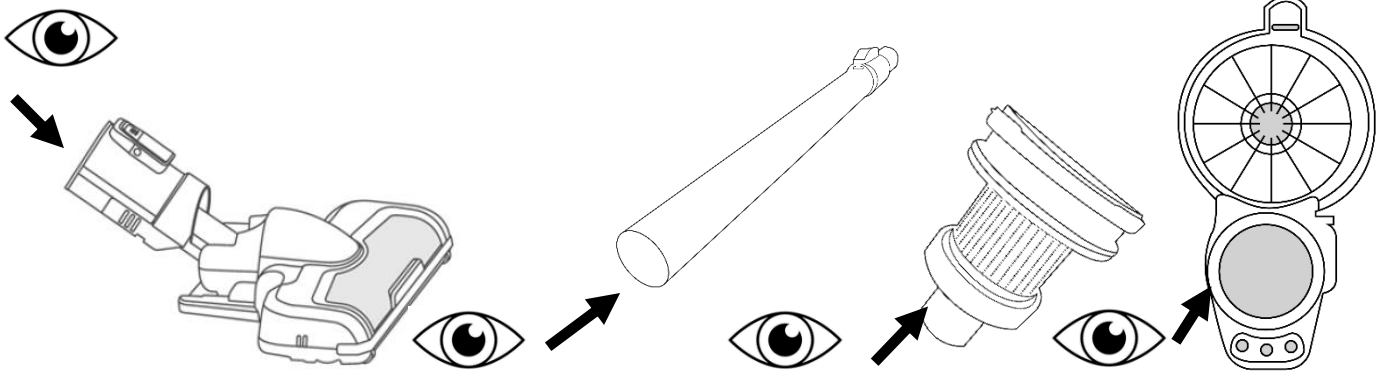

IMPORTANT! WASH THE FILTERS

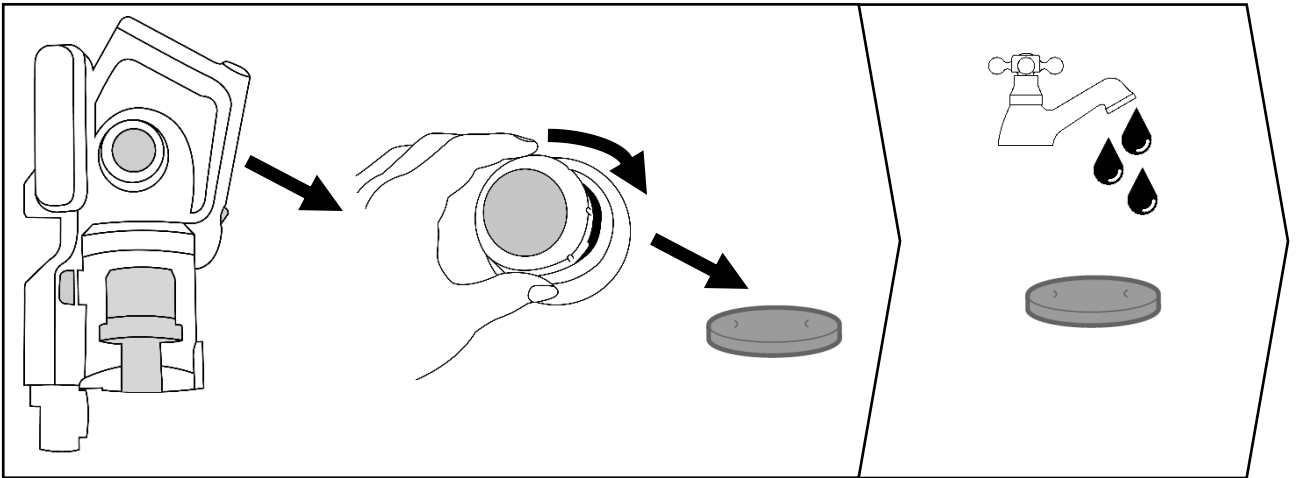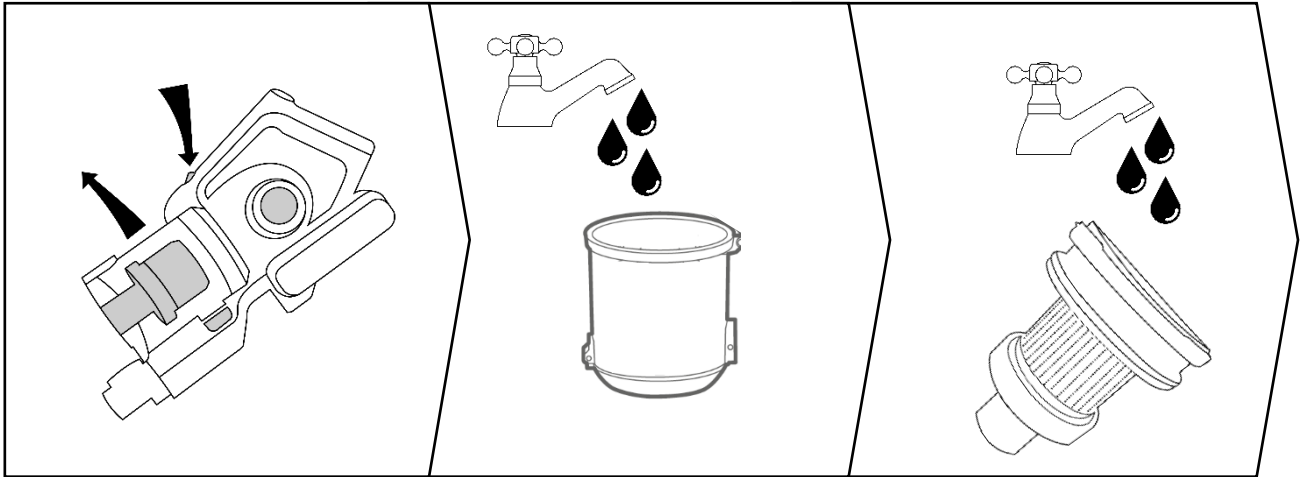



**REGISTER YOUR
FREE 1 YEAR
GUARANTEE
TODAY**

WASH FILTERS

Wash the filters with cold water at least once a month

**1
MONTH**

IMPORTANT! WASH THE FILTERS

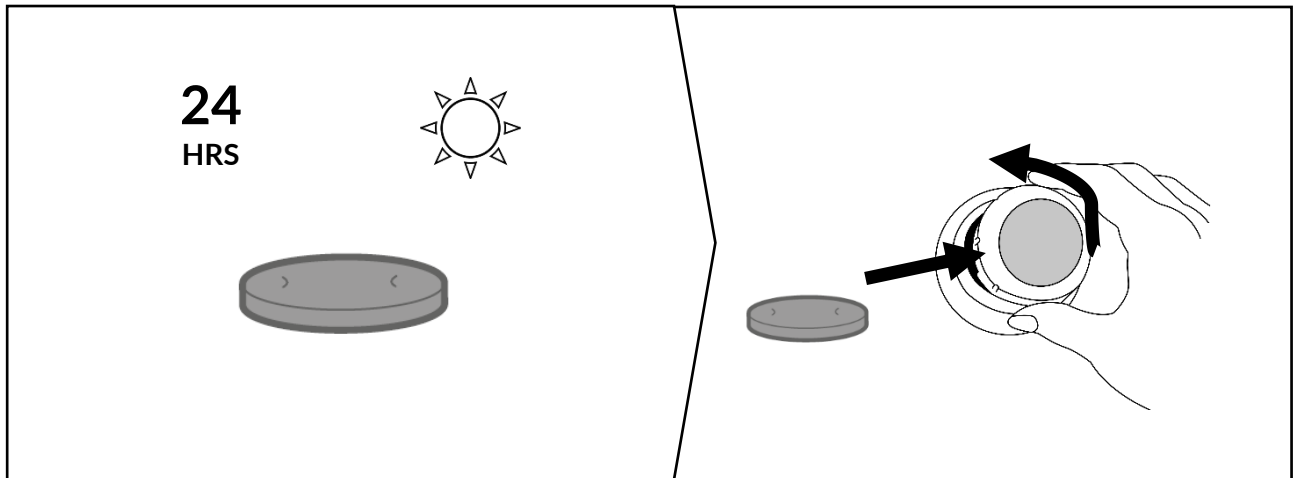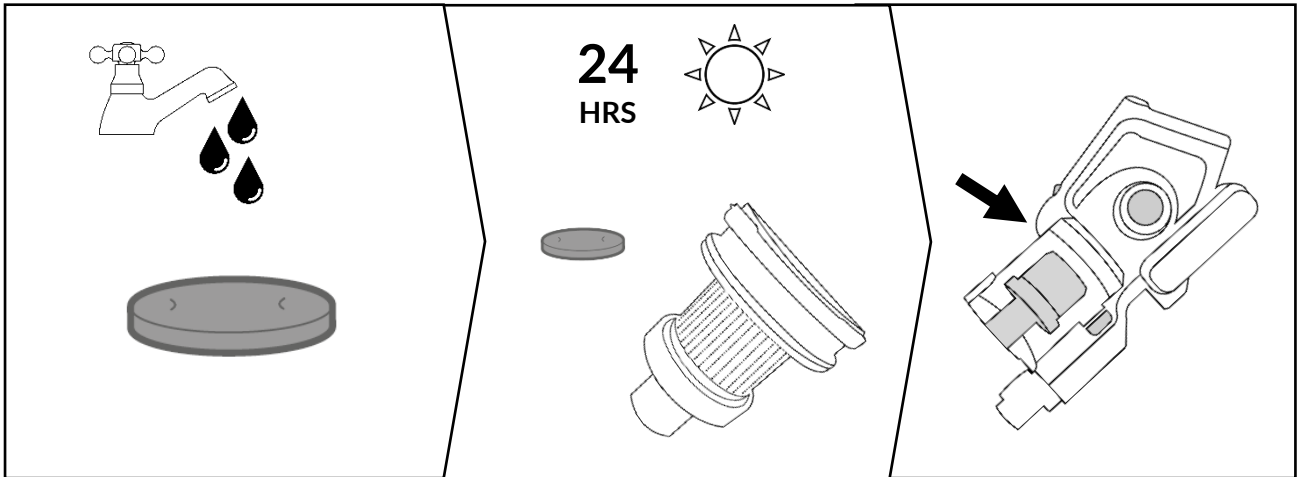


**REGISTER YOUR
FREE 1 YEAR
GUARANTEE
TODAY**

WASH FILTERS

Wash the filters with cold water at least once a month


1
MONTH

IMPORTANT! KEEP BRUSH CLEAR OF HAIR

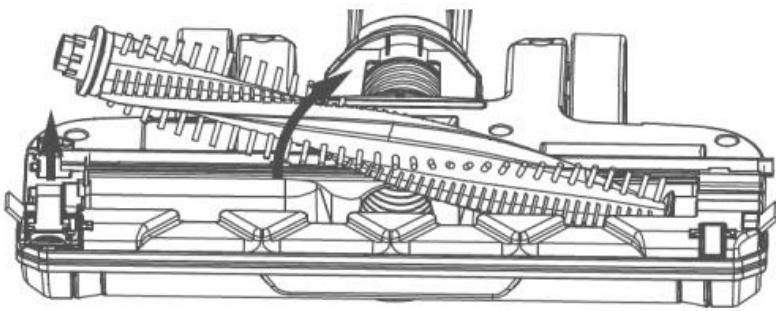


Taking care, press the clasp and lift the small cover off the brush head.

Remove the brush roll taking care not to lose any small pieces.

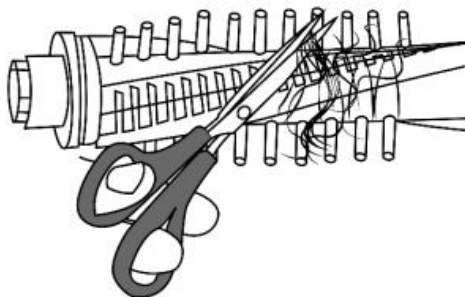

Taking care to cut only the hair, use scissors to ensure the brush roll is completely hair free.

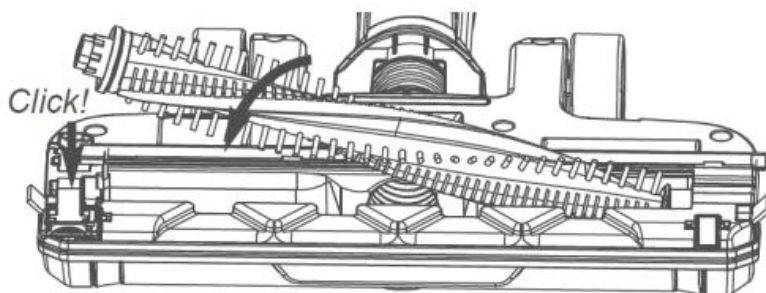

Replace brushroll into floorhead.

Replace the small cover and click the clasp into place.

PROBLEM SOLVING

The vacuum cleaner doesn't switch on	<ul style="list-style-type: none">• Check the vacuum is charged by plugging in for 3 hours• Check for any obvious signs of damage to vacuum, adapter, or plug• If recently used, allow to cool for 1 hour then try again
The suction is decreasing and dirt is not adequately being picked up	<ul style="list-style-type: none">• Check if the dust canister is full; if so, empty it• Clean the filters following the instructions in this manual• Check there are no blockages in the tube, and clear any obstructions
Vacuum cleaner is over heating	<ul style="list-style-type: none">• Check the filters are clean
Dust is coming out of the vacuum	<ul style="list-style-type: none">• The dust canister has not been fitted correctly. Refit the canister following the instructions in this manual.
The air exhausted from the vacuum smells	<ul style="list-style-type: none">• Clean the filters, tube, and dust container following the instructions in this manual
The vacuum cleaner has cut out	<ul style="list-style-type: none">• Allow the vacuum to cool for 1 hour. Clean all filters and dust containers before trying to use again.

If you are still experiencing difficulties with the appliance please contact us **BEFORE** returning the appliance to the retailer it was purchased from:

Website: mda.russellhobbs.com

Telephone: 0345 209 7461

Address: Product Care Customer Service, Green Bank Business Park, Hindley Green, Wigan, WN2 4AY

IMPORTANT!

1

WASH FILTERS

Wash the filters with cold water at least once a month
The filters may require more frequent washing if vacuuming fine dust

MONTH



This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

By registering your product you will get an additional year guarantee free of charge. Additional cover can be purchased through the website.

REGISTER ONLINE

Visit our website to register your full parts and labour guarantee online.

mda.russellhobbs.com

REGISTER BY PHONE

Call our friendly Product Care team.

0345 209 7461

NOTES

NOTES




Russell Hobbs

Russell Hobbs is a registered trademark used under license from Spectrum Brands (UK) Ltd. Made under license by Product Care Trading Ltd, Wigan, WN2 4AY/ PCT (NI) Ltd, Belfast, BT5 5AD

Russell Hobbs Support: call 0345 209 7461 or visit mda.russellhobbs.com

UK
CA

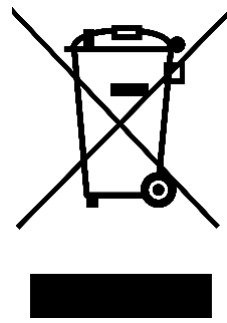

Do not put used batteries, nickel cadmium, rechargeable, round cell or starter batteries in with your household rubbish. Take them to an appropriate disposal/collection site.

The 'whee bin' symbol is known as the 'Crossed-out whee bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.