 


ProBreeze®

Instruction Manual

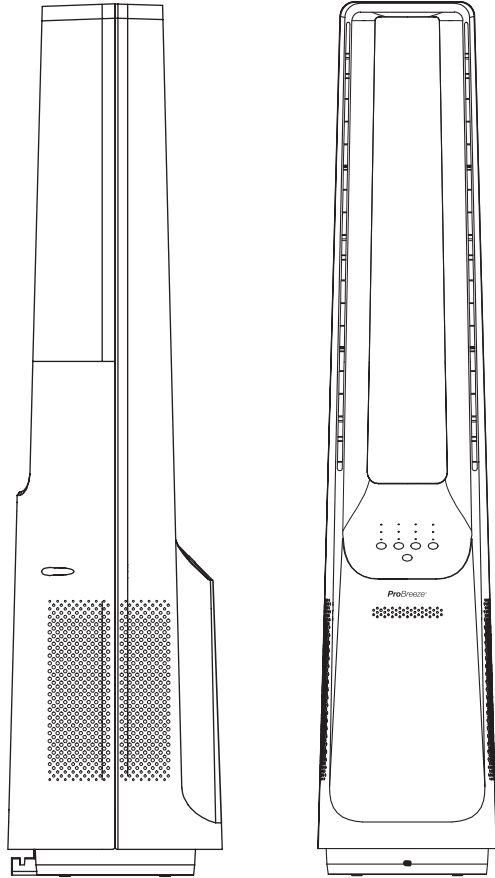

Model PB-F-20-W-UK
40" Smart Bladeless Tower Fan

IMPORTANT INSTRUCTIONS
– RETAIN FOR FUTURE USE

CONTENTS

Safety Instructions..... Page 3
Batteries Page 5
Specification Page 6
Symbols Explained Page 7
Parts Page 7
Operating Instructions..... Page 8
Pro Breeze App SetupPage 10
Additional Safety Features.....Page 11
TroubleshootingPage 11
Cleaning Page 12
Storage Page 12
Recycling and Disposal.....Page 13
Declaration of Conformity.....Page 14
PSTI Statement of CompliancePage 14

ProBreeze® | 40" SMART BLADELESS TOWER FAN MODEL PB-F-20-W-UK

Thank you for choosing to purchase a product from Pro Breeze. Please read the entire manual carefully prior to first use and keep in a safe place for future reference.

SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

⚠ WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, FIRE OR INJURY TO PEOPLE, ALWAYS MAKE SURE THE APPLIANCE IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE RELOCATING, SERVICING, OR CLEANING IT.

- Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to person.
- Do not cover the appliance whilst in use.
- Always unplug the appliance when not in use.
- Keep the appliance out of reach of children and pets.
- Do not leave children alone or unattended in the area where the appliance is in use.
- Children must be supervised not to play with the appliance.
- Cleaning and user maintenance shall not be made by children unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- The appliance must have a minimum 50cm clearance around all sides of the appliance. Take care that curtains or other objects are not sucked into the fan during operation.
- Never leave the appliance unattended while in use. Always turn the appliance off and disconnected from the power supply when not in use.
- Avoid placing the power cord in areas where it can become a tripping hazard. Do not place the power cord under carpeting or cover it with rugs, runners, or similar.
- Place the appliance on a flat, stable and dry surface and always keep the appliance in an upright position.
- Never place anything on top of the appliance.
- Ensure that the mains supply (including voltage, frequency and power) complies with the rating label of the appliance.
- There may be a trace of odour during the first few minutes of initial use. This is normal and will quickly disappear.
- Do not cover the appliance or restrict the airflow of the inlet or exhaust grills whilst in use.
- Do not use this appliance to dry clothes.
- Do not use the appliance in high humidity or steam filled rooms.
- Do not operate the appliance with wet hands.
- Do not use this appliance near water or in the immediate surroundings of a bath, shower or a swimming pool. Never place the appliance where it may fall into a bathtub or other water container.
- Do not allow water or other liquids to run into the interior of the appliance, as this could create a fire and/or electrical hazard.
- This appliance is intended for indoor household use and similar applications. Do not use outdoors.
- Do not use the appliance while sleeping or place it near a person who is sleeping.

- Do not use the appliance near petrol, paints, flammable gases, ovens, or other heating sources.
- The mains cable should not hang down from the surface on which the appliance is placed in order to prevent the appliance from being pulled down.
- To avoid a circuit overload when using this appliance, do not operate another high-wattage appliance on the same electrical circuit.
- Always plug the appliance directly into a wall socket. Avoid using extension leads where possible as they may overheat and cause a risk of fire.
- Do not use this appliance with an external programmer, timer switch or any other device which would switch the appliance on automatically unless this has already been pre-built into the appliance by the manufacturer.
- Do not pull on the power cord. Never move, carry, or hang the appliance by the power cord.
- Do not kink or wrap the power cord and plug around the appliance, as this may cause the insulation to weaken or split, particularly where it enters the appliance.
- Do not operate the appliance with any safety guards removed.
- Do not operate the appliance if there are signs of damage to the appliance, power cord, or any of the accessories supplied. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Do not attempt to repair or adjust any electrical or mechanical elements in the appliance. Doing so may be unsafe and will void your warranty.

BATTERIES

—

This product is supplied with 2 x AAA disposable batteries.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

⚠ BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN.






Choking hazard. Do not swallow. Harmful if swallowed. Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

- This product only uses a AAA battery. It is not compatible with other battery types.
- Do not allow children to handle batteries.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- Ensure that the battery is installed with the correct polarity (+ and -).
- Remove exhausted battery promptly.
- Always inspect new batteries before use. Damaged or weak batteries may leak acid. Discontinue use if batteries show signs of leakage, damage, or weakness at any time.
- Ensure the battery compartment is correctly and securely closed after installing the batteries.
- Wash hands after handling batteries.
- Disposable batteries are not rechargeable and must be recycled or disposed of separately from household waste. Always dispose of batteries at an official collection point and according to your local environmental laws and guidelines.

SPECIFICATION


Model:	PB-F-20W-W-UK PB-F-20B-W-UK	Product Dimensions (L x W x H):	24 x 20.5 x 101cm
Voltage:	220~240V~	Net Weight:	5.54kg
Frequency:	50/60Hz	Gross Weight:	9.36kg
Power:	33W		

SYMBOLS EXPLAINED

	For indoor use only.		Please read instruction manual and retain for future use.
	Equipment complies with the applicable UK safety requirements and regulations.		Equipment complies with the applicable EU safety requirements and regulations.
	Class II Double Insulated / Reinforced Insulation Equipment		


PARTS

 1. Air outlet
2. Display and control panel
3. Base

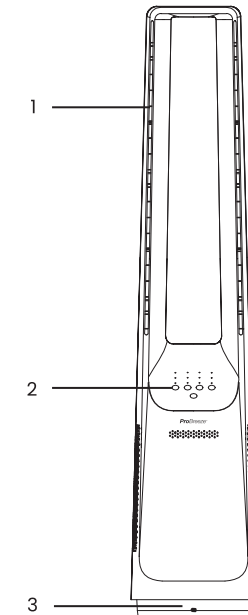


Control Panel Explained

 1. Fan Speed Button – Press to choose between fan speeds 1-6
2. Mode Button - Press to toggle between natural, auto and night modes
3. Timer Button – Press to choose a turn-off/on timer between 1h-7h
4. Oscillate Button – Press to turn on/off the oscillation
5. Power Button – Press to turn the unit on or into standby mode

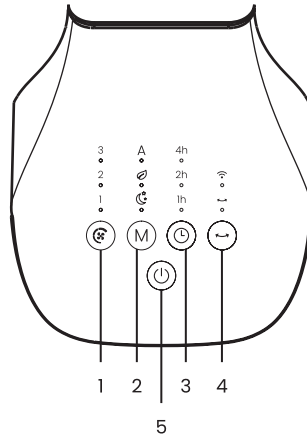

Remote Control Explained

 1. Turn on/off oscillation
2. Press "+, -" to set the wind speed
3. Turn unit on/off
4. Change mode
5. Press to set the timer

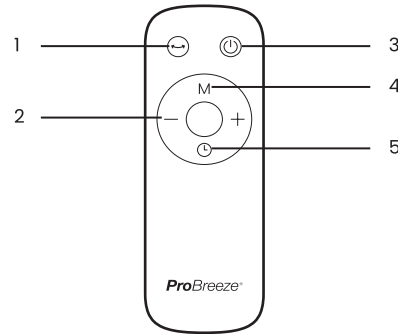

Note: Use the remote within a 5m distance and point it at the control panel.

These images are for reference only, please refer to your product. If you find you're missing any parts from your order, please contact our customer care team by emailing help@probreeze.com for fast and friendly help.

OPERATING INSTRUCTIONS

	On/Off	Press once on your control panel or remote to turn your fan on or off. The temperature of the room will display in the led display panel.
	Fan Speed	To turn the fan speed up or down, either press the fan speed button on the remote or on the control panel. The speed indicator on the led display will change to reflect the speed from 1-6. When the fan is in natural, or auto mode press this button to set the fan speed from speeds 1-6. In night mode you will be able to choose from fan speeds 1-3.

	Timer	You can set your fan to turn off/on automatically in 1-hour increments from 1-7 hours. To set a turn-on timer press the timer button on your remote or control panel when the unit is off (but still plugged into the mains) until the correct time displays on the led display. To set a turn-off timer press the timer button on your remote or control panel when the unit is on until the correct time displays on the led display. To turn this mode off, continue pressing the timer button until there are no lights lit on the timer section of the control panel.
	Oscillation Mode	Press oscillate button once on your remote or control panel to start or stop fan oscillation. Warning: Please do not manually turn the appliance as this may damage the oscillation mechanics.
	Wi-Fi Connection	Hold down the mode button for 3 seconds to prepare the unit for Wi-Fi connection.
A	Auto Mode	Auto mode is designed to maintain an ambient temperature and will transition between fan speeds. Please refer to the table on the next page.
	Natural Mode	Natural mode is designed to mimic the natural flow of wind and will transition from high speed (for five seconds) to mid speed (for five seconds), to low speed (for five seconds). This cycle will repeat.
	Night Mode	Night mode slowly reduces the fan speed until it switches to the lowest speed setting to save energy as you sleep. Once activated, the fan speed will function on high speed for 30 minutes and will then reduce to mid speed for 30 minutes and low speed for 30 minutes before switching off. After 60 seconds, the display lights will turn off for an undisturbed rest. Please refer to the table below.

Night Mode

	Stages	Operating time	Equivalent fan speed level to standard operating mode
Fan Speed Level 1	1	30 minutes	Fan speed level 4
	2	30 minutes	Fan speed level 3
	3	Continuous	Fan speed level 1
Fan Speed Level 2	1	30 minutes	Fan speed level 5
	2	30 minutes	Fan speed level 4
	3	Continuous	Fan speed level 2
Fan Speed Level 3	1	30 minutes	Fan speed level 6
	2	30 minutes	Fan speed level 5
	3	Continuous	Fan speed level 3

Auto Mode

When the room temperature is increasing	≥30°C	The fan speed level will increase by 2 levels when the room temperature has increased by 1°C.
	<30°C	The fan speed level will increase by 1 level when the room temperature has increased by 1°C.
When the room temperature is decreasing	≥31°C	The fan speed level will decrease by 2 levels when the room temperature has decreased by 1°C.
	<31°C	The fan speed level will decrease by 1 level when the room temperature has decreased by 1°C.
When the room temperature is too high or too low	<10°C	The fan speed level is set at Level 1 by default.
	≥40°C	Auto mode will be deactivated by default and will not be automatically resumed when the room temperature drops. (When the auto mode is deactivated, the fan will switch back to natural mode where you can choose desired speed settings.)

 
PRO BREEZE APP SETUP

Scan the QR code below to download our Pro Breeze app for smart device management. Control your unit from the app, set up schedules to turn your unit on and off.

Note: Ensure your Wi-Fi network is set to 2.4GHz for successful pairing.

Pair Your Device in 4 Steps

- 1. Register:** Download the app on the Google Play or Apple app store. Sign in/register for an account.
- 2. Prepare your device:** Once you're all signed in hold down the speed and oscillate buttons for 5 seconds then after a few seconds the WiFi indicator will show on the control panel.
- 3. Add your device:** Once the unit is in Wi-Fi pairing mode, open the Pro Breeze app press "+" in the top right corner and press "add device".
- 4. Pair your device:** Then the app will scan for devices and then your unit (if it is in pairing mode) will show up as shown below. Press add. Then type in the password for the Wi-Fi your phone is on.

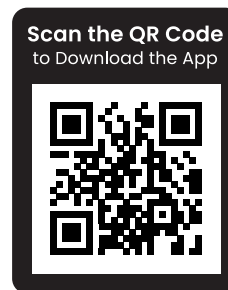

Now your unit is connected to the Pro Breeze app.

ADDITIONAL SAFETY FEATURES

- **Forced shutdown:** After 15 hours of continuous operation (if no settings are changed), the fan will shut down automatically.
- **Setting memory:** When the fan is turned on it will run with the mode and setting that was used before the unit was turned off.
- **LED indicator lights off function:** After 60 seconds of your last button press, any indicator lights on the control panel will automatically turn off. the fan will continue to operate. To turn the fan off when the control panel display lights are off, press the ON/OFF button. To turn the control panel lights back on, press any other button.

TROUBLESHOOTING

Problem	Cause	Solution
The machine does not turn on after installation	The power cable is not plugged in or has poor contact.	Make sure the plug is properly inserted into the socket.
	The switch on the body is not turned on.	Turn on the switch on the body.
The remote does not work	The battery needs replacing.	Replace the battery.
	The remote is being used more than 5m away from the fan.	Use the remote closer to the fan and make sure it is pointing directly at the display panel.

CLEANING

⚠ WARNING: ALWAYS TURN THE APPLIANCE OFF AND UNPLUG THE POWER CORD FROM THE ELECTRICAL OUTLET BEFORE HANDLING OR CLEANING IT.

⚠ CAUTION: DO NOT ALLOW WATER OR OTHER LIQUIDS TO RUN INTO THE INTERIOR OF THE APPLIANCE, AS THIS COULD CREATE A FIRE AND/OR ELECTRICAL HAZARD.

⚠ CAUTION: DO NOT USE ANY ABRASIVE CLEANERS OR SOLVENTS, AS THIS CAN DAMAGE THE APPLIANCE.




- Do not attempt to clean the appliance in any other way than that detailed by the manufacturer.
- Clean the exterior surface of the appliance by wiping it with a soft, damp cloth. Dry the appliance with a soft, clean cloth.
- Clean the vents and openings of the appliance regularly with a vacuum cleaner, using the brush attachment to avoid any dust build-up.

STORAGE

- Store the appliance in a safe, clean, and dry place, away from direct sunlight and out of reach of children when not in use.
- To store your product, we recommend using the original or a similar-sized box.

RECYCLING AND DISPOSAL

Waste electrical and electronic products (WEEE), batteries, accumulators and packaging should not be disposed of with general household waste. This is to prevent possible harm to the environment and human well-being, and to help conserve our natural resources. Most electrical products with a plug, battery, or cable can be recycled. Contact your local council, household waste disposal service, or the store where you purchased the product for information regarding the collection schemes in your area.

	Waste Electrical and Electronic Equipment (WEEE)	This symbol on the product and/or packaging indicates that Waste Electrical products (WEEE) under Directive 2012/19/EU which governs used electrical and electronic appliances, should not be disposed of with general household waste.
	Waste Batteries and Rechargeable Batteries	This symbol on the batteries supplied with your product indicates that Waste Batteries under Directive 2006/66/EC which governs used batteries and accumulators should not be disposed of with general household waste. If the battery contains more than 0.004% lead, the battery symbol will be accompanied by the letters (PB).
	The Mobius Loop	This symbol indicates that the product or packaging is capable of being recycled.

Take-Back Scheme

Waste electrical products (WEEE) can be sent to One Retail Group for recycling and disposal when you purchase a new product from One Retail Group, on a like-for-like basis. For more information on how to recycle this product please visit www.probreeze.com

The end-user of electrical and electronic products (WEEE) is responsible for separating old batteries and lamp bulbs before they are handed over to a designated disposal and recycling service. Waste batteries can also be disposed of in collection bins, which can be found in most local supermarkets and household waste recycling centres.

DECLARATION OF CONFORMITY

Hereby, One Retail Group Limited declares that the radio equipment type PB-F-20W-W-UK and PB-F-20B-W-UK is in compliance with Directive 2014/53/EU / Radio Equipment Regulations 2017. The full text of the EU Declaration of Conformity / UK Declaration of Conformity is available at the following internet address: <https://probreeze.com/pages/ec-declaration-of-conformity/>

PSTI STATEMENT OF COMPLIANCE

Hereby, One Retail Group Limited declares that PB-F-20W-W-UK and PB-F-20B-W-UK is in compliance with The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023. The full text of the UK PSTI Statement of Compliance is available at the following internet address: <https://probreeze.com/pages/psti-compliance/>



www.probreeze.com

One Retail Group, Ryland House,
24a Ryland Road, Kentish Town, London, NW5 3EH, UK

EU Authorised Representative: One Retail Group EU Ltd.,
No. 1, Ent. A, St. Racho Dimchev 1, Sofia, 1000, Bulgaria
Compliance Contact: compliance-eu@oneretailgroup.com

© Copyright 2025