 


145.00 mm



INSTRUCTION MANUAL

FSC-092-BEL

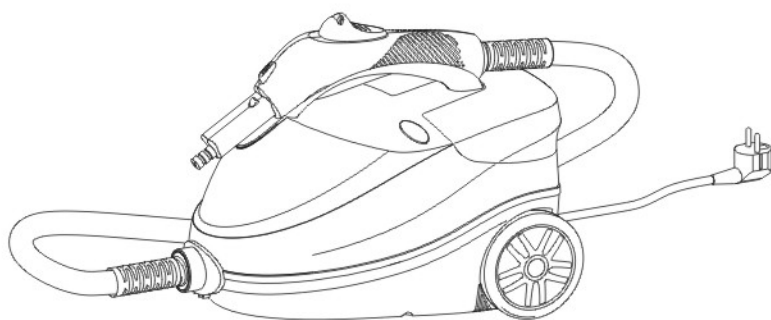

STEAM CLEANER

 
210.00 mm

2020-10-28

Dear Customers

Thanks for purchasing our steam cleaner. Please read the instruction carefully and retain for future use.

Due to our on-going improvement program, some specification may be changed.

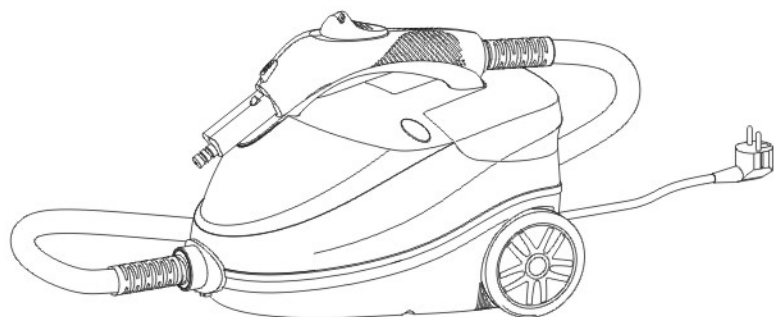

Please kindly keep this manual in a place which is easy to take.

Product Features

Advantage

With Unique patented technology by using high temperature and steam pressure to clean floor, Windows, lampblack machine, air conditioner. No chemical reagent, almost zero injury of cleaning items.

Safety

High sensitivity of the temperature control system.

Automatic power off when water used up.

If steam pressure in the boiler is too high, it will be released directly.

Durable














Super thick aluminum boiler with die-casting design can make quick heating up time and long life usage.

Energy saving

Special heating pipe with the boiler integration design make it complete heating with high efficiency & energy conservation.

Safety Guards

The below notice is to prevent harm and damage to the user and others, it separated as **[Forbidden] & [Attention]**.

 Forbidden	
 Do not spray to any aim in same position for more than 5 sec	 Do not put heavy weight on power cord or stamp on
 Do not unplug the power source	 Do not touch steam within 20cm from gun
 Do not open safety valve when usage.	 Do not use broken power cord or switch
 Do not pour any other liquid except water	 Please do not let children play.
 Do not put machine in heat surface	 Do not use water to rinse
 Do not use when no water.	 Do not dump when power is on



Attention



Turn off the power when Power failure, , machine failure



Machine must be in ventilated room



This product is only suitable for family



please be sure to lock children lock when stopped using



please check whether damaged before using



Please pay attention when filling water



There may some water in the steam for first usage.



Do not change, replace or remove any parts until cool



If temperature is lower than 0 °C, please do not clean window



Do not spray the steam to clean glass in the same position more than 2 seconds



Please revolve the safety valve before power on or hot water will pour out



When not in use or leave, please turn off the power switch



 







 





Any failure must send to professional service center




Please open the safety valve after complete cooling

Unit and Accessory


Unit x 1		Measuring cup x 1	
Extension tube x 2		Ironing brush x 1	
Glass brush x 1		Big nozzle x 1	
Floor brush x 1		Carpet glider x 1	
Cord rewriter x 1		Hanger x 1	
Round brush x 1 (Stainless)		Round brush x 1 (Nylon)	
Towel of floor brush x 1		Ironing towel x 1	

 Structure of Unit

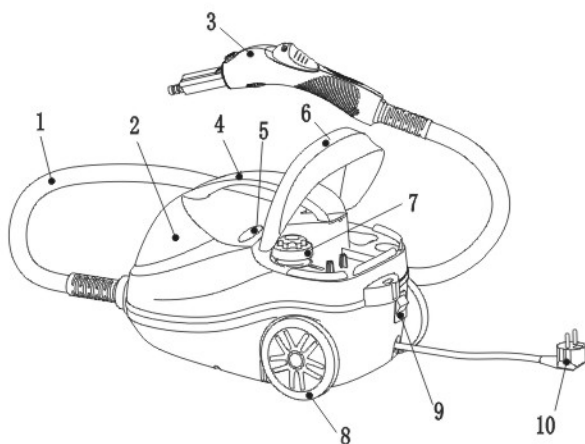

No .	Name	Function
1	Soft pipe	Deliver the steam from unit
2	Unit	Produce the steam and storage
3	Steam gun	Control the steam on/off.
4	Handle	Move by hand
5	Led light	Display the steam states.
6	Cover	To fill water and store small accessories
7	Safety valve	Fill water & release the excessive pressure
8	Wheel	Easy for moving
9	Power switch	Control the electric power
10	Power plug	Connect with socket to get electricity

 Structure of Steam Gun

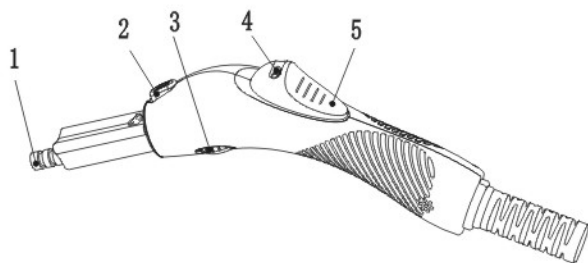

No.	Name	Function
1	Steam nozzle	Output of steam
2	Accessory lock	Connected with accessories. Remove the accessories when pressed down
3	Adjust button	Adjust the steam amount
4	Steam lock	Steam off / Steam auto come out
5	Steam button	Control the steam states

Operation Instruction

1. Fill water

Please kindly using the measuring cup to fill water before using.



Remark:

★please make sure that no residual water in the boiler before add water. Pour out the rest water and clean the boiler. There will be calcification inside which may clog the steam after long time.

★Method of cleaning boiler: first add a small amount of water in the boiler, fully shaking hands rock the machine, and pour out the water. Suggest you can repeat above action if the water contains a lot of impurity.

★In order to get high dry steam, please be sure to fill 0.5L ~ 1.5L water.

Max water can be filled 1.7L.

★Please screw the safety valve when water filled in.

 **Do not inject any liquid except clean water**

2. Power on

★Please ensure that the boiler with water and the relief valve in a tight status before power on.

★Put the plug into socket and open the power switch. If the power is on, the red light in switch will on.



Do not use wet hand to touch the power



Do not use any power cord, power socket in broken status.


3. Operation


If green light show at the first time, means steam is ready. Normally it need 5-6 minuets. The final time depends on how many water your filled.

Hold on the steam gun by hand and move the steam button ahead. Steam will come out directly.

If you need automatic steam without hand, just turn the steam lock to the right side when in using.

There will be some water first. Do not use to clean carpet, ironing cloth etc. Suggest you can spray to some container. It will be normal in 2-3 seconds.

Here is steam adjustable button in the gun. Please kindly adjust the steam amount accordingly to actually situation. For a long time of using, you can turn the steam lock to the right side  and than steam come out without the hand touch. For stopping, just turn the steam lock to the left side.

Any temporary leave (get a call), please stop the steam and turn the steam lock to the right side  , and than you can not trigger the steam anymore.

★Please choose the appropriate accessories according to the actual situation. Detailed please refer to the accessories instructions.



If the user left for a long time, please shut off the power.

★Red light show on it means short of water.

If you want to continue use, please turn off the power switch and wait cool for about 20 minutes before open the safety valve for water.

The right way to open the safety cap is Press down the dot first, at the same time unscrew the safety valve by anti clockwise.



Please note that there is a risk of burns when pouring water since it is still hot.

Following steps from 1 ~3 for repeat using.

4. Storage & Cleaning

After use, please turn the power off.


If the water has not fully released, please open the safety valve until cooling and then pour out the water.

★If there is dirt on the surface of body, please use dry dishcloth with some water to wipe gently.

 **Do not use water to spray the machine.**

 **Don't placen it under damp which may cause short circuit.**

You can install the cord rewriter on the back of unit and assemble the power cord on it.

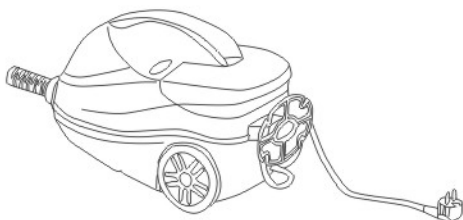


After cleaning please keep it in a dark and dry place.

Instruction Using For Accessories

1. Extension tube


Mount the extension tube to use the steam cleaner to clean the floor, high windows or inaccessible areas. Place the open end of tube on the steam gun until the

steam gun release button clicks in the place. Use one or two extension tube, as necessary. To remove the extension, press the release button and pull the tubes apart with a downward motion.

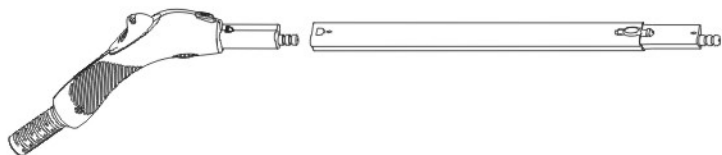

2. Big nozzle

This nozzle makes it perform a deep cleaning and easily reach places such as corners, junctions or bathrooms. Simply push the nozzle firmly and adjust the gun directly.

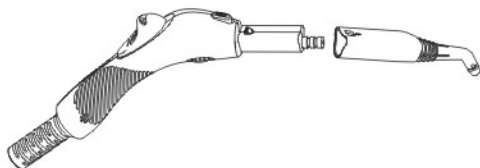

3. Round brush

Round nylon and metal brushes are inserted firmly into big nozzle. You can even eliminate stubborn dirt from blinds, radiators, etc. Use the small metal brush. The nylon brush is suitable for heavier stains on less sensitive materials such as stainless steel. To remove it, you just have to push it down and remove it directly.




4. Ironing brush

To iron a chair, sofa, bed, etc, place the white ironing towel on

ironing brush and connect with the steam gun.

In addition, you can adjust the extension tube in the middle of unit hole. You can put the clothes on it directly.


We suggest you using a small amount of steam when using this function.

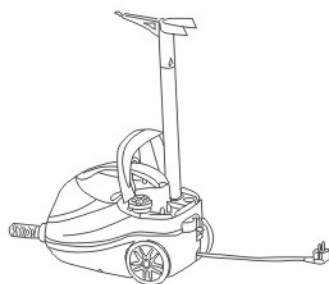

5. Window brush

To clean window, mirrors, or tiles or objects with smooth surface, use the window brush, which has a rubber for cleaning. When installed, set in the two prominent parts of the hook scraper; then place the glass brush cover for ironing; an audible click will sound, and the installation is complete.



 **If temperature is lower than 0 °C, please do not use this product to clean glass**

 **Do not placed in the same position more than 2 seconds**

6. Floor brush

Connect the nozzle on the floor brush to the end of extension tube. Make sure that the nozzle fits properly in place. The floor brush is ideal for cleaning washable walls and floor coverings. It can be used with or without the mop. Press on the inside of the handle, open the latches to attach the mop.

As for towel, please first fold in half, and than clamp in the brush directly.

Add the carpet glider if you need to clean the carpet.
open the clips to hold the towel.



Trouble shooting

Situation	Case	Solution
No spray steam	Plug not insert to the power socket tightly	Insert again or change the socket
	Switch indicator light off	Turn on the switch
	No water	Fill water
	Not press the steam button	Press on children's lock
Water is flowing from nozzle	There may some water in the steam for first usage or stopped for a while.	normal phenomenon. Will disappear quickly
	Influence the normal use	Ask professional service
Others	Steam come out besides the nozzle	Ask professional service
	plastic deformation and softening phenomenon	
	Other electric equipment cannot be used	
	Steam come out from safety valve	