



[www.subcold.com](http://www.subcold.com)

# SUPER SERIES


PLEASE READ & RETAIN USER MANUAL FOR FUTURE REFERENCE

## USER MANUAL

## Contents

Important Safety Warnings	3-4
Intended Usage & Environment	4
Operating Instructions	5-6
Moving & Handling Your Appliance	8
Maintenance & Defrost	8-9
Contamination Prevention Guidelines	9
Troubleshooting Guide	10-11
Product Specification	12
EPREL	13
Warranty	13
Environmental Friendly Disposal	13

## Important Safety Warnings

- **Caution When Positioning:** Ensure the appliance's power cable is neither trapped nor damaged during positioning.
- **Power Socket:** Refrain from positioning portable power sockets or cables at the rear of the appliance.
- **Child Entrapment Risk:** Exercise caution to prevent the risk of child entrapment.
- **Ventilation Clearance Warning:** Maintain adequate ventilation openings around the appliance; it should remain unobstructed without any door coverings.
- **Refrigerant Circuit Warning:** Avoid damaging the refrigerant circuit.
- **Defrosting Caution:** Use only recommended methods to defrost; sharp objects or other tools may cause permanent damage.
- **Electrical Appliance Use Warning:** Refrain from using electrical appliances inside the fridge unless manufacturer recommended.
- **Disposal Precautions:** Before disposing of the appliance, remove doors and leave shelves in place.
- **Flammable Materials Caution:** Never allow children to interact with the appliance, avoid cleaning with flammable liquids, and keep flammable materials away from the appliance.
- **Cleaning Instructions:** Use non-abrasive cleaners or soapy water for cleaning; avoid solvents.
- **Fire Hazard Symbol:** Symbol ISO 7010 W021 indicates a fire hazard. 
- **Ventilation Clearance:** Maintain a minimum of 3-5cm clearance at the top of the appliance, and a 3-5cm clearance on each side of the appliance for proper ventilation and heat dissipation.
- **Door Openings:** Minimise the time the door is open to maintain a stable temperature.
- **General Installation Guidelines:** Avoid heat sources and direct sunlight, install on a flat, clean, stable surface, and refrain from placing other electrical equipment on the appliance.
- **Damp Environment Warning:** Ensure the appliance is not placed in damp areas.
- **Perishable Food Storage:** Avoid storing perishable food in this appliance for extended periods of time, as the indoor temperature may not be sufficiently cold for proper storage.
- **Circuitry and Power Plug:**
  - The circuitry for the refrigerator must be isolated. The area of cross section of wire must be larger than 0.75mm.
  - The power plug should have its own socket, grounded, as an adapter may cause the socket to overheat.
  - The voltage and frequency of this product should be 220-240V;50Hz. Contact a qualified local electrician or retailer in case of electrical cord damage.
  - Always disconnect the power by pulling the power plug out of the socket directly and not by the cord.

## Important Safety Warnings

- **Supervision and Usage:** Persons with low physical, sensory, and mental capabilities (including children below 8 years) are not advised to use this appliance unless they are well supervised/instructed by a safety person. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance should not be done by children without supervision.
- **Ventilation Opening:** Ensure the ventilation opening in the appliance enclosure is clear of obstruction.
- **Disposal Instructions:** Before disposing of your old refrigerator or freezer, take off the doors and leave the shelves in place to prevent easy access for children.
- **Prohibited Storage:** Do not store explosive devices/substances such as aerosol cans with a flammable propellant in the appliance.
- **Intended Use:** This appliance is intended for household and similar applications.
- **Use of Electrical Appliance:** Do not use electrical appliances inside the food storage compartments of the appliance unless recommended by the manufacturer.
- **Replacement of Faulty Parts:** All affected or faulty parts (including the light) must be changed by a certified technician.
- **Supply Cord Replacement:** To avoid hazards, the supply cord must always be replaced by the manufacturer, its service agent, or similarly a certified/qualified person when damaged.
- **Built-in Appliance Use:** This refrigerating appliance is not intended to be used as a built-in appliance.

## Intended Usage & Environment

- **Intended Use and Temperature Range:** This appliance is specifically designed for indoor use within households and similar applications, excluding catering and non-retail environments. It operates optimally within a room temperature range of 16°C to 32°C.
- **Age Recommendation and Supervision:** This appliance is intended for use by individuals aged 8 years or older. Individuals with reduced physical, sensory, or mental abilities may use this item, provided they are under appropriate supervision. Cleaning and user maintenance activities should be overseen. It is crucial to provide clear instructions on safe usage and address any associated risks.
- **Child Safety Warning:** Refrain from using this product in areas accessible to children, and do not permit unsupervised use by children. The appliance is not designed for play by children.
- **Built-in Use:** This appliance is not intended for built-in use.
- **Food Freezing Warning:** It is not suitable for freezing food items.

## Operating Instructions

### Before Putting Your Appliance Into Use

- Remove all inner and outer packaging components, including adhesive transport tapes.
- Verify that none of the following are missing:
  - Removable Shelves
  - Operating Manual
  - Set of 2 Keys
- Allow the appliance to stand upright for a minimum of 2 hours before connecting it to a power supply. This minimises the risk of refrigeration system malfunction due to transport & handling.
- Clean the inner surfaces of the unit with a soft cloth and warm, soapy water. Avoid using any abrasive cleaners or solvents.
- Place the unit on a stable surface that can withstand its weight, making sure to adjust the front feet for stability. Ensure the surface is firm, flat, and level to reduce noise and vibration. Tighten the adjustable legs to the floor and tilt the appliance slightly backward to ensure the door closes tightly.
- Install the appliance away from direct sunlight and heat sources to prevent damage to the coating and reduce power consumption. Extreme temperatures can affect proper operation.
- Maintain a minimum of 3-5cm clearance at the top of the appliance, and a 3-5cm clearance on each side of the appliance for proper ventilation and heat dissipation.
- Do not install the unit in unheated buildings, outbuildings, or garages.
- This unit is for indoor use only.
- Before connecting the unit to the power supply, ensure the drip tray above the compressor is properly positioned.

**Caution:** Keep the unit away from any substances that may cause combustion.

## Operating Instructions

### Setting the Temperature Control

The refrigerator's temperature can be manually adjusted using the control dial. A higher number on the thermostat corresponds to a colder inside temperature.

Your unit features a single control dial for regulating the temperature in the compartment, located at the lower right side.

For initial use, set the temperature dial to 5. After 24 hours, you can adjust it to suit your needs. "3" and "4" are recommended settings for home or office use.

To switch off the appliance, turn the dial to "0".

The temperature range is 3-18°C.


#### Note:

Turning the dial to "0" stops the cooling cycle but does not disconnect the unit's power. If the unit is unplugged or turned off, wait for 3 to 5 minutes before restarting to avoid malfunctioning.



### Super115-MK2 Setting the Temperature Control

You can select the temperature display settings from Fahrenheit to Celsius by pressing "+" and "-" for 2 seconds at the same time. The degrees will be displayed in white on the temperature display window.

When you do not operate all the keys for 10 minutes, the light will automatically go out. You can also control the light switch by pressing "  ".

You can set the temperature as you desire by pushing button "+". The temperature that you desire to set will increase 1°F or 1°C if you push the button once.

You can set the temperature as you desire by pushing button "-". The temperature that you desire to set will decrease 1°F or 1°C if you push the button once.

The temperature range is 0-18°C.



## Operating Instructions

### Door Reversal

1. Use a flathead screwdriver to gently prise up and slide forward the top hinge cover on the right side, removing it.
2. Utilise a battery drill with a 'Phillips head' to unscrew the three screws securing the top hinge, then lift off the hinge and set it aside.
3. Carefully lift the door straight upwards and place it to one side.
4. Lay the fridge on its back to access the three screws holding the bottom hinge. Remove these screws with the battery drill.
5. Attach the bottom hinge to the opposite side, using the same hole pattern as before.
6. Place the door back onto the bottom hinge pin.
7. Before re-fitting the top hinge on the fridge's top, remove the blanking plate.
8. Ensure the door is level and straight, then use the battery drill to securely tighten the screws back into place.
9. Return the fridge to an upright position and wait 2-3 hours before switching it back on.

## Moving & Handling Your Appliance

### How to Safely Disconnect Your Fridge

Take note of the position of each accessory when packing the appliance.

When repacking for transportation, ensure everything is securely packed and accessories are securely in place.

Avoid lifting or pulling the door or handle during transport to prevent damage.

Allow a minimum of 2 hours standing time before reconnecting the appliance to power.

Keep the appliance tilted at less than a 45-degree angle from the vertical direction while moving to prevent damage. Minimise exposure to strong vibrations during transportation.

## Maintenance & Defrost

- **Preparation for Maintenance**  
Disconnect the appliance from the power source and remove all contents.
- **Interior Maintenance:**  
Clean the inside of the appliance with clean water and a non-hazardous cleaner, then wipe it dry with a cloth. Avoid using any abrasives or solvents during cleaning.
- **Door Gasket Maintenance:**  
Thoroughly clean the door gaskets to prevent potential damage and increase operational life.
- **Outer Maintenance:**  
Remove dust using a dry, clean cloth to maintain the external cleanliness of the appliance.

### Defrosting Process:

- Excessive frost accumulation can impact the appliance's refrigeration efficiency and escalate energy consumption. Defrosting becomes necessary when the frost reaches a thickness of 5 mm.

Manual defrosting involves the following steps:

- Remove all contents from the appliance.
- Take out the shelves.
- Unplug the power cable.
- Open the doors and wait for the natural thawing process.
- Wipe away the defrost water with a dry cloth.

## Maintenance & Defrost

**Caution:** Do not employ alternative equipment or methods to aid the defrosting process, as it may cause damage to the cooling system.

**Note:** If there is excessive ice, the drip tray may overflow with surplus water. Wipe with dry cloths/ paper towels.

**Regular Cleaning and Upkeep:**

This appliance requires regular upkeep and cleaning for optimal performance. For safety, always disconnect the plug from the main power source before initiating cleaning procedures.

## Contamination Prevention Guidelines

To prevent food contamination and ensure safe usage of your appliance, follow these guidelines:

- Avoid prolonged door openings to prevent a significant increase in internal temperature, which can lead to food spoilage.
- Regularly clean surfaces that come in contact with food, such as shelves, drawers, and door seals, using a mild detergent and warm water.
- Ensure accessible drains are also kept clean to prevent the build-up of dirt and bacteria.

If the appliance will be unused for an extended period, take the following steps:

- Switch off the fridge.
- Defrost the appliance if necessary (refer to page 7).
- Clean and dry the interior thoroughly.
- Leave the door open slightly to allow air circulation and prevent the growth of mold and mildew.
- Refrain from storing explosive substances, such as aerosol cans with flammable propellants, in the appliance to avoid potential hazards.
- In the event of a damaged power cable, only a local qualified electrician or retailer should carry out replacement to mitigate potential safety hazards.

## Troubleshooting Guide

PROBLEM	POSSIBLE CAUSES & SOLUTIONS
<p>The appliance does not work</p>	<p>Ensure proper connection.</p> <p>Check if the circuit-breaker is tripped or if the fuse is blown.</p> <p>Verify the power socket by connecting another electrical appliance.</p> <p>The control dial is set to '0'.</p>
<p>The appliance is not cold enough</p>	<p>Adjust the temperature setting.</p> <p>In high ambient temperatures, consider setting the fridge to a colder temperature.</p> <p>Limit frequent door openings.</p> <p>Ensure the door is fully closed and the seal is positioned correctly.</p> <p>Allow sufficient space around the fridge for proper ventilation.</p> <p>If ice is present conduct a manual defrost.</p>
<p>The appliance operates continuously</p>	<p>Ensure ambient room temperature is within the operating range. Reduce the number of items inside.</p> <p>Minimise door openings.</p> <p>Ensure the door is completely closed - confirm the proper positioning of the door seal.</p> <p>Check/adjust the temperature control setting.</p>
<p>The light doesn't work</p>	<p>Check the appliance is connected to a power supply.</p> <p>The circuit-breaker is tripped, or a fuse is blown.</p> <p>The LED lighting may need replacing.</p> <p>Check that the light switch is not at the "OFF" position.</p>

## Troubleshooting Guide

PROBLEM	POSSIBLE CAUSES & SOLUTIONS
<p>Vibrations / The appliance seems to be making too much noise.</p>	<p>Ensure the appliance is leveled correctly and adjust feet if necessary.</p> <p>Make sure to properly position the shelves of the appliance within their grooves to minimise noise.</p>
<p>The door does not close properly</p>	<p>Ensure the appliance is leveled correctly and adjust feet if necessary.</p> <p>Adjust shelves or contents that may obstruct proper door closure.</p> <p>Ensure lock &amp; locking plate are in the correct position.</p>
<p>Water under the appliance</p>	<p>Check for correct water collection in the drip tray at the back.</p> <p>Confirm the drip tray is in place and empty it as required.</p> <p>Check the drip tray is not damaged/cracked.</p> <p>If the appliance is disconnected from the power supply to perform defrost the drip tray may overflow with excess water.</p>

## Product Specification

Model	SUPER35LED	SUPER50LED	SUPER65LED	SUPER85LED	SUPER115LED-MK2
Colours	Black/Silver	Black/Silver/SS	Black/Silver	Black/Silver/SS	Black/SS
Cooling System	Compressor	Compressor	Compressor	Compressor	Compressor
Temperature Range	3°C-18°C	3°C-18°C	3°C-18°C	3°C-18°C	0°C-18°C
Climate Class	N	N	N	N	N
Net Volume	33L	46L	60L	80L	123L
Energy Class	C	D	D	E	E
Noise (dB)	42dB	42dB	39dB	41dB	39dB
External Dimensions (WxDxH)	402x430x550 (mm)	440x470x530 (mm)	470x440x635 (mm)	474x440x840 (mm)	540x539x847 (mm)
Internal Dimensions (WxDxH)	300x315x440 (mm)	357x385x430 (mm)	385x335x528 (mm)	394x348x733 (mm)	450x411x726 (mm)
Packing Dimensions (WxDxH)	485x510x590 (mm)	530x540x580 (mm)	540x510x685 (mm)	580x535x900 (mm)	650x650x910 (mm)
Gross Weight	18kg	19.4kg / 20.2kg (SS)	22.5kg	30kg / 30.5kg (SS)	37.6kg / 39.5kg (SS)
Net Weight	16.2kg	17.8kg / 18kg (SS)	20kg	25kg / 25.5kg (SS)	33.6kg / 32.5kg (SS)
No. of Shelf	2	3	3	4	4
Door Material	Plastic/Glass	Plastic/SS & Glass	Plastic/Glass	Plastic/SS & Glass	Plastic/SS & Glass
Lighting (W)	1W	1W	1W	1W	1W
Input Power (W)	50W	50W	60W	65W	65W
Refrigerant gas	R600a	R600a	R600a	R600a	R600a
Refrigerant grams	17g	20g	20g	20g	20g
Lock and Key	Yes	Yes	Yes	Yes	Yes
Certification	CE, ROHS, ERP, UKCA, REACH	CE, ROHS, ERP, UKCA, REACH	CE, ROHS, ERP, UKCA, REACH	CE, ROHS, ERP, UKCA, REACH	CE, ROHS, ERP, UKCA, REACH
Plugs included	British Standard	British Standard	British Standard	British Standard	British Standard

## EPREL

The appliance's actual consumption is influenced by its usage and location. Please note that this appliance is specifically designed for non-perishable storage. For detailed model information, refer to the product database outlined in Regulation (EU) 2019/2016, accessible via the following link or by scanning the QR Codes below:

<https://eprel.ec.europa.eu/screen/product/refrigeratingappliances2019>



SUPER35



SUPER50



SUPER65



SUPER85



SUPER115-MK2

## Warranty Registration

To register your product warranty, kindly visit [www.subcold.com/pages/product-registration](http://www.subcold.com/pages/product-registration) and fill out the online form.

## Environmental Friendly Disposal



To avoid any harm to the environment or human health caused by improper disposal of electrical waste, recycle the appliance responsibly to promote the reuse of material resources. Disposal must be done safely at public collection points provided for this purpose.

Older refrigerators may contain CFCs that destroy the ozone layer; contact your nearest waste treatment centre for more details on proper disposal procedures.



sales@subcold.com



01506 440557



@subcoldltd



@subcold\_official



**Subcold Ltd.**

28/2 Firth Road  
Houstoun Industrial Estate  
Livingston, EH54 5DJ, United Kingdom.  
[www.subcold.com](http://www.subcold.com)

**Authorised Representative**

Authorised Rep Compliance Ltd.  
Ground Floor, 71 Lower Baggot Street  
Dublin, D02 P593, Ireland.  
[www.arccompliance.com](http://www.arccompliance.com)