


Quick Start Guide to Operate Heating

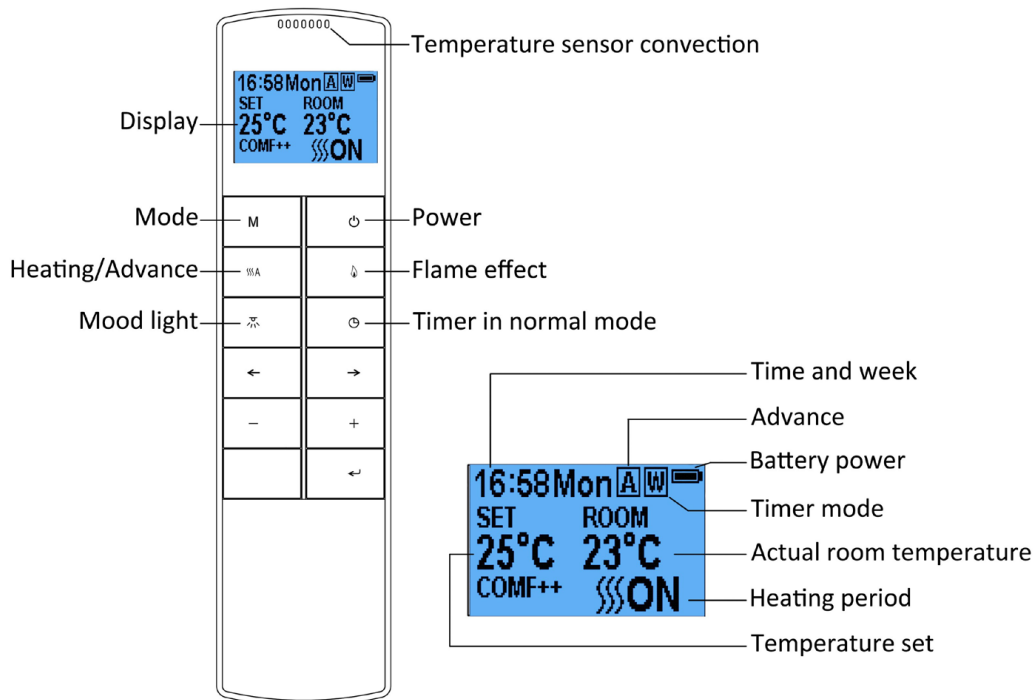


Insert batteries and program date/time – refer to instruction manual for advice.

Ensure handset and fire unit are paired – refer to 6b.33 in instruction manual.

Press **M** (Mode) button until **N** (Normal mode) is displayed in the top right-hand corner of the screen.

Adjust the “SET” temperature by pressing the + or – keys.

(SET temperature needs to be higher than the current ROOM temperature for heating to operate)

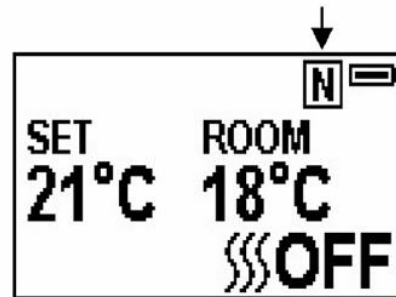

Press **A** (Heating/Advance key) to turn heater on/off. Status will be displayed on screen.

(It is normal for the fan heater to stop running whilst “ON” is displayed, if the ROOM temperature is at or above the SET temperature. To continue use, adjust SET temperature (max 25 degrees) or wait for ROOM temperature to cool)