 


THE Luma

lellle

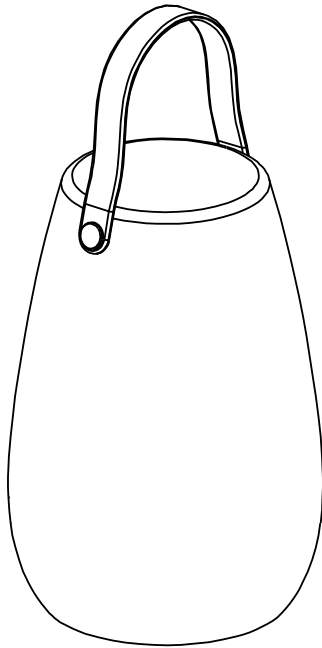

THE
Outdoor
Edit


User Manual
The Luma
OE011, OE012,
OE013, OE014

THE
Luma

lell

Assembly Time	People Required
No assembly required.	1 person

 Details

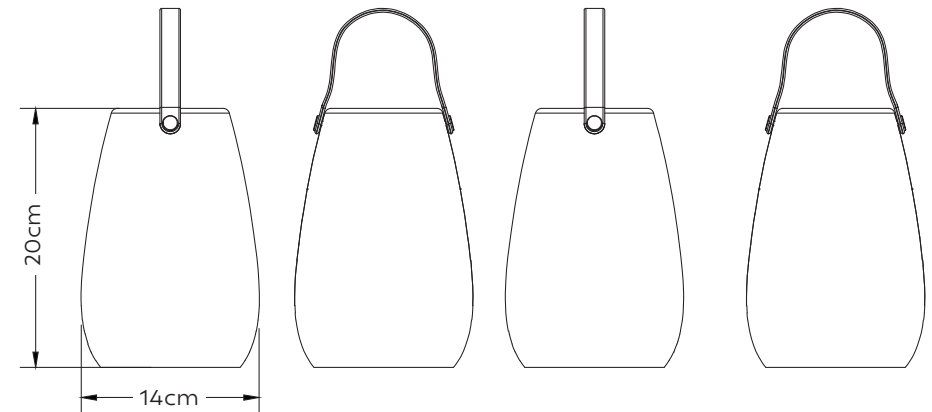

Technical Data

Material:	UV-resistant PE + Metal
Weight:	270g
Water Resistance:	IP54
Light Battery:	Lithium 3,7V/800-1000 mAh
Charge Time:	5-6 hours
Working Time:	8 hours, depending on lighting mode used
Ambient Temp:	14°C - 35°C
Remote Control Distance:	4m (13 feet)
Remote Control Battery:	CR2025 (3V)

Before you start!

- **Retain these instructions** for future reference.
- When you are ready to start, **make sure that you have the right tools, plenty of space** and a **clean, dry area** for assembly.
- Unwrap all packaging materials and **place the components on top of the carton box** or on a **clean surface** to prevent it from scratching.
- Check the pack and **make sure you have all the parts listed**.
- Ensure that this product is **fully assembled** as illustrated **before use**.

Warnings

- This product should only be used on a **firm, level surface**.
- **Do not** use this product if parts are **missing, damaged** or **worn**.
- Children under the age of 6 **should not use this product** without **adult supervision**.
- If the lamp is **damaged** in any way, **discontinue use** of the lamp immediately.
- **Never** open the light or attempt to repair it yourself.
- Keep batteries **out of the reach of children**.

Warranty

This product has a **12 month manufacturing warranty**.

- The warranty does not cover any accidental damage/neglect or general wear and tear.
- No liability will be accepted for damage or injury caused by incorrectly installed or assembled products.

Set-Up Instructions

****Note****

Please **charge** the product for **4 - 8 hours** before using it for the first time

Charging:

Before first use, **charge the battery for 4 - 8 hours**.

- Place the light on a level surface.
- Use a clean, dry cloth to clean the socket of the light.
- Open the socket cover and insert the adaptor DC5V 1A plug into the socket
- Connect the external adapter to the electrical outlet.
- It will begin to charge and the indicator light on the light will change to red.
- The indicator light will change blue when the battery is fully charged.
- After charging, disconnect the external adapter from the electrical outlet and remove the adaptor DC5V 1A plug from the socket.

Power On/Off:

- To power on the light, you can press ON/OFF the button on the bottom of the light or press the ON button on remote control.
- To power off the light, you can either press the ON/OFF button or press the OFF button on remote control.
- Change the colour by briefly pushing the ON/OFF button on the bottom of the light or by operating the remote control.


** see **Remote Control** section for further instructions.

Remote Control

Note

Please remove the small plastic sheet from the battery cover before operation.

1	Increase brightness
2	Decrease brightness
3	Turn light OFF
4	Turn light ON
5	Colour selection
6	Flash mode: light flashing
7	Strobe mode: disco effect
8	Fade mode: colour fades into another colour
9	Smooth mode: colour changes smoothly

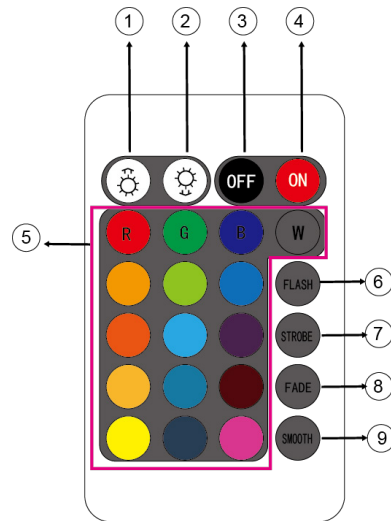

Battery Safety


- Swallowing may lead to serious injury or death.
- If you suspect your child has swallowed a battery, immediately seek urgent medical assistance.
- Examine devices to ensure the battery compartment is correctly secured.
- Do not use if the compartment is not secure.

KEEP BATTERIES OUT OF THE REACH OF CHILDREN

Battery Replacement:

If the remote control is not working, replace the battery (CR2025).

- Press the tab on the side of the battery cover and slide it off.
- IMPORTANT! Note the polarity on the cover (+/-) when installing the battery.
- Remove the battery if the light will not be used for an extended time period.

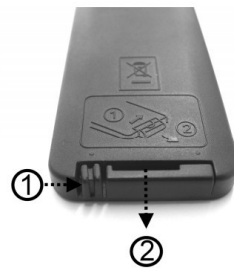

Care & Maintenance

- Always **POWER OFF** the light after use.
- Store the light out of the reach of children and direct sunlight.
- Do not use solvent based cleaners or detergents as they can bleach or damage the product.
- Never use a pressure hose or washer to clean the product.
- Never use scourers, abrasives or chemical cleaners as these may damage the paint, leaving the surface open to corrosion.
- Store the product in a cool, dry place. Before storage ensure that the product is clean and dry.
- The metal base is manufactured using powder coated steel. When steel is exposed to air and moisture it will rust. Any scratches on the paintwork should be touched up immediately with metal paint, otherwise corrosion may occur.
- Please keep away from sources of extreme heat and naked flames.

****Please note that the light source is not replaceable****

**PLEASE RETAIN THIS LEAFLET
FOR FUTURE REFERENCE**

leelo

THE
Outdoor
Edit

Need help?
help@theoutdooredit.co.uk
0141 230 2235
theoutdooredit.co.uk