



MEDIA WALL

OWNERS MANUAL



WARNING

Read and understand this entire owner's manual, including all safety information, before plugging in or using this product. Failure to do so could result in fire, electric shock, or serious personal injury.



CAUTION

Keep this owner's manual for future reference. If you sell or give this product away, make sure this manual accompanies this product.

TABLE OF CONTENT

Important safety information!	03
Parts and hardware	04
Specification and dimension	04
Fire installation	04
Media wall airflow & ventallation	06
Installation rough framing	07
Installation - minimum clearances	08
Operation	09
Installation rough framing	10
Installation plasterboard	11
Installation preparation	12
Installation choose your viewing style	13
Side lights installation	14
Installation of the front glass panel	15
Log-set / crystal ember media bed installation	16
Operation	17
Touch panel operation	18
Remote control functions	19
Operation	20
Remote control operation	21
Cleaning and maintenance	25
Troubleshooting/ faq	27

IMPORTANT SAFETY INFORMATION!

WARNING












When using electrical appliances basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

READ ALL THE INSTRUCTIONS BEFORE USING THIS APPLIANCE

- ✔ This heater is hot when in use. To avoid burning, do not touch hot surface. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 1 m from the front of the heater and keep them away from the sides and rear. In order to avoid overheating, do not cover the heater.
- ✔ Extreme caution is necessary when any heater is used near children or the infirm and whenever the heater is left operating and unattended.
- ✔ Always unplug heater when not in use.
- ✔ Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped damaged in any manner, return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- ✔ Indoor use only, do not use outdoors.
- ✔ This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water containers.
- ✔ Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tipped over.
- ✔ To disconnect heater, turn controls to off, then remove plug from outlet.
- ✔ Do not inset or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
- ✔ To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- ✔ A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, or flammable liquids are used or stored.
- ✔ Use this heater only as describes in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- ✔ DANGER-High Temperatures may be generated under certain abnormal conditions. Do not partially or fully cover or obstruct the front of this heater.
- ✔ Replacement of the lamps should be done only while the heater is disconnected from the supply circuit.
- ✔ This appliance is not intended for use by persons (including children) with reduced physical, sensory or capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- ✔ CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- ✔ Electric sockets in residential rooms should comply with the 6/12 spacing requirements, this comes from the NEC and states that in a living area of a home, you must keep an electrical socket (outlet) 6 feet from any obstruction, or break in the wall, such as a doorway and no more than 12 feet from the previous electrical socket.
- ✔ Whilst electric fires are very safe, we recommend you only plug into a mains socket, do not use an extension lead as the extension lead wire can get knocked, or overheat and become a hazard. You should never overload an extension lead or multiple extension leads.

✔ **DO NOT REMOVE THE PLUG FROM THE APPLIANCE THIS WILL CANCEL YOUR WARRANTY**

PARTS AND HARDWARE

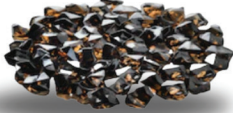 <p>A – Fireplace</p>	 <p>B – Screws</p>		 <p>C – Tube of Glue</p>	
 <p>Log Set</p>	 <p>D-Remote Control</p>	 <p>E- Side Lights</p>	 <p>F- Drill Bit</p>	 <p>F-Wall Plugs</p>
 <p>Small Crystals</p>		 <p>Large Crystals</p>		 <p>Smoked Gems</p>

FUEL BED

FIRE SIZE	SMALL LOGS	MEDIUM LOGS	LARGE LOGS	CLEAR CRYSTALS (Bags)	SMOKED GEMS (Bags)	LARGE CRYSTALS	SIDE TRIM	RAILS TOP & BOTTOM	FITTING KIT	MANUAL
44	4	2	2	2	1	6	2	2	1	1
50	8	2	3	3	2	6	2	2	1	1
60	8	4	3	3	2	8	2	2	1	1
72	8	4	4	3	2	10	2	2	1	1
82	8	4	5	3	2	12	2	2	1	1

Installation and Assembly

NOTE

REMOVAL OF THE PLUG TOP FROM THE POWER CABLE WILL INVALIDATE YOUR WARRANTY.

Your appliance is a wall-mounted appliance. Select a suitable location that is not susceptible to moisture and is away from drapes, furniture and high traffic-areas.

MINIMUM CLEARANCE TO COMBUSTIBLES

Wall Mounted Installation

Due to the many different materials used on different walls, it is highly recommended that you consult your local builder before you install this appliance on the wall.

- A.** Select a location that is not prone to moisture and is located at least 36" (914mm) away from combustible materials such as curtain drapes, furniture, bedding, paper, etc.
Have two people hold the appliance against the wall to determine the final location.
- B.** Remove the cleat & two batons which are screwed to the top section.
- C.** Using the measurement shown on the cleat fix it onto the wall using the supplied fittings and apply a bead of instant nails. The measurement is to be taken from the left & right side of the bottom section.

NOTE

Plaster board walls:

it is strongly recommended that the cleat be screwed into the wall studs.

- E.** With the cleat installed have two people lift the top section up onto the cleat.
- F.** Now to fit the side batons, draw a line down both sides of the top section, remove the top section and measure in 1 inch in from the lines, this is where the batons are to be installed using the supplied fitting kit.
- G.** Run a bead of glue on the top of the cleat using the instant nails supplied within the fitting kit.
- H.** Have 2 people lift the top section into place and screw 2 screws through each side of the top section into the side batons.
- I.** Above each side panel in the bottom section you will find pre-drilled holes. Using the 32 x 16mm screws supplied within the fitting kit fix the bottom section to the top by screwing up into the top section, 16 screws on each side, this amount may vary depending on the model you have chosen.
- J.** Check the appliance for stability ensuring that the top section will not pull free from the wall.

MEDIA WALL INSTALLATION GUIDES

Scan the QR codes to watch our simple installation guides



Package 1



Package 2



Package 3



Package 4



Package 5



Package 6



Package 7



Package 8




Package 9



Package 10



Package 11

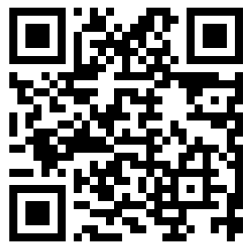

Package 12



Package 13



Package 14



Package 15



Package 16



Package 17




Package 18



Package 19



Package 20

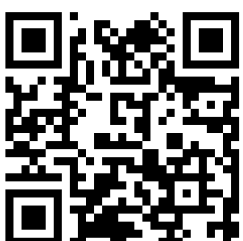

Package 21



Package 22



Package 23

Package 1 and 4 Floating Media Walls Installation



Image 1



Image 2



It is strongly recommended that the cleat and mounting bracket be screwed into the wall studs.

Due to the many different materials used on different walls, it is highly recommended that you consult your local builder before you install this appliance on the wall.

- A.** Select a location that is not prone to moisture and is located at least 36" (914mm) away from combustible materials such as curtain drapes, furniture, bedding, paper, etc. Have two people hold the appliance against the wall to determine the final location.
- B.** Remove the hanging bracket which is screwed to the back of the electric fire and fix to your wall (shown in image 1) choose a height ensuring there is enough space above to fit the top section.

C. Follow steps A to J on page 3

OPERATION



Please read the entire owner's manual, including all safety information, before plugging in or using this product. Failure to do so could result in fire, electric shock, or serious personal injury.


Power

Plug the power cord into a 220-240V 50Hz outlet (see **IMPORTANT SAFETY INFORMATION** on Pages 2 and 3). Make sure the outlet is in good condition and the plug is not loose. **NEVER** exceed the maximum amperage for the circuit. **DO NOT** plug other appliances into the same circuit.

Hard floor covering in particular, but all floor coverings cause fluff that can be drawn into the air intakes. From time to time and no less than every two months, isolate the fire from the mains and attach the brush accessory to your vacuum cleaner and gently vacuum the air intakes and outlets.

Image of air flow vents shown on page 6

AIR FLOW VENTS

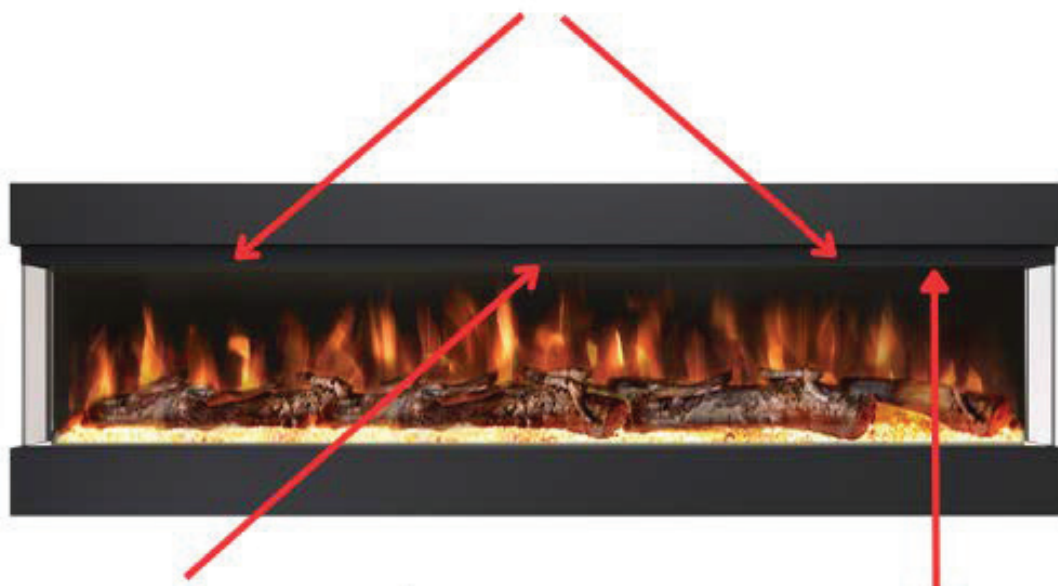


Heater Location

Control Panel


MM MEASUREMENT

The cleat which is to be fixed to the wall can be found screwed to the top of the media wall. This will show a millimeter measurement

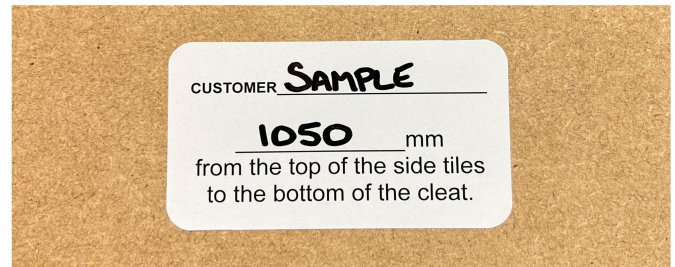


MEASUREMENT POINT

This measurement is to be measured from the side bracket not the recess at the back of the fire.

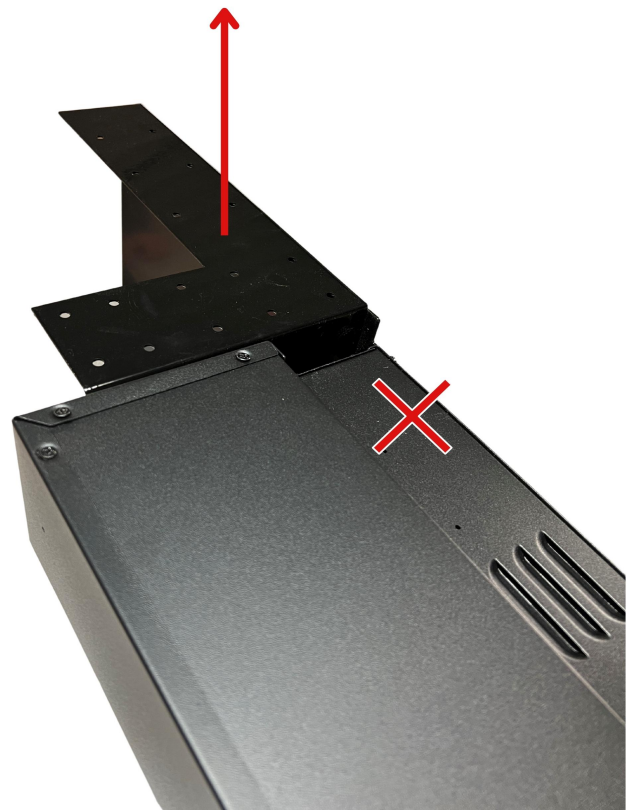

GAP FOR CABLES

There is a gap between the side bracket and the fire for your media cables to run up from into the top section.

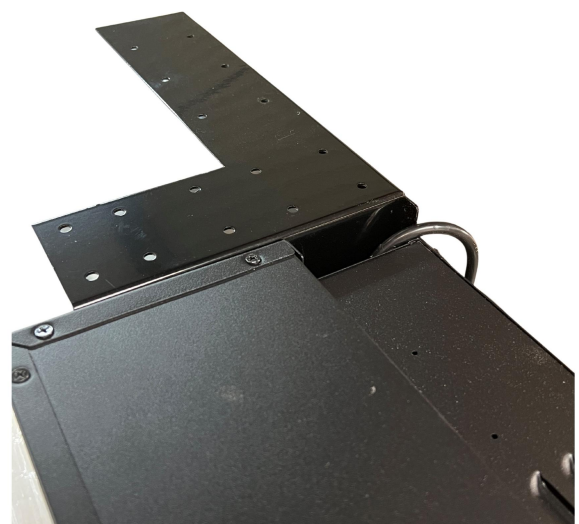

LOG-SET / CRYSTAL EMBER MEDIA BED INSTALLATION

NOTE: It is strongly recommended that the mounting bracket be screwed into at least 2 wall studs.

A. The glass front must be removed and the appliance must be mounted in its final location before the log-set / crystals are installed.

B. Crystal Media Bed Placement

Carefully empty the 2 bags of small crystals onto the plastic tray, see **Figure 1**.

Next place the 4 large crystals on top of the small crystals and replace the glass, see **Figure 2**.



Figure 1.
Small Crystal Placement



Figure 2.
Large Crystal Placemen

C. Spectrum Log Placement

1. Empty the 2 crystal bags onto the plastic tray (shown in figure 1.)
2. Place the 2 large logs on top of the crystal's
3. Place the 2 medium logs at ether end of the media bed,
4. Place the 4 twigs on top of the large logs.



Large Logs 2



Medium Logs 2



Spectrum Log Placement




INSTALLATION OF THE FRONT GLASS PANEL

Firstly remove the 4 screws which are fitted into the fireplace as shown




Unpack the glass screen, place it into the bottom tray and push backwards until the 4 tabs on the glass screen line up with screw holes.

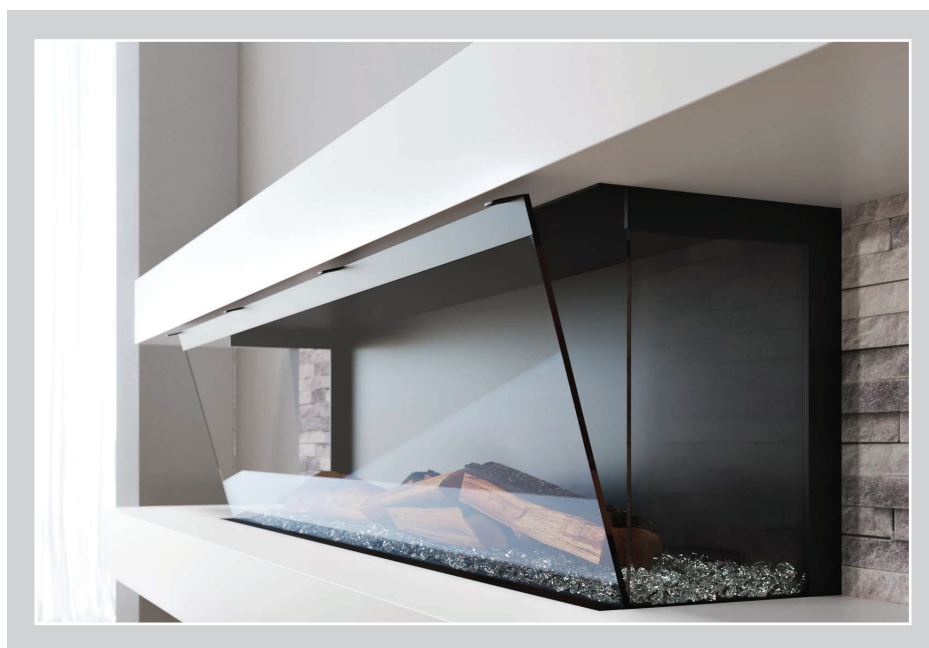

Screw in the 4 screws which were removed in the first step.

SIDE LIGHTS INSTALLATION

Install the side lights as shown below.

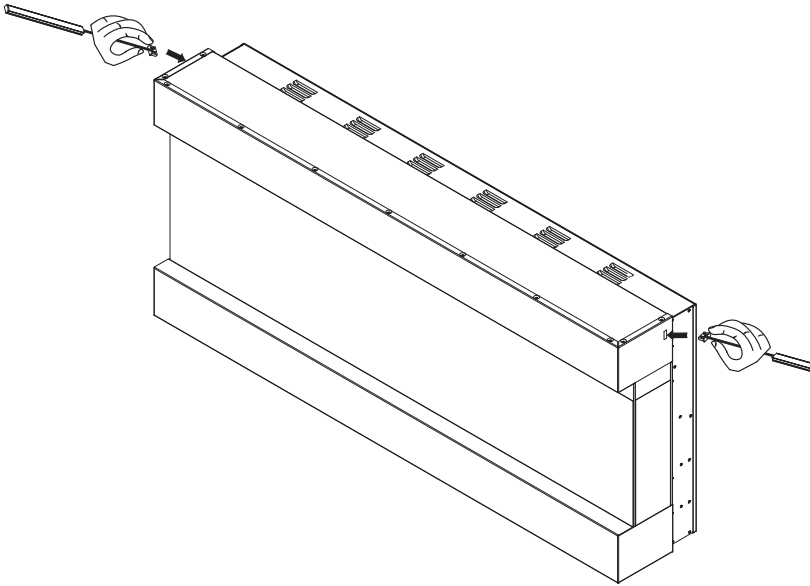

Side Light Colour Options


Please Note:

The side lights can only be used on media wall designs when the media wall build is wider than the fire, see the example below when the media wall is wider than the fire.


Peel back the red tape from the side light and stick the light to the bottom of the media wall.



Single Sided

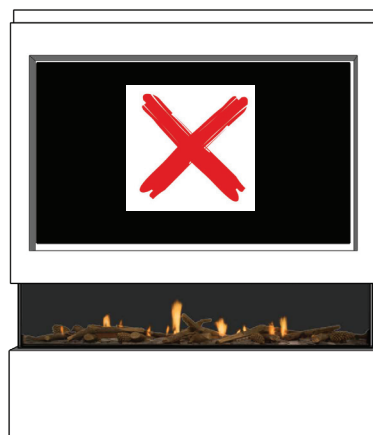

Flush Sides

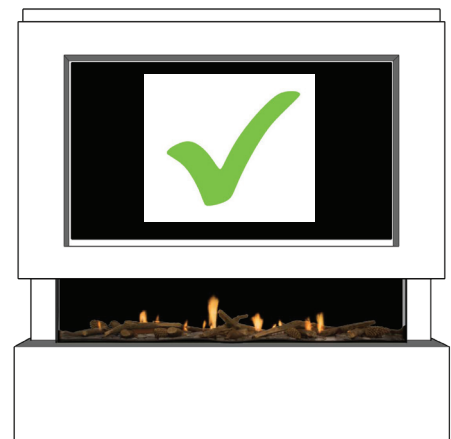

Side Cheeks

OPERATION



Read and understand this entire owner's manual, including **all safety information**, before plugging in or using this product. Failure to do so could result in **electric shock, fire, serious injury, or death.**

Power



Plug the power cord into a 220-240V 50Hz outlet (see **IMPORTANT SAFETY INFORMATION** on **Pages 2 and 3**). Make sure the outlet is in good condition and the plug is not loose. **NEVER** exceed the maximum amperage for the circuit. **DO NOT** plug other appliances into the same circuit.

Methods of Operation







This electric fireplace can be operated by the TOUCH PANEL, located on the right side panel of the fireplace (see figure below), or by the battery-powered REMOTE CONTROL.

The operation and functions of the two methods are the same.

Before operating, please review the **IMPORTANT SAFETY INFORMATION** on **Pages 2 and 3**, and heed all warnings.

TOUCH SCREEN PANEL	REMOTE CONTROL
<p>Digital Touch Screen Panel</p> 	

TOUCH PANEL OPERATION

BUTTON	FUNCTION	ACTION&INDICATION																																													
 POWER	<p>ON: Enables control panel functions and remote control. Turns on flame effect.</p> <p>OFF: Disables control panel functions and remote control. Turns off flame effect.</p>	<p>1. Press once. Indicator light turns on. Power turns on. All functions enabled.</p> <p>2. Press again. Flame effect turns off. Unit goes to standby. All functions turn off.</p>																																													
 TIMER	<p>TIMER button: Controls timer settings to turnoff fireplace at selected time.</p> <p>Settings range from 0.5 hours to 8 hours.</p>	<p>1. Press once. Indicator light turns on. Timer is set to 0.5 hours.</p> <p>2. Press again until desired setting is reached. Indicator lights show setting.</p>																																													
 FLAME	<p>FLAME button: Makes flame effect dimmer and brighter.</p> <p>NOTE: Flame effect stays on until power button is turned off. Flame effect must be on for heater to turn on.</p>	<p>1. Press once. Flame brightness effect gets changing.</p> <p>2. Press again. until desired setting is reached.</p>																																													
 COLOR	<p>COLOR button: Makes the color flame effect changing.</p> <p>NOTE: color effect stays on until power button is turned off. Color flame effect must be on for heater to turn on.</p> <p>NOTE: this fireplace is with memory function for flame.</p>	<p>1. Press once. Flame color effect gets changing.</p> <p>2. Press again until desired setting is reached.</p>																																													
 HEATER	<p>HEATER button: Turns heater on and off.</p> <p>NOTE: The heater only works when the flame effect is on. If the flame effect is off, the heater will not turn on.</p> <p>NOTE: To prevent overheating, the heater fan will blow cool air for 8-10 seconds before the heater turns on, and after the heater turns off.</p>	<p>1. Press once. Indicator lights up. Fan blows cool air for 10 seconds. 750W heater turns on and blows warm air.</p> <p>2. Press again. Indicator lights up. 1500W heater turns on and blows hot air.</p> <p>3. Press again. Heaters turn off. The fan blows cool air for 10 seconds to allow heater to cool down, then turns off.</p>																																													
 TEMP	<p>TEMPERATURE button: Turns heater on and off.</p> <p>NOTE: Press the button for 5 seconds, the temperature setting will switch from °C to °F. Same way from °F to °C.</p>	<p>1. Press once: Touch screen functions panel indicator comes active.</p> <p>Press again: until desired setting is reached. Digital display shows setting cles as below:</p>																																													
<table border="1"> <thead> <tr> <th>Display</th> <th>0</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> <th>7</th> <th>8</th> <th>9</th> <th>10</th> <th>11</th> <th>12</th> <th>N</th> </tr> </thead> <tbody> <tr> <td>°C</td> <td>18</td> <td>19</td> <td>20</td> <td>21</td> <td>22</td> <td>23</td> <td>24</td> <td>25</td> <td>26</td> <td>27</td> <td>28</td> <td>29</td> <td>30</td> <td>C</td> </tr> <tr> <td>°F</td> <td>64</td> <td>66</td> <td>68</td> <td>70</td> <td>72</td> <td>74</td> <td>76</td> <td>78</td> <td>80</td> <td>82</td> <td>84</td> <td>86</td> <td>88</td> <td>F</td> </tr> </tbody> </table>			Display	0	1	2	3	4	5	6	7	8	9	10	11	12	N	°C	18	19	20	21	22	23	24	25	26	27	28	29	30	C	°F	64	66	68	70	72	74	76	78	80	82	84	86	88	F
Display	0	1	2	3	4	5	6	7	8	9	10	11	12	N																																	
°C	18	19	20	21	22	23	24	25	26	27	28	29	30	C																																	
°F	64	66	68	70	72	74	76	78	80	82	84	86	88	F																																	

OPERATION



Read and understand this entire owner's manual, including **all safety information**, before plugging in or using this product. Failure to do so could result in **electric shock, fire, serious injury, or death**.

Power

Plug the power cord into grounded outlet (see **IMPORTANT SAFETY INFORMATION** on Pages 2 and 3). Make sure the outlet is in good condition and that the plug is not loose. **NEVER** exceed the maximum amperage for the circuit. **DO NOT** plug other appliances into the same circuit.

Methods of Operation

This electric fireplace can be operated by the TOUCH PANEL, located on the right side panel of the fireplace (see figure below), or by the battery-powered REMOTE CONTROL.


The operation and functions of the two methods are the same.

Before operating, please review the **IMPORTANT SAFETY INFORMATION** on Pages 2 and 3, and heed all warnings

Digital Touch Screen Panel




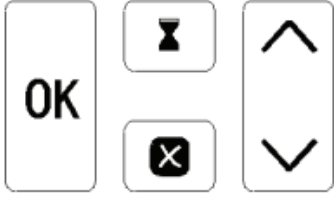



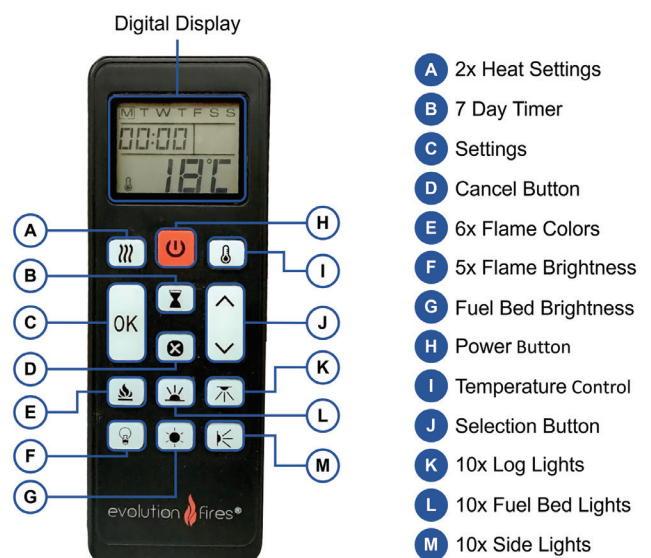

Remote Control Functions








REMOTE CONTROL OPERATION

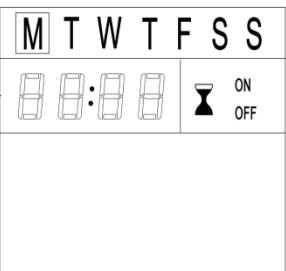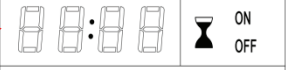BUTTON	FUNCTION	ACTION & INDICATION
	<p>COLOR button: Makes the color flame effect changing.</p> <p>NOTE: color effect stays on until power button is turned off. Color flame effect must be on for heater to turn on.</p>	<p>1. Press once. Indicator light turns on. Flame color effect gets changing.</p> <p>2. Press again until desired setting is reached. Display window shows setting.</p>
	<p>FLAME button: Makes flame effect dimmer and brighter.</p> <p>NOTE: Flame effect stays on until power button is turned off. Flame effect must be on for heater to turn on.</p>	<p>1. Press once. Indicator light turns on. Flame brightness effect gets changing.</p> <p>2. Press again. until desired setting is reached</p>
 HEATER	<p>HEATER button: Turns heater on and off.</p> <p>NOTE: The heater only works when the flame effect is on. If the flame effect is off, the heater will not turn on.</p> <p>NOTE: To prevent overheating, the heater blows cool air for 10 seconds before the heater turns on, and after it turns off.</p>	<p>1. Press once. Indicator lights up. Fan blows cool air for 10 seconds. Low heater turns on and blows warm air.</p> <p>2. Press again. Indicator lights up. High heater turns on and blows hot air.</p> <p>3. Press again. Heaters turn off. The fan blows cool air, then turns off.</p>
	<p>LED Ember light button (1): Makes the color on bottom effect changing.</p> <p>NOTE: Ember color effect stays on until power button is turned off.</p>	<p>1. Press once. Ember color effect gets changing.</p> <p>2. Press again. until desired setting is reached, in total 10 colors recycling.</p> <p>11 level-Auto-cycle 12 level-off</p>
 EMBER BRIGHTNESS	<p>LED Ember light brightness button: Makes the LED ember lights on bottom effect gets changing.</p> <p>NOTE: LED Ember light brightness effect stays on until power button is turned off.</p>	<p>1. Press once. LED ember light color effect gets changing.</p> <p>2. Press again until desired setting is reached. In total 5 levels.</p> <p>From b4 - b3 - b2 - b1 - b5 - b4</p>
	<p>LED Side light button: Makes the LED side lights effect gets changing.</p>	<p>1. Press once. Side light color effect gets changing.</p> <p>2. Press again. until desired setting is reached.</p> <p>Cycle from 01-02-03-04-05-06</p>
	<p>LED Down light button: Makes the color on TOP effect changing.</p> <p>NOTE: Down light color effect stays on until power button is turned off.</p>	<p>1. Press once. Down light color effect gets changing.</p> <p>2. Press again. until desired setting is reached. Cycle from 01-02-03-04-05-06-07-08-09-10-11-12 "12" Down lights off</p>




TIMER SETTINGS ON REMOTE CONTROL

	Timer: Displays current day, time, and week. Press to enter or confirm timer settings.																																													
OK	Settings: Press to move to next step (use with Timer button). Press to confirm week timer.																																													
	Back: Press to clear timer settings. Press to return to the previous step (use with Settings button).																																													
	Up and Down (use with Settings button).																																													
LCD Screen																																														
Weekday Mon, Tues, Wed, Thurs, Fri, Sat, Sun		<p>Note: The functions can only be adjusted when the related letters or digits are flashing.</p> <p>Note: Calibrate the timer to current time before the weekly settings.</p>																																												
Time Display																																														
Current Time / Timer From 00: 00 to 24 NOTE: 00-12:00 is AM / 13:00-24:00 is PM																																														
 TEMP	<p>TEMPERATURE button: Turns heater on and off.</p> <p>NOTE: Press & Hold the button for 5 seconds, the temperature setting will switch from °C to °F. Same way from °F to °C.</p>	<p>1. Press once: Indicator lights up. Temperature goes to 18 °C</p> <p>2. Press again: until desired setting is Reached. Digital display shows setting circles as below:</p>																																												
	<table border="1"> <thead> <tr> <th>Display</th> <th>0</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> <th>7</th> <th>8</th> <th>9</th> <th>10</th> <th>11</th> <th>12</th> <th>N</th> </tr> </thead> <tbody> <tr> <td>°C</td> <td>18</td> <td>19</td> <td>20</td> <td>21</td> <td>22</td> <td>23</td> <td>24</td> <td>25</td> <td>26</td> <td>27</td> <td>28</td> <td>29</td> <td>30</td> <td>C</td> </tr> <tr> <td>°F</td> <td>64</td> <td>66</td> <td>68</td> <td>70</td> <td>72</td> <td>74</td> <td>76</td> <td>78</td> <td>80</td> <td>82</td> <td>84</td> <td>86</td> <td>88</td> <td>F</td> </tr> </tbody> </table>	Display	0	1	2	3	4	5	6	7	8	9	10	11	12	N	°C	18	19	20	21	22	23	24	25	26	27	28	29	30	C	°F	64	66	68	70	72	74	76	78	80	82	84	86	88	F
Display	0	1	2	3	4	5	6	7	8	9	10	11	12	N																																
°C	18	19	20	21	22	23	24	25	26	27	28	29	30	C																																
°F	64	66	68	70	72	74	76	78	80	82	84	86	88	F																																

1 Set current day and time




- 1 Press  once. When "MON" (Monday) begins flashing, use  to select the current day.
- 2 Press **OK**. When the hour digits begin flashing, use  to select the current hour.
- 3 Press **OK** again. When the minute digits begin flashing, use  to select the current minute.
- 4 Press  again. The current time is now set.

2 Set ON/OFF time and temperature on a weekly cycle

- 1 Press . When "MON" begins flashing, press **OK** 3 times. When "ON" begins flashing, use  to select the desired hour and minute to turn on the heater.  at any time to clear the digits and shut down "ON" timer.





Note:

The timer can only be adjusted in 30-minute increments (i.e. 00:00-00:30; 00:30-01:00, etc.)

- 2 Press **OK**. When "OFF" begins flashing, use  to select the desired hour and minute to turn off the heater. Press  at any time to clear the digits and shut down "OFF" timer.
- 3 Press again. When "18" begins flashing, use  to select the desired temperature for Monday.

Note:

If the temperature was previously set, those digits will be shown instead of "18".

- 4 Press **OK** again. When "TUES" appears on the screen and "ON" begins flashing, use  to select the desired hour and minute to turn on the heater for Tuesday.
- 5 Press **OK** again. When "OFF" begins flashing, use  to select the desired hour and minute to turn off the heater for Tuesday.
- 6 Press **OK** again. When "18" begins flashing, use  to select the desired temperature for Tuesday.
- 7 Repeat steps 1 to 6 to set the "ON/OFF" time and temperature for Wednesday, Thursday, Friday, Saturday, and Sunday.
- 8 Press **OK** or  to complete programming, ensuring to aim the remote control at the receiver, located in the middle of the appliance. The appliance will "beep" once to confirm that programming has been successful.

SERVICING AND MAINTENANCE

Cleaning



ALWAYS turn the fireplace OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in electric shock, fire, or personal injury.



NEVER immerse in water or spray with water. Doing so could result in electric shock, fire, or personal injury. **ALWAYS** turn the fireplace OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in electric shock, fire, or personal injury.

Metal:

- ✔ Buff using a soft cloth, slightly dampened with a citrus oil-based product.
- ✔ DO NOT use brass polish or household cleaners as these products will damage the metal trim.

Glass:

- ✔ Use a good quality glass cleaner sprayed onto the cloth or towel. Dry thoroughly with a paper towel or lint-free cloth.
- ✔ **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Vents:

- ✔ Use a vacuum or duster to remove dust and dirt from the fireplace and vent areas every 2 months.

Plastic:

- ✔ Wipe gently with a slightly damp cloth and a mild solution of dish soap and warm water.
- ✔ **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Maintenance



Risk of electric shock! DO NOT OPEN any panels ! No user-serviceable parts inside!



ALWAYS turn the fireplace OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in electric shock, fire, or personal injury. DO NOT OPEN any panels ! No user-serviceable parts inside!

Hard floor covering in particular, but all floor coverings cause fluff that can be drawn into the air intakes. From time to time and no less than every two months, isolate the fire from the mains and attach the brush accessory to your vacuum cleaner and gently vacuum the air intakes and outlets.

Image of air flow vents shown on page 6

Electrical and Moving Parts:

- ✔ The fan motors are lubricated at the factory and will not require lubrication.
- ✔ Electrical components are integrated in the fireplace and are not serviceable by the consumer.

Storage:

- ✔ Store fireplace in a clean dry place when not in use.



WARNING! NO SERVICING of the internal or electrical parts should be performed by the consumer. Do not service the unit yourself.



Do not cut the plug off from the power cable doing this may result in your guarantee being void

NOTICE

When the fireplace is first turned on, a slight odor may be present. This is normal and should not occur again unless the fireplace is not used for a long period of time.

NOTICE

To improve operation, aim the remote control at the front of the fireplace. **DO NOT press the buttons too quickly.** Give the unit time to respond to each command.

Temperature Limiting Control

This heater is equipped with a Temperature Limiting Control. Should the heater reach an unsafe temperature, the heater will automatically turn OFF. To reset:

- 1 Unplug the power cord from the outlet.
- 2 Turn the ON/OFF switch on the CONTROL PANEL to OFF. Wait 5 minutes.
- 3 Inspect the fireplace to make sure no vents are blocked, or clogged with dust or lint. If they are, use a vacuum to clean the vent areas.
- 4 With the POWER switch in the OFF position, plug the power cord back into the outlet.
- 5 If the problem continues, have your outlet and wiring inspected by a professional.

Remote Control Battery Information

- ✔ This remote control uses two AAA **battery (not included)**.
- ✔ Instructions for battery installation are on the Remote Control battery compartment.



NEVER dispose of batteries in a fire. Failure to observe this precaution may result in an explosion. Dispose of batteries at your local hazardous material processing center.

Heater cutting out	Build-up of hot air	Ensure inlets and outlet are free from obstruction and there are sufficient clearances surrounding the unit.	If problem persists, the installation will need assessed to ensure it adheres to all required minimum clearances as stated in this manual.
	Thermostat setting causing heater to cut-out	Adjust thermostat setting on remote to maintain desired room temp or deactivate thermostat setting.	
Heater switching on without activation	Thermostat set to keep room at certain temperature.	Adjust thermostat setting to maintain desired room temp or deactivate thermostat setting.	If all solutions have been tested and problem persists, a new PCB is required.
	Thermostat faulty	Replace PCB	

NOTE:

Wiring and exploded diagrams to assist with fire repair are available on request.

Product Warranty

Your Product is guaranteed for one year from the date of purchase.

Should this product prove defective within one year of purchase due to a design fault, workmanship or material breakdown, the product will be repaired or replaced free of charge. Product warranty is subject to the following conditions:

- ✔ The product is to be used for domestic purposes only in accordance with the operating instructions.
- ✔ Responsibility of proof of purchase lies with the end user(s) who must prove product purchase within 12 month period of claim date.
- ✔ All warranties will be invalidated if unauthorized repairs or modifications are made to the electric fire, or in case of accident, misuse or damage caused by improper installation, or damage occurring during transit to or from the repairer.
- ✔ This warranty does not apply to heating elements, bulbs or fuses within this product
- ✔ Please inspect all products fully before installation we will not be held liable for product damages once the product has been installed.
- ✔ Products purchased from unauthorized sellers, including unauthorized websites, shall not be eligible for warranty benefits. (Unauthorized sellers) The warranty is only valid while the product remains with the original purchaser. If the Item is installed in another home and has a new ownership the warranty does not apply.

Your rights under this guarantee are additional to your statutory rights, which in turn are not affected by this guarantee.

evolution  fires®

GET IN TOUCH



www.evolutionfires.co.uk



sales@evolutionfires.com



Unit 2 Firefly Square, Plantation Road, Burscough, Lancashire, L40 8JT
United Kingdom