



Thank you for your purchase!

Depending on your order you should have between 2/3 boxes. The frame will always be boxed by itself.

Start with the frame, opening the box with an appropriate tool (no sharp object as this may damage the product)

Remove the frame from the box open to shoulder width and leave upright.



Open roof from packaging as carefully as you can as **to not slice the roof.**

Remove the roof and place over the top of the frame making sure the centre of the roof is covering the centre pole (please see image)




On each corner of the roof there is 2 tabs of Velcro which need to be connected to each of the legs to secure in place

Once all Velcro is connected begin to walk each leg out until the roof is tight.

The corner of each leg will have a leg bracket that needs to be pushed up until the silver pin clicks. (see image)



Locate the 4 clips that attach to the roof and hook over the frame (see image)

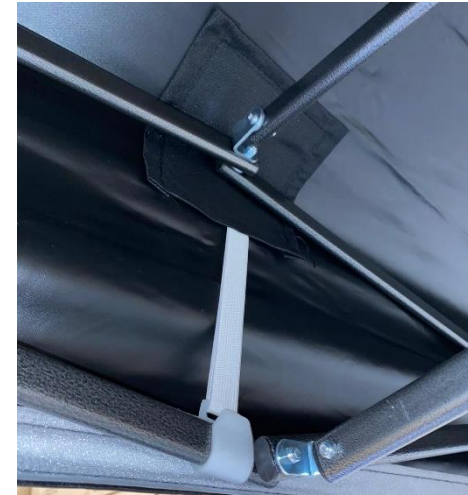


Now you can begin to raise the legs to your desired height. To do this you push in the silver pin and extend the leg.

Your order will come with a set of leg weight bags which attach to each leg with the Velcro straps and you can fill with a weight of your choice.



The Guy ropes can be used to secure your gazebo by looping the rope through the allocated material on each corner of the roof (please see image)

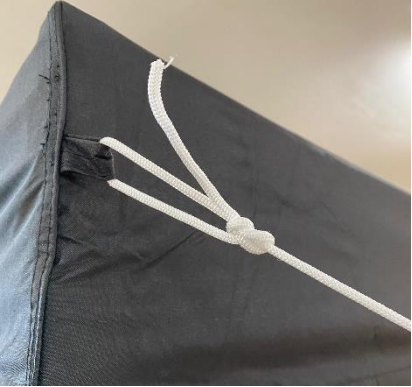

Your pop up gazebo is now ready to enjoy!



If you have purchased sides simply follow the next steps.

Carefully remove the side panels from their packaging. You will have 2 x Windows, 1 x Door and 1 x Plain side.

You can attach the sides with the Velcro on the inside of the roof, to the Velcro on the top of each side panel.

Once all the side panels are attached, you can start to zip each side together at each corner and attach the Velcro around each leg.

Your sides will also come with a side bag that you can use to keep your sides in once they have been removed.

Enjoy your All Seasons Gazebo.

FAQ:

*Can my Gazebo be used in All Seasons?*

Of course! The gazebo can be used in the winter months as well as the summer months although as per your warranty received, they should never be left up overnight or unattended and doing so will void your warranty.

*What do I need to use in the leg weight bags?*

This is entirely your choice. They can be used to hold sand, or many people have tried large water bottles from a supermarket. Whatever you feel is adequate to weigh down your gazebo.

*In the event of harsh weather, what do I need to do?*

Although our gazebos can be used in All seasons they should never be used in any harsh weather. Please do not erect your gazebo in high winds or extremely heavy rain. If the Gazebo is up during gentle snow, then please do not allow snow to gather on the roof as this will cause the roof to dip and the weight may cause damage.