




BETLEY BUTTERFLY

4 Canister Fuel Pack

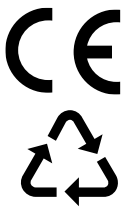

USER INSTRUCTIONS

CAUTION

Ensure sufficient air circulation. This gas-powered device uses oxygen. Never operate this appliance in a poorly ventilated area to prevent potential life-threatening risks. If more gas appliances or people using gas are introduced to the area, you must increase the ventilation accordingly.

IMPORTANT


Carefully review these instructions to acquaint yourself with the product's features before connecting it to a gas cylinder. Retain these instructions for future reference.

1. General

- The purpose of this product is to be a lightweight compact power source for when the user does not want to use a large LPG cylinder. The user simply connects four gas cartridges to the 4 Canister Fuel Pack and then to a compatible unit.
- This regulator complies with EN16129:2013
- Appliance Category: I3B(28-30mbar): All EU and NO, IS, CH, TR
- Appliance Category: I3B(50mbar): DE, AT, LU
- Only to be used with EN417 type disposable Cartridges.
- Gas appliances require ventilation for efficient performance and to ensure the safety of users and other persons in close proximity.
- The 4 Canister Fuel Pack is fitted with a regulator with a maximum supply rate of 0.8kg/hour.
- The user may adjust the supply rate of the 4 Canister Fuel Pack unit by turning the Regulator on the 4 Canister Fuel Pack.

2. Safety Information

- The 4 Canister Fuel Pack is covered by a 2-year warranty for any defects originating from the factory. This warranty excludes regular wear and tear as well as valve components and plastic parts. The same conditions apply to damage resulting from improper handling, misuse, or unauthorized repairs conducted by a non-certified LP Gas Dealer. Our liability is restricted to providing replacement products. Avoid using the pack in a room lacking proper ventilation with all windows and doors closed.
- Do not place the 4 Canister Fuel Pack on a stove. Always maintain a minimum distance of 1 meter from any heat source and ensure it is not situated in an environment where the temperature could surpass 50°C.
- Always store, transport, or use the 4 Canister Fuel Pack in an upright position.
- When not in use, keep all four of the Connector pipes valves closed as well as the Regulator valve, even if it is empty.
- Prior to attaching the gas container to the appliance, ensure that the seals (shown in fig.1) are correctly positioned and undamaged. Refrain from using the appliance if the seal is worn or damaged. If uncertain, replace the seal before proceeding with use.
- Do not use an appliance which is leaking, damaged or which does not operate properly (malfunctioning).
- In case you suspect a gas leak, use soapy water to test the joints (do not fully submerge the product in soapy water, as it might compromise its safe operation). If there's a leak, you'll notice bubbles forming at the point of leakage. If you're unable to resolve the leak, detach the gas cartridge from the product and get in touch with your supplier.
- Operate the appliance exclusively in a properly ventilated area (meeting a minimum ventilation rate of 5m³/h) to meet official ventilation regulations, ensure adequate combustion air supply, and prevent the accumulation of potentially hazardous unburned gases.
- When fitting or replacing gas cartridges, always do so in a well-ventilated area, preferably outdoors and at a safe distance from potential sources of ignition, like open flames, pilots, electric fires, and away from other individuals.
- Do not leave the appliance unattended when in use.
- Do not modify the appliance. Do not use it for anything for which it has not been designed.
- Under regular usage conditions, it is advised to replace the regulator of the 4 Canister Fuel Pack within 10 years from its manufacturing date to ensure proper functioning.
- Do not move the 4 Canister Fuel Pack during operation.
- Do not use the 4 Canister Fuel Pack in small, enclosed spaces
- without ventilation.

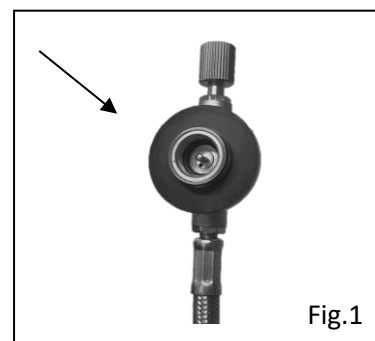


3. Tools Required

- Screwdriver
- Spanner
- Pliers (use instead of above)





4. Assembly Instructions

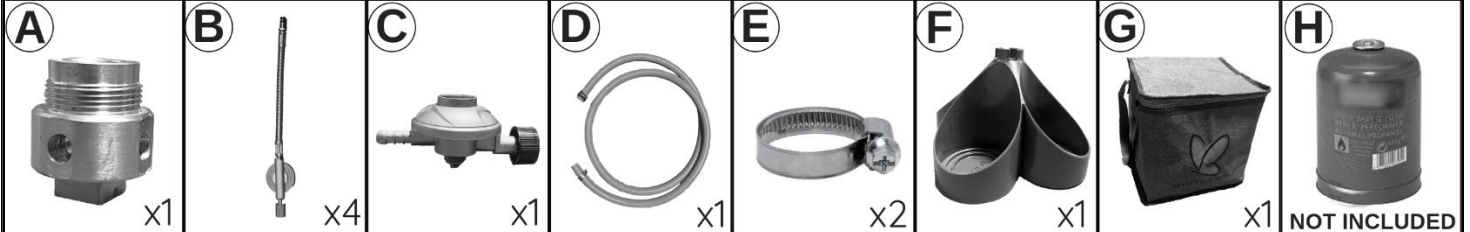


STEP 1

Push, and screw in a Connector pipe (B) into each of the four holes in the sides of the Adapter (A). Tighten the nut on the Connector pipes (B) in a clockwise direction. You may need to use a small Spanner/Pliers. Once tight, the connector pipes should freely rotate.

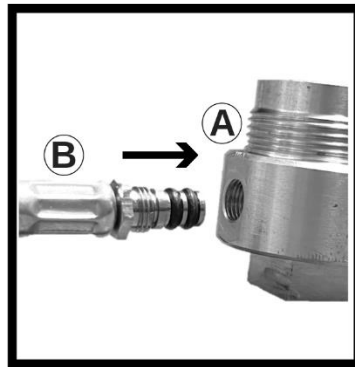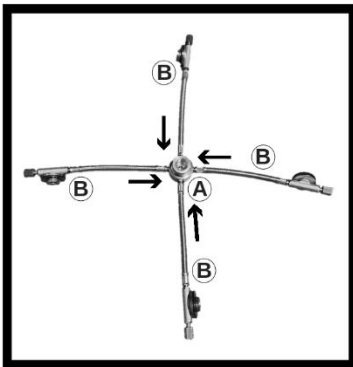

STEP 2


Screw on the Regulator (C) onto the top of the Adapter (A) in a clockwise direction

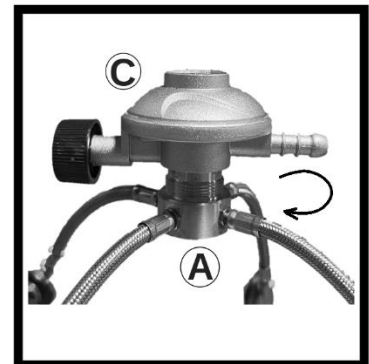

STEP 3



Ensure that the ends of the Connector pipes (B) are shut off by turning clockwise.

Ensure Regulator (C) is also shut off turning clockwise.

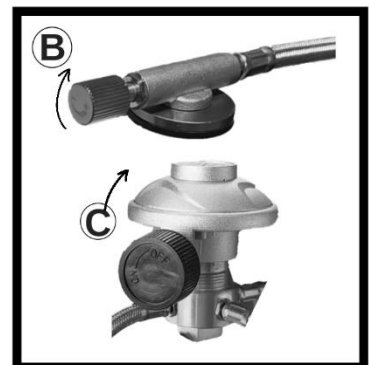


STEP 4

Thread a Pipe clip (E) onto the Hose (D). Push the Hose (D) onto the Regulator (C). Using a Screwdriver/Pliers, tighten the Pipe clip to secure the Hose (D).

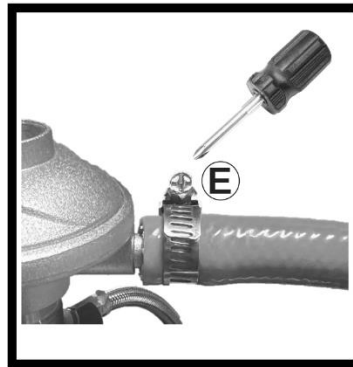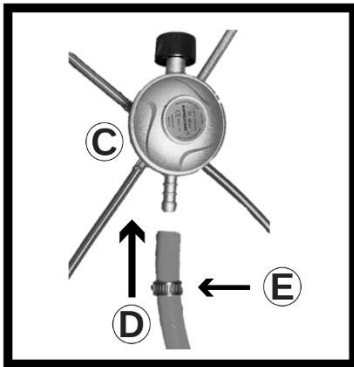


STEP 5

Push the bottom of the Adapter (A) into the square hole of the Canister Holder (F).

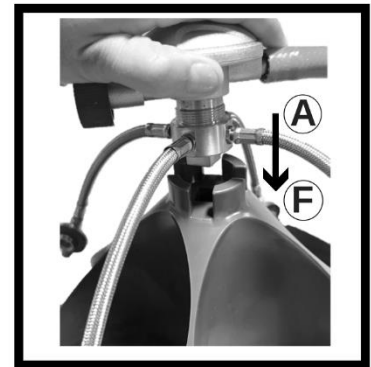


STEP 6

Screw an EN417 threaded Canister (H) onto the circular part of the Connector pipe (B). This is easier done upside down. Then place the Canister (H) into the Canister housing (F).

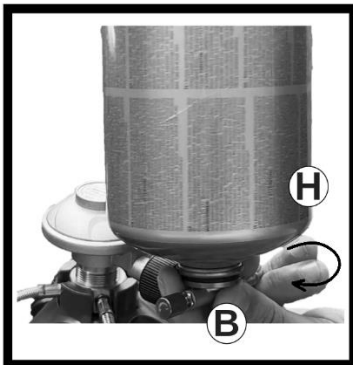

STEP 7

Connect the other end of the Hose (D) to your appliance with a Pipe clip (E)

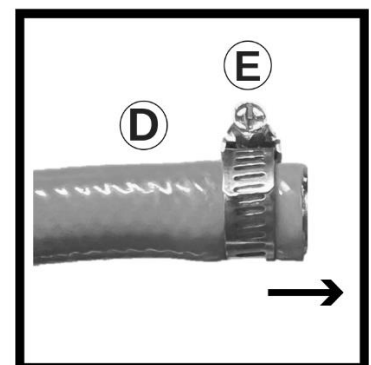


STEP 8

Turn the ends of the Connector pipes (B) which are connected to Canisters anticlockwise to feed gas to the Regulator (C).

Turn the Regulator (C) on to activate the flow of gas to your appliance.

Place the Canister Fuel Pack into the Insulated bag (G) with the Hose threaded out to assist with the flow of gas.

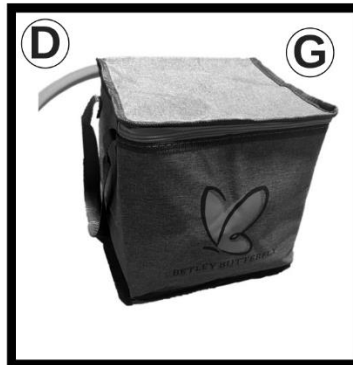

STEP 9

Repeat step 6 to equip with up to four Canisters.

It is recommended to leave one Canister turned off at the Connector pipe to allow a constant gas supply when others are depleted.



5. To disassemble the Unit

- Close the regulator knob and 4 connector pipes.
- Remove the cartridges by unscrewing them. Replace the 4 Canister Fuel Pack in it's carrying case for storage.
- Disconnect the hose from the appliance and pack the unit away for storage.
- Cartridges should always be stored in a cool, dry, well-ventilated area.

6. Checking for leaks (Gas cartridge)

- For leak detection on the gas cartridge, spread soapy water over the connection area and observe for any bubbles forming. The presence of bubbles indicates a leak. If you're unable to resolve the leak, return to your supplier.

Common Uses

- Up to 3 Burner BBQ



Single Burner



2 Burner



3 Burner

- Portable Camping Grill



Tabletop



Extendable

- Double Burner & Grill



Common Uses

- Table Top Heater



- Roofing Torch



- Campervans

