

DMD
COLLECTIVE

DMD115BLK

Breakfast Muffin Maker

Information for use



Thank you for purchasing this Breakfast Muffin Maker from DMD Collective.


This manual provides step-by-step instructions for using your DMD Breakfast Muffin Maker to create delicious and healthier versions of your favourite breakfast sandwiches and beyond, all in under 5 minutes. Please read carefully before using.

Getting Started

1. Remove the appliance from the box.
2. Remove any packaging from the appliance.
3. Place the packaging inside the box and store it for future reference.
4. Clean the plastic exterior with a soft, damp cloth and then thoroughly dry.

Description of Parts

1. Top non-stick heating plate
2. Detachable ring assembly
3. Bottom non-stick heating plate
4. Red power indicator light
5. Green-ready indicator light
6. Cooking plate handle
7. Rotating cooking plate
8. Lid with handle

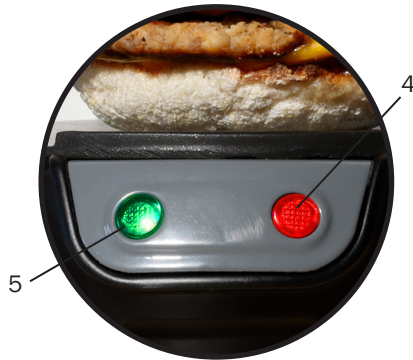

Health & Safety Guidelines

- Always unplug the unit when not in use, before cleaning, or when adding or removing parts.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Do not let children use this appliance unsupervised.
- Check the power cord and plug regularly for any damage. To prevent an electrical hazard, the manufacturer will need to replace the cord or plug if it is damaged.
- To reduce the risk of electric shock, do not immerse the plug, or power cord to water or any other liquid.
- Injury, fire, or electric shock could result from the use of accessory attachments that the manufacturer has not approved or supplied.
- A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- Do not let the cord hang over the edge of a table or counter.
- Ensure that the cord is not in a position where it can be pulled inadvertently.
- Do not allow the cord to touch hot surfaces, and do not place it on or near a hot gas or electric burner or in a heated oven. Do not place the unit on a hot surface.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended purpose.
- Do not leave this appliance unattended during use. An appliance should never be left unattended when plugged in.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use or for repairs carried out by unauthorised personnel.
- In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions will affect the safe operation of this machine.
- Inspect the Muffin Maker and power cord for signs of damage before use. Do not operate the Muffin Maker if any of its parts, including the plug, power cord, or socket, are damaged.
- Do not use the Muffin Maker if it has been dropped, malfunctioned, or damaged in any way.
- Do not let the power cord hang over edges, become caught or tangled, or be located near any sources of heat, such as other muffin makers, stovetops, or hobs.
- Do not overfill your Muffin Maker.
- Do not operate the Muffin Maker without the detachable assembly firmly and securely in place.
- Do not remove the detachable assembly while the Muffin Maker is in operation to avoid burns or property damage.
- Avoid contacting heating parts. Keep hands and utensils out of the Muffin Maker when in operation or connected to the mains to reduce the risk of personal injury or property damage.
- Exercise extreme caution when moving the muffin maker when it contains hot foodstuffs.
- Do not leave the Muffin Maker unattended when in use.

- The use of accessories not recommended by the manufacturer may result in fire, electric shock, and injury.
- The use of an extension cord or separate timer is not recommended with the Muffin Maker.
- Use of suitable heat-resistant utensils and oven gloves is recommended for this appliance. Do not use metal or conductive utensils, as these can damage the surfaces and impair future use of the appliance.
- Your Muffin Maker does not contain any user-serviceable parts. Repairs should only be undertaken by qualified personnel.
- **Warning:** Do not open the lid during use. Hot steam may be emitted. Exercise the necessary caution when removing the lid and assembly so as to avoid spills.
- **Warning:** When opening the lid or moving the detachable assembly, the use of suitable heat-resistant oven gloves is recommended to prevent exposure to hot foodstuffs, surfaces, or escaping steam.
- **Warning:** Do not add already hot or boiling foodstuffs to the Muffin Maker, as this may damage the unit and cause personal injury.
- **Caution:** When removing the Muffin Maker from the main power supply, Turn off the switch. Grasp the plug and pull to remove it. Do not pull on the power cord, as this can cause fire, electric shock, or injury.
- The temperature of accessible surfaces may be high when the appliance is operating. Parts of the Muffin Maker, such as the lid, heating plate, and detachable ring assembly, will become hot during use. Exercise caution. Do not move the muffin maker during use.
- Allow the Muffin Maker to cool completely before cleaning.

Care & Maintenance

Before attempting any cleaning or maintenance, unplug the appliance from the mains power supply and check that it is fully cooled.

Wipe the appliance housing with a soft, damp cloth and dry thoroughly. Remove baked food by applying a small amount of warm water mixed with a mild detergent to the non-stick coated cooking plates. Wipe clean with a paper towel. Use a non-abrasive scourer if the food is difficult to remove. Remove the detachable ring assembly by lifting it straight up. Wash in warm, soapy water and dry thoroughly. The detachable plates are also dishwasher-safe.

Do not immerse the main unit in water or any other liquid.

Note: The appliance should be cleaned after every use.

Instructions for Use

NOTE: When using the appliance for the first time, a slight smoke or odour may emit. This is normal and will soon subside. Allow for sufficient ventilation around the appliance. We recommend using suitable heat resistant oven gloves when cooking with the muffin maker and taking care when opening the lid, as hot steam may emit from the hotplates.

1. Place the appliance on a flat, stable, and heat-resistant surface.
2. Lightly spray or oil the non-stick cooking plates and plug them into a mains supply; the red power indicator light will turn on.
3. The green-ready indicator light will illuminate once the appliance is ready to use. Carefully lift the lid, top the cooking ring and rotate the cooking plate up. The use of suitable heat-resistant oven gloves is recommended.

NOTE: During use, the red power indicator light will stay on and the green temperature indicator light will cycle on and off periodically. This is normal and indicates that the elements are switching on and off to regulate the pre-set cooking temperature.

4. Place the bread base into the first ring, followed by your choice of filling. *Be aware any meat must be pre-cooked (Fig.1).
5. Place the rotating plate and top ring down as far as they will go to prevent eggs from leaking. Crack your egg onto the cooking plate (Fig.2).
6. Place the top of the bread on top of the egg. Close the lid and cook for 4-5 minutes (Fig.3).
7. Once finished cooking, carefully rotate the cooking plate handle clockwise until it stops.
8. Using suitable heat-resistant oven gloves, carefully lift the lid and ring assembly. Then remove your assembled sandwich with heat-resistant utensils. Never use metal utensils (Fig.4).
9. Once cooking is complete, switch off and unplug the mains supply.



Tips for Use

- You can make savoury or sweet snacks with this appliance.
- Use any bread that will fit in the ring, such as muffins, bagels, pancakes, and croissants. This product isn't only for breakfast; make mini pizzas, omelettes, toasties, and much more!
- Use any ingredients you want, such as eggs, cheese, vegetables, and meat. Ensure your meat is pre-cooked before using it.
- Do not overfill the Breakfast Muffin Maker, as this will cause food to spill over.

- Make sure the detachable ring assembly is in place before preheating and adding ingredients.
- Always keep the lid closed with the rings and cooking plate in place when preheating.
- Always wait approximately 2 minutes between cooking sandwiches to ensure the Muffin Maker is heated to the correct temperature.
- With a plate diameter of 110cm, it fits easily on your countertop without taking up too much space.
- The detachable plates are dishwasher safe, and the nonstick coating allows for easy food release and cleaning.

Troubleshooting

PROBLEM	SOLUTION
Low, poor or slow heating	<p>Wasn't pre-heated until the green indicator light comes on.</p> <p>Appliance needs to be pre-heated with lid closed with rings in place.</p> <p>Allow approx. 2 minutes between making snacks to heat to the correct temperature.</p> <p>Appliance was overfilled. Reduce amount of ingredients.</p>
Egg under cooked, bread not toasted	<p>Large eggs, frozen or very cold ingredients may lengthen cooking time. Add additional cooking time or make sure ingredients are room temperature.</p>
Egg overcooked	<p>Cooking time is approx. 5 minutes. Cooking time may vary if you are using small eggs, scrambled or egg whites. Reduce cooking time for future recipes.</p>
Ingredients stick to the rings or non-stick cooking plates	<p>Use plastic or wooden utensils to loosen any baked-on ingredients. Lightly spray oil before next use.</p>
Egg is leaking out of ring	<p>Appliance is overfilled. Reduce ingredients and don't press down on lid.</p> <p>Detachable rings may not be in the correct position. Make sure rotating cooking plate is securely to back of ring as far as it will go to prevent eggs leaking.</p> <p>Make sure appliance is placed on a level, heat resistant surface</p>
Lid rises when muffin is cooking	<p>If making scrambled eggs, the air whisked may cause the eggs to rise when cooking. Do not press the lid down.</p>
Bread too brown	<p>Higher fat/sugar contents may cause bread to darken. Cook egg for several minutes without the bread and cover down. Then add bread to finish cooking your muffin.</p>

Electrical Information (Fixed Mains Plug Only)

The mains lead supplied with this product is fitted with a BS1363/A 13-amp plug. If it is not suitable for your supply sockets, it must be replaced with an appropriate plug.



If the plug becomes damaged and/or needs to be replaced, please follow the wiring instructions on the next page. The plug removed must be disposed of immediately. It must not be plugged into a supply socket, as this will be an electrical hazard.

If the fuse needs to be replaced, it must be of the same rating and ASTA-approved to BS1362.

If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter, or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the application can be used.

Wiring Instructions

The supply cable will be 3-core. Follow the appropriate wiring instructions shown. Ensure that the outer sheath of the cable is held firmly in place by the cable clamp.





3-CORE PLUG

WARNING This appliance must be earthed. The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, or coloured green or green and yellow.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

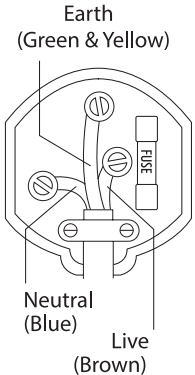

Earth
(Green & Yellow)

Neutral
(Blue)


Live
(Brown)

Technical Support

If you require any technical support for your product within the warranty period, please contact us on support@dmdcollective.co.uk and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

IMPORTANT: ADDITIONAL SAFETY INFORMATION

This product is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the product by a person responsible for their safety.

Technical Specifications

Product Name:

DMD Breakfast Muffin Maker

Supplier Code:

DMD115BLK

Voltage:

220V~240V

Frequency:

50-60Hz

Power:

600W



Ace Supply Co (Europe) Ltd.,
Suite GA, Marsland House,
Marsland Road, Sale M33 3AQ

For Product Support:

E: support@dmdcollective.co.uk

T: +44 (0)161 447 8597

EU Regd. Address: Ace Supply Co (Europe) Ltd.,
25 Herbert Place, Dublin 2, D02 A098
Republic of Ireland

www.dmdcollective.co.uk