 


# Mini Projector

## Information for use

 
Thank you for purchasing this Mini projector from DMD collective. This manual will guide you through all the features of your new appliance. We recommend that you keep the instructions for future reference, so that you can remind yourself of the functions.

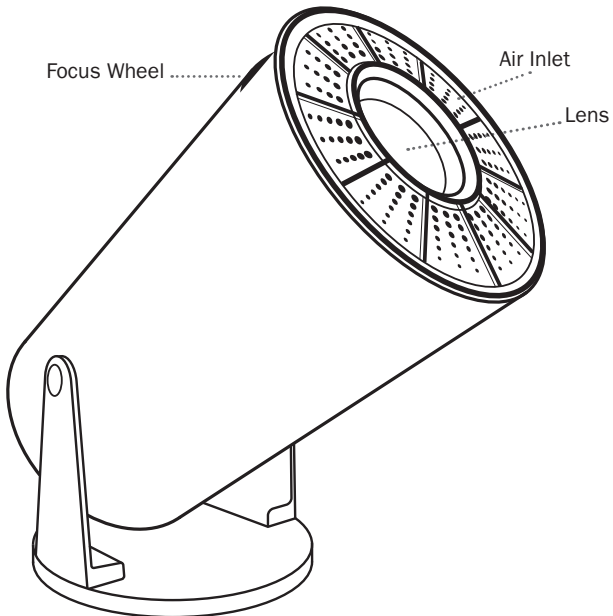

## Health & Safety Guidelines

- Always unplug the unit when not in use, before cleaning, or when adding or removing parts. Please read the instructions carefully before using any appliance.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Do not let children use this appliance unsupervised.
- Check the power cord and plug regularly for any damage. To prevent an electrical hazard, the manufacturer will need to replace the cord or plug if it is damaged.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit is damaged, take it in for examination and/or repair by an authorized service agent.
- To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug, or power cord to water or any other liquid.
- Never immerse the unit in water or any other liquid for cleaning purposes. Do not reach for an appliance that has fallen into the water. Unplug immediately.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains.
- Injury, fire, or electric shock could result from the use of accessory attachments that the manufacturer has not approved or supplied.
- A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- Do not let the cord hang over the edge of a table or counter, ensure that the cord is not in a position where it can be pulled inadvertently.
- Do not allow the cord to touch hot surfaces, and do not place it on or near a hot gas or electric burner or in a heated oven. Do not place the unit on a hot surface.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended purpose.
- Do NOT carry the unit by the power cord.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use or for repairs carried out by unauthorised personnel.
- In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions will affect the safe operation of this machine.
- We do not recommend using extension cords with this product.


- When projector is working, please do not look directly into the lens, the strong light will hurt your eyes.
- Do not use the projector in greasy, damp, dusty or smoky environment. Regularly clean projector vents, or dust may cause cooling malfunction.
- Projector should be kept away from flammable, explosive, strong electromagnetic interference (large radar stations, power stations, substations),etc and strong ambient light (avoid direct sunlight).
- Do not cover projector vents. Keep adequate ventilation to avoid projector overheating. Overheating will reduce the life of the projector & cause a fire risk.
- Please use the original power adapter.
- Do not open the case of the projector.

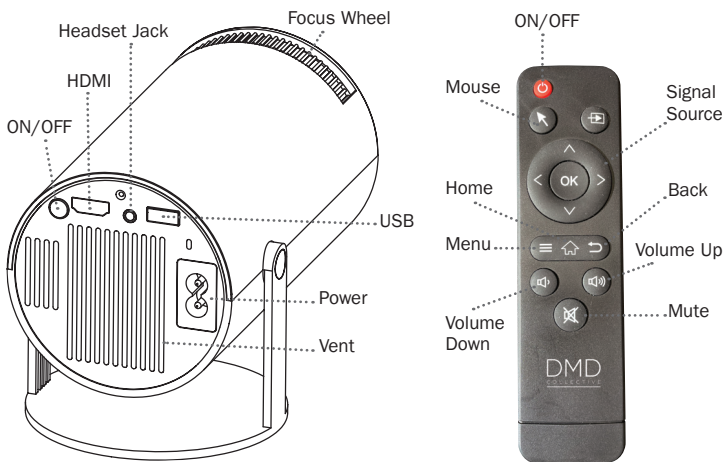

## Setting Up The Projector

- **To power on:** Press & hold the power button on the projector for 3 seconds.
- **To power off:** When the projector is powered on, press and hold the power button on the projector or the remote control for 3 seconds.
- The projector will take a minute to load the Home Screen (Fig.1).
- The Infra Red Remote control takes 2x AA batteries (not supplied).
- When the Home Screen is loaded you can adjust the sharpness by using the "Focus Wheel" on the top of the projector. Further adjustments to the screen can be made from the Projection menu in the settings (Fig.5).
- For the best quality picture use the projector in a darkened room.

 
Fig. 1

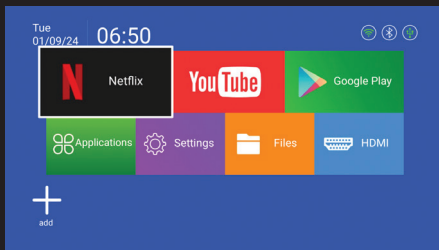

## Home Screen

From the home screen you can access a variety of functions, set your HDMI connection, access files on a connected USB device & access the device settings.

 
Fig. 2

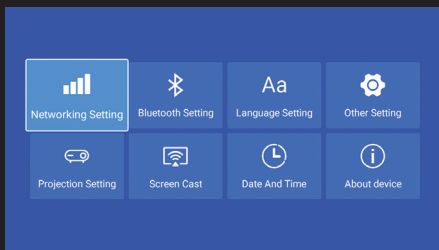

## Settings

From here you can connect to your WiFi connection & bluetooth devices, change the date & time (Fig.3) & language (Fig.4)

 Fig. 3

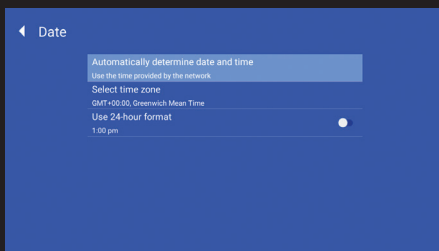

## Date Screen

From here you can change the date, time & time zone. To return to the settings screen press the "Back" button on your remote control or the "Home" button to return to the home screen.


Fig. 4



## Language

From here you can switch the device to your preferred language. To return to the settings screen press the “Back” button on your remote control or the “Home” button to return to the home screen.

 
Fig. 5

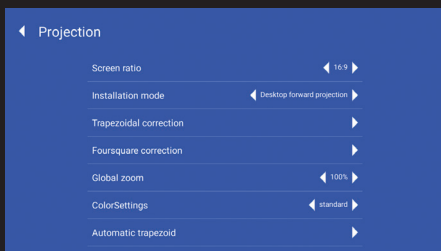

## Projection

From here you can access the screen ratio settings, colour settings & use trapezoidal & four-square correction. To return to the settings screen, press the “back” button on your remote control.

 
Fig. 6

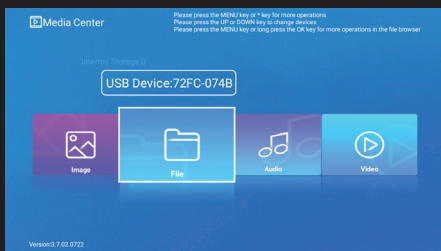

## Files (USB)

Plug a USB device into the USB port on the back of the projector. Select the Files menu from the home screen. From here you can project all the files on your USB device.

 Fig. 7

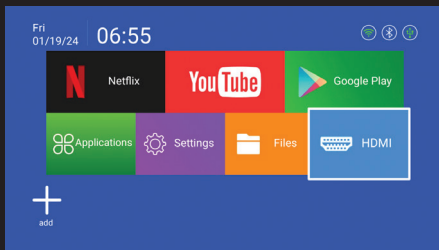

## HDMI

Connect a device using the HDMI port on the back of the projector. Select the HDMI menu on the home screen. The projector will now be cast from your HDMI device.

Fig. 8



## Phone App

In the settings menu, select the Screen Cast setting. Scan the QR code to download the transScreen app. You can use the app to cast from your phone and control the projector.

Fig. 9



## Phone Screen Mirroring


Connect your phone to the same WiFi network as the projector. Open the Control Centre on your phone & click screen mirroring. Select tranScreen projection.

## Technical Support

If you require any technical support for your product within the warranty period, please contact us on **support@dmdcollective.co.uk** and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

## WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

## IMPORTANT: ADDITIONAL SAFETY INFORMATION

This device is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the device by a person responsible for their safety.

## Technical Specifications

<b>Product Name:</b>	DMD Mini Projector
<b>Supplier Code:</b>	DMD121
<b>Voltage:</b>	220-240V~50/60Hz
<b>Ports:</b>	HDMI x1, USB 2.0 x1, 3.5MM Headphone
<b>Mirror Screen Support:</b>	Android & Apple iOS
<b>Video Format:</b>	MP4, MOV, 3GP MPEG1, MPEG2, H.26
<b>Audio Format:</b>	MP3, WMA, AAC, AAC, AC3, CAT, WAV
<b>Picture Format:</b>	jpg, png, bmp, jpeg
<b>Native Resolution:</b>	1280x720P
<b>Display Type:</b>	LCD
<b>Aspect Ratio:</b>	16:9
<b>Max. Image Size:</b>	33~130"
<b>Image Brightness:</b>	90 Lumen ANSI
<b>Wattage:</b>	30W
<b>Remote Control Batteries:</b>	2x AAA (not supplied)



**Ace Supply Co Ltd.,**  
Suite GA, Marsland House,  
Marsland Road, Sale, M33 3AQ

**For Product Support:**

**E:** support@dmdcollective.co.uk  
**T:** +44 (0)161 447 8597

**EU Regd. Address:** Ace Supply Co (Europe) Ltd.,  
25 Herbert Place, Dublin 2, D02 A098  
Republic of Ireland

[www.dmdcollective.co.uk](http://www.dmdcollective.co.uk)