

DMD  
COLLECTIVE

DMD107BLK

---

# 3-in-1 Family Toastie Maker

---

Information for use



This versatile appliance allows you to enjoy delicious toasted sandwiches, fluffy waffles, and perfectly grilled food for the whole family.

This manual provides step-by-step instructions for using your DMD 3-in-1 Family Toastie Maker. Please read carefully before using.

## Health & Safety Guidelines

- Always unplug the unit when not in use, before cleaning, or when adding or removing parts.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Do not let children use this appliance unsupervised.
- Check the power cord and plug regularly for any damage. To prevent an electrical hazard, the manufacturer will need to replace the cord or plug if it is damaged.
- To reduce the risk of electric shock, do not immerse the plug, or power cord to water or any other liquid.
- Injury, fire, or electric shock could result from the use of accessory attachments that the manufacturer has not approved or supplied.
- Do not let the cord hang over the edge of a table or counter.
- Ensure that the cord is not in a position where it can be pulled inadvertently.
- Do not allow the cord to touch hot surfaces, and do not place it on or near a hot gas or electric burner or in a heated oven. Do not place the unit on a hot surface.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended purpose.
- Do not leave this appliance unattended during use. An appliance should never be left unattended when plugged in.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use or for repairs carried out by unauthorised personnel.
- In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions will affect the safe operation of this appliance.
- Inspect the toastie maker and power cord for signs of damage before use. Do not operate the toastie maker if any of its parts, including the plug, power cord, or socket, are damaged.
- Do not use the toastie maker if it has been dropped, malfunctioned, or damaged in any way.
- Do not overfill your toastie maker.
- Do not remove the detachable assembly while the toastie maker is in operation to avoid burns or property damage.
- Avoid contacting heating parts. Keep hands and utensils out of the toastie maker when in operation or connected to the mains to reduce the risk of personal injury or property damage.
- Exercise extreme caution when moving the toastie maker when it contains hot foodstuffs.
- Do not leave the toastie maker unattended when in use.
- The use of accessories not recommended by the manufacturer may result in fire, electric shock, and injury. The use of an extension cord or separate timer is not recommended with the toastie maker.
- Use of suitable heat-resistant utensils and oven gloves is recommended for this appliance. Do not use metal or conductive utensils, as these can damage the surfaces and impair future use of the appliance.
- Your toastie maker does not contain any user-serviceable parts. Repairs should only be undertaken by qualified personnel.

- **Warning:** Do not open the lid during use. Hot steam may be emitted. Exercise the necessary caution when removing the lid and assembly so as to avoid spills.
- **Warning:** When opening the lid or moving the detachable assembly, the use of suitable heat-resistant oven gloves is recommended to prevent exposure to hot foodstuffs, surfaces, or escaping steam.
- **Warning:** Do not add already hot or boiling foodstuffs to the toastie maker, as this may damage the unit and cause personal injury.
- **Caution:** When removing the toastie maker from the main power supply, Turn off the switch. Grasp the plug and pull to remove it. Do not pull on the power cord, as this can cause fire, electric shock, or injury.

## Before First Use

1. Wash the plates with warm soapy water and dry thoroughly.
2. Wipe the housing with a damp cloth.

## Inserting/Removing the Plates

To release the plates, push in the two clips at the front of the toastie maker. Choose your desired plates and insert them into the appliance, ensuring they click securely into place.

## Using the Grill Plates

1. Insert the grill plates, ensuring they click securely into place.
2. Insert drip trays beneath the drainage holes.
3. Preheat the appliance for 2-3 minutes with the lid closed. The indicator light will turn off when preheated.
4. Ensure the food you want to grill (e.g., burger patties or steak) is to no more than 10mm thick.
5. Wipe the grill plates with a little cooking oil or butter.
6. Lay the food on the grill plate with a spatula or tongs.
7. Close the grill. Don't use the latch.
8. Once finished, use a heat-resistant utensil to carefully remove the cooked food.
9. Unplug the appliance, remove drip trays and allow to cool completely before cleaning.

**Please Note:** This grill plates comes with three drip trays. Before cooking on the grill, insert the drip drays beneath the grill plate's drainage hole to collect any oil or grease produced during cooking. Cook meat, poultry, and derivatives (mince, burgers, etc.) till the juices run clear.

## Using the Toastie Plates

1. Insert the toastie plates, ensuring it clicks securely into place.
2. Preheat the appliance for 2-3 minutes with the lid closed. The indicator light will turn off when preheated.
3. Place your desired sandwich with chosen fillings on the preheated plate.
4. Close the lid and cook for 3–6 minutes, or until the food is cooked to your liking.
5. Once finished, use a heat-resistant utensil to carefully remove the cooked food.
6. Unplug the appliance and allow it to cool completely before cleaning.

## Using the Waffle Plates

1. Beat 2 eggs in a large bowl with a hand-held mixer until fluffy.
2. Beat in 250g of plain flour mixed with 4 teaspoons baking powder, 120ml vegetable oil, 1 tablespoon of caster sugar, ½ teaspoon of salt and ½ teaspoon vanilla extract. Beat until smooth.

3. Insert the waffle plates, ensuring it clicks securely into place.
4. Pour 2 portions of the mixture into the waffle plates & cook until golden brown.
5. Serve hot.

## Cleaning and Maintenance


- Allow the appliance to cool completely before cleaning.
- Wash the plates with warm soapy water and dry thoroughly.
- Wipe the housing with a damp cloth.
- Do not use abrasive cleaners or scouring pads.

## Technical Support

If you require any technical support for your product within the warranty period, please contact us on [support@dmdcollective.co.uk](mailto:support@dmdcollective.co.uk) and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

## WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

## IMPORTANT: ADDITIONAL SAFETY INFORMATION

This product is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the product by a person responsible for their safety.

## Technical Specifications

<b>Product Name:</b>	DMD 3-in-1 Family Toastie Maker
<b>Supplier Code:</b>	DMD107BLK
<b>Voltage:</b>	230V
<b>Frequency:</b>	50Hz
<b>Power:</b>	1200W
<b>Safety Cut-out:</b>	Yes
<b>Cooking Surface Dimentions:</b>	258mm x 219mm
<b>Paraben Free:</b>	Yes



**Ace Supply Co Ltd.,**  
Suite GA, Marsland House  
Marsland Road, Sale M33 3AQ

**For Product Support:**  
**E:** [support@dmdcollective.co.uk](mailto:support@dmdcollective.co.uk)  
**T:** +44 (0)161 447 8597

**EU Regd. Address:**  
Ace Supply Co (Europe) Ltd.,  
Dublin 2, D02 A098, ROI

[www.dmdcollective.co.uk](http://www.dmdcollective.co.uk)