

# Avalla

## Steam Mop



T-30

Read this manual carefully before use and keep it for future reference. Failure to do so may result in injury, property damage and may void the warranty.



**live**life.


# Contents

- 04 Quick start guide: T-30
  - Parts guide
- 05 · Assembly and operation
- 06 Cleaning, maintenance and storage
  - Cleaning the unit
  - Replacing the water filter
  - Wall rest
- 07 Health and safety
  - General safety instructions
  - Disposal
- 09 Troubleshooting
- 09 Specifications

 Buy your spare mop pads and water filters at [www.avalla.com](http://www.avalla.com)

# Quick start guide: T-30




## Parts guide

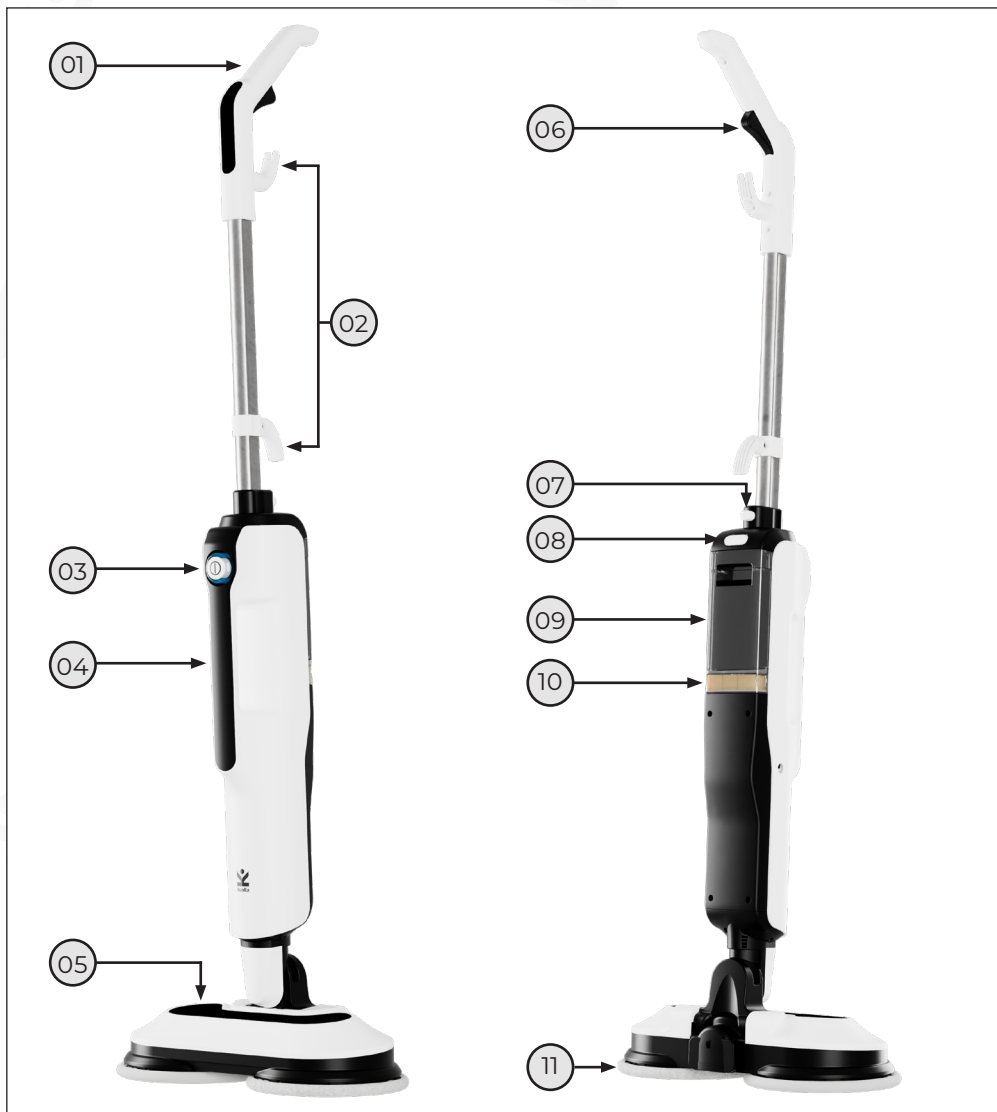




- 01. Handle
- 02. Power cable hooks
- 03. Power button
- 04. Carry handle
- 05. Motorised mop head
- 06. Trigger

- 07. Handle release
- 08. Water tank release
- 09. Water tank
- 10. Water filter
- 11. Mop pads (x6 inc.)


## Assembly and operation

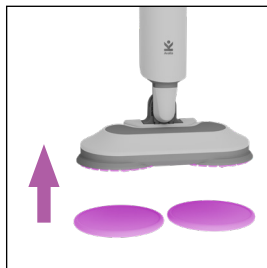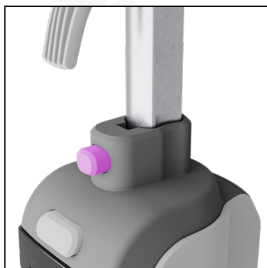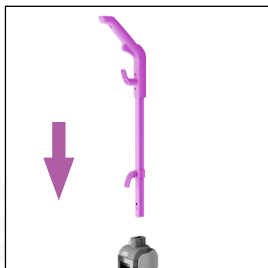

- Remove all packaging.
- Slide the handle into the body until fully seated and the handle release clicks.
- Attach the mop pads to the rotating disks.

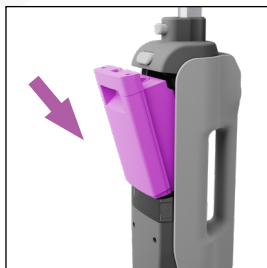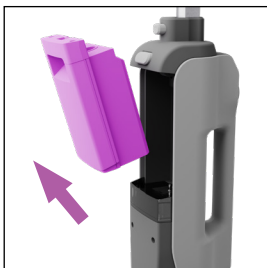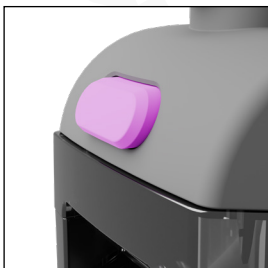

- Press the tank release and pull the water tank out and up from the steam mop.
- Fill the water tank with water only.
- Insert the water tank base first and press the top firmly until the tank release clicks.

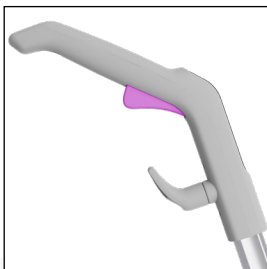




- Plug the unit in, press the power button to turn on.
- The power button will flash as the unit warms up.
- To activate the spinning mop pads, place your foot on the motorised mop head and pull the unit back.
- Press and hold the trigger to activate the steam.
- To deactivate the spinning mop pads, return the unit to the upright position.
- Press the power button to turn the unit off.

# Cleaning, maintenance and storage

## Cleaning the unit

- Ensure the unit is unplugged and cool before cleaning.
- Wipe the unit down with damp cloth. Do not use harsh chemicals.
- The mop pads can be washed in your washing machine. We recommend washing the pads alone, on a medium cycle at 60°C
- Rinse the water tank with clean water.
- Allow all parts to air dry fully before storing your steam mop.

## Replacing the water filter

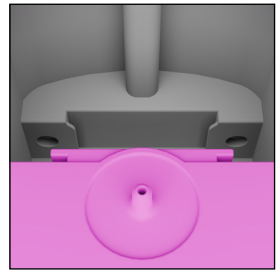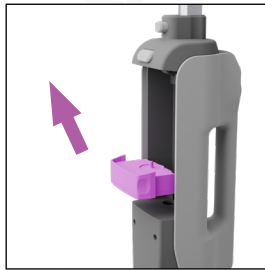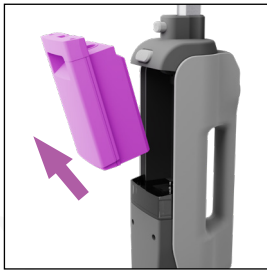

- Press the tank release and pull the water tank out and up from the steam mop.
- Slide the water filter up and out of the steam mop.
- Remove all packaging from the new water filter.
- Line up the tabs on the water filter with the channel in the back of the steam mop.
- Slide the new water filter down and press firmly to seat it into the steam mop.
- Re-install the water tank base first and press the top firmly until the tank release clicks.



Buy your spare mop pads and water filters at [www.avalla.com](http://www.avalla.com)

## Wall rest

- Find a suitable place to mount the wall rest. The steam mop handle should line up with the wall rest, with the steam mop on the ground.
- Mount the wall hanger using the included screws.
- To store your steam mop, insert the handle into the wall hanger.

# Health and safety

## General safety instructions

Symbols from the unit, packaging and instruction manual



Read the instruction manual



Class I Construction (Earthed)



UKCA



European Conformity

### The following must always be observed for safety

**Warning:** Danger of scalding. The steam emitted from the appliance is very hot and may cause scalding. The lower section of the unit will become warm during use. Please use caution when using the appliance.

- This appliance is not intended to be used by children, keep it away from children. Persons with lack of experience or knowledge, reduced physical, sensory, or mental capabilities, can use this appliance if they have been given supervision or instruction concerning use of the appliance in a safe way.
- When in use never turn the appliance over on its side or direct steam toward people, pets or plants.
- Component parts must only be replaced with identical repair parts.
- The appliance must be disconnected from its power source during servicing, cleaning or when not in use. Do not use chemicals to clean the appliance.
- Always operate the unit from power outlet of equal voltage, frequency and rating as indicated on the product identification plate.
- Do not operate with wet hands. Be careful not to allow any sources of water, moisture, or any other liquids to come into contact with any areas of the unit other than the water tank and steam outlet.
- Do not leave the unit running unattended. Do not unplug the unit while it is in operation.
- Do not put any objects into the steam nozzle openings. Discontinue use if the steam nozzle is blocked.
- Do not unplug by pulling on the power cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
- Do not put objects on the unit, climb or sit on the unit.
- Do not operate the unit if it is dropped, damaged or showing signs of product malfunction.
- The unit must be installed in accordance with national wiring regulations.
- The appliance must be stored in a manner to prevent mechanical damage.
- Do not place in direct sunlight or near objects that may cause mechanical vibration or shock.
- Do not use the appliance where combustible / flammable gases or vapours are present.
- Do not use the appliance outdoors, it is designed only for indoor use.
- Do not use for space-heating purposes.
- Do not put hands or feet under the appliance. It gets very hot.
- Do not use on leather, wax-polished furniture, synthetic fabrics, velvet, or other delicate, steam-sensitive materials.

- Do not add cleaning solutions, scented perfumes, oils, or any other chemicals to the water used in the appliance. If you live in a hard-water area, we recommend using distilled water in your appliance.
- Never leave any mop pads in one spot while using or storing for any period of time.
- The liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
- When cleaning the exterior of the appliance, unplug the power cord from the electrical outlet and clean the appliance with a dry or damp cloth.
- Extreme caution should be exercised when using the appliance to clean stairs.
- Never use appliance without the mop pads attached unless otherwise specified in this manual.
- Keep your work area well lit.
- Store appliance indoors in a cool, dry place.
- To avoid circuit overload, do not operate another appliance on the same socket (circuit) as the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- To avoid scalding injuries, always unplug and allow the appliance to cool before removing or changing mop heads or accessories.
- This appliance is designed to clean hard-floor surfaces that will withstand high heat. Do not use on unsealed wood or unglazed ceramic floors. On surfaces that have been treated with wax and on some no-wax floors. It is always recommended to test an isolated area of the surface to be cleaned before proceeding. We also recommend that you check the use and care instructions from the floor manufacturer.


## Connection to power supply

**Caution:** Risk of electric shock. Do not open.

- This appliance is supplied with a moulded 3 pin mains plug for your safety. The value of the fuse fitted is marked on the pin face of the plug. Should the fuse need replacing, ensure the substitute is of the correct rating, approved to BS1362 and ASTA or BSI Kite marked.

ASTA: 

BSI: 

- The fuse cover is removable with a small plain slot screwdriver. Ensure the fuse cover is replaced before attempting to connect the plug to an electrical outlet. If the cover is missing, a replacement must be obtained or the plug replaced with a suitable type.
- If a replacement plug is to be fitted this must be carried out by a qualified electrician.
- The damaged or incomplete plug, when cut from the cable should be disabled to prevent connection to a live electrical outlet.
- This appliance is Class I and is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.
- If an extension lead is required, use an approved and compatible lead rated for this appliance. Follow all the instructions supplied with the extension lead.
- Class I : Products with this symbol must have metal parts connected to electrical earth by an earth conductor. The basic requirement is that no single failure can result in dangerous voltage becoming exposed so that it might cause electric shock.
- Important: If using an extension lead, follow the instructions that came with your lead regarding maximum load while cable is wound. If in doubt, ensure that the entire cable is unwound. Using a coiled extension lead will generate heat which could melt the lead and cause a fire.

**Failure to abide by any of these warnings could result in a fire, explosion, electric shock, injury, death, and property damage.**

## Disposal



The adjacent symbol of a crossed-out wheeled bin indicates that this device is subject to Directive 2012/19/EU. This directive states that you must not dispose of this device with your general household waste at the end of its working life, but rather take it to a specially established collection point, recycling centre or waste disposal company. This disposal is free of charge for you. Protect the environment and dispose of it properly.

## Troubleshooting

Issue	Solution
Steam is not produced	Ensure the water tank is topped up. Make sure the suction hose is submerged.
Too much water on ground after use	Check if mop pads are over saturated; replace or allow to dry.
Floor still dirty after use	Check mop pads are not too dirty. Stain may require pre-treatment.
Mop is difficult to push	Make sure mop pads are correctly installed.

## Specifications

Model	T-30
Steam pressure	0.7 Bar
Steam temp	140°C
Heating time	15 sec
Water tank capacity	380ml
Steam flow rate	20ml/min
Max runtime	15min
Power	1350-1550W
Weight	3.8 Kg

Draper Tools,  
Hursley Road  
Chandler's Ford  
Eastleigh  
SO53 1YF  
United Kingdom

Delta International  
Delta International BV  
Oude Graaf 8  
6002 NL  
Weert  
Netherlands

The background of the page is a repeating pattern of stylized human figures in a light gray color. Each figure is composed of a circular head and a body with two arms raised in a 'V' shape, suggesting a person with their arms outstretched or in a gesture of joy or openness. The figures are arranged in a grid-like pattern, slightly offset from each other, creating a subtle, textured background.

# Love, **Avalla**



