

Foot Fitting Instructions:

# SELBY


Foot A:



**PLEASE REMOVE  
ALL TRANSIT FEET  
BEFORE INSTALLING  
DISPLAY FEET**

Armchair / Lovechair / 2 Seater / 3 Seater

## Sofa Back:

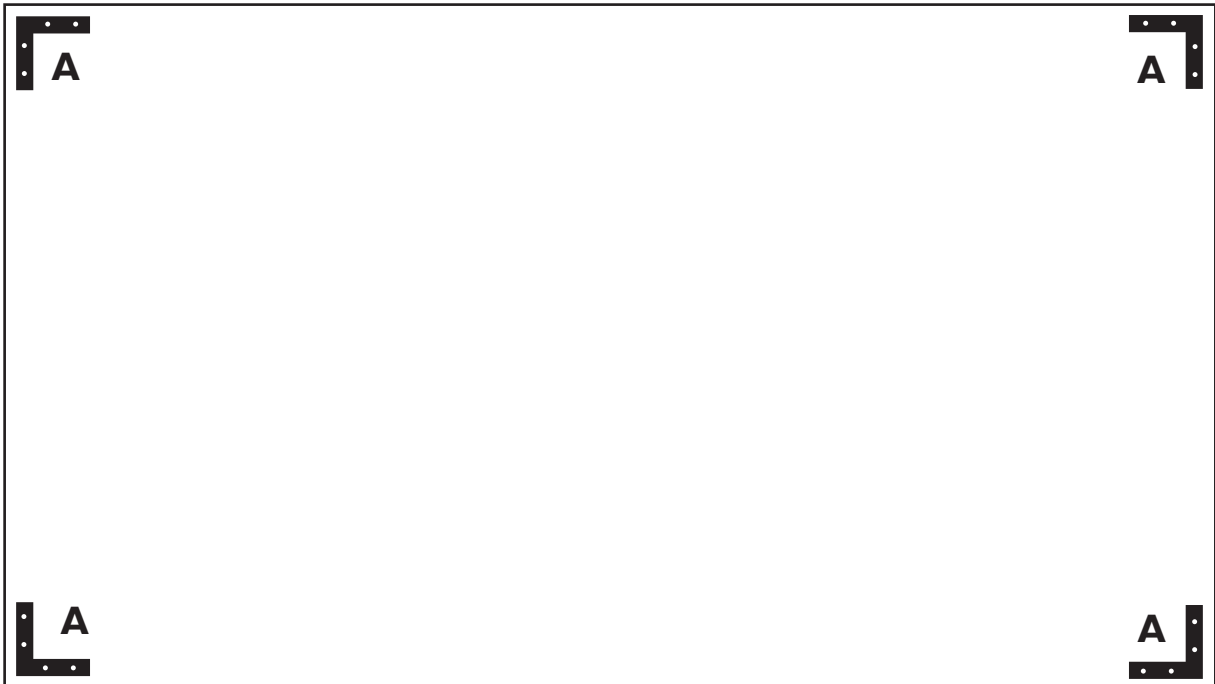

## Sofa Front:

**PLEASE NOTE:**

There are no pre-drilled holes. Place feet approx 0.5-1cm from the edge of the sofa and fix using the wood screws provided.