

**37-95**
months

Audi RS e-tron GT Ride-on

Children electric car

Installation and Operation Instructions

Stimulation car model

System driven by remote control

Forward, backward and steering operations by remote control

Forward and backward operations by manual shift

Steering wheel's music function

Techniques of volume regulation and MP3 amplification function

Battery power display












***Max weight: 25 kg.**

Officially Licensed by AUDI AG



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION

 <p>A x 1</p> <p>Body</p>	 <p>B x 2</p> <p>Front Wheel</p>	 <p>C x 2</p> <p>Rear Wheel</p>
 <p>D x 4</p> <p>Wheel cover</p>	 <p>E x 1</p> <p>Steering wheel</p>	 <p>F x 1</p> <p>Windshield</p>
 <p>G x 1</p> <p>Chair</p>	 <p>H x 2</p> <p>Rearview mirror</p>	 <p>I x 1</p> <p>Charger</p>
 <p>J x 1</p> <p>Remote control</p>	 <p>K x 2</p> <p>Wrench</p>	



Product Specifications :

Battery: 12V: 12V4.5AH

Drive Motor: 12V: 12V390*2(18000RPM)

Steering Motor: 12V: 12V380*1(5600RPM)

Suitable age: 37-95 months

Maximum weight: 25 kg / 55 lbs

Car Size: 103*58*41cm / 40.5**22.5**16"

Speed: 3-5km/h / 1.9-3.1mph

Hours of Use: Using 1-2 hours after Charging 8-10 hours

Charger:

Input: 100V-240V 50/60HZ

Output: 12V: 12V0.5A

Remote Control Battery : AAA1.5V*2 (not provided)

Function



Function indication

① Multi- Media

② Voltage display

③ Dashboard

④ Power switch

⑤ Light switch

⑥ Speed switch

⑦ Forward Stop Back

⑧ USB

⑨ TF

⑩ MP3

⑪ Control mode switch

Description of control mode switchover



Mode 1: remote control.

In this mode, only adults can use the remote control to control the forward, backward and steering of the product, and the foot switch cannot control the product.

Mode 2: manual control.

In this mode, the forward, backward and steering functions of the product can only be operated by the children themselves. Select the forward or backward gear, step on the foot switch, control the product forward or backward, and manually operate the steering wheel to control the steering.

Operation method of mode switching:


Find the mode switch on the dashboard, under the steering wheel, It has a transparent lid and is locked with a screw, requiring parents to open it with a screwdriver, turn the switch to gear "r c" for remote control mode, and turn the switch to gear "manual" for manual control mode.

Remote control instructions

- When moving, never switch between forward and backward – this can damage the gearbox and motor.
- The remote control requires a battery.
- Only an adult should use the remote control.
- This product is mainly operated by the remote control.

Instructions:

- Hold down the 'Forward' and 'Back' button for three seconds to start – The LED light will flicker.
- Turn on the power for the car – the LED will light up.
- Press 'S' to choose your speed. When one LED is lit, the product will operate at low speed, two lit LEDs is medium speed and three lit LEDs is high speed.
- Press 'P' to break – all LEDs will flicker.
- If no button is pressed after 10 seconds, the remote will enter standby. Press any button to start using again.

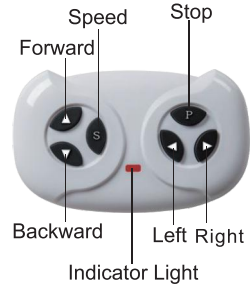

Battery specifications

- Never mix new, old or different types of batteries together.
- Never mistake positive and negative electrodes of a battery – this could lead to a short circuit.
- Do not charge non-rechargeable batteries.
- Place batteries into the right polarity.
- Only adults should charge and change batteries.
- Take batteries out of the product when charging.
- Take dead batteries out of the product – keep out the reach of children.
- Use a screwdriver to remove the battery screws, open the cap as the arrow signals, then insert two AAA 1.5V batteries.

1. Installing front wheels

- Remove the nut and gasket from the front axle.
- Install the wheel, gasket and nut onto the front axle – tighten the nut with a wrench.
- Install the cover onto the wheel.
- Repeat for the wheel on the other side.



2. Installing rear wheels

- Remove the nut and gasket from the rear axle.
- Install the wheel, gasket and nut onto the rear axle – tighten the nut with a wrench.
- Install the cover onto the wheel.
- Repeat these steps for the wheel on the other side.



3. Installing the steering wheel

- Connect the steering wheel cable to the instrument panel.
- Plug the cable into the cable hole.
- Align the steering wheel with the connector.





4. Installing the windshield

- Align the windshield onto the car body.
- Fix the clip into the hole.



5. Connecting the power cord

Plug the power cord port on the battery tightly as shown in the figure, and turn on the car's power supply to test whether the connection is successful.

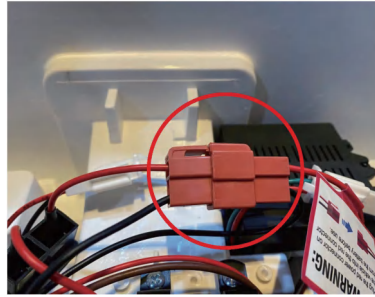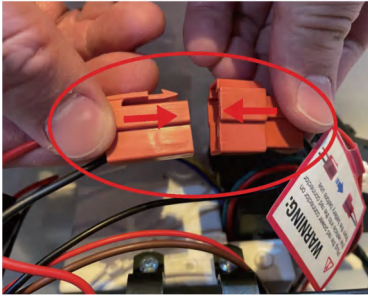

6. Installing the seat

- Align the seat to its position on the body – secure with screws.



7. Installing rear view mirrors

- Separate the left and right mirror.
- Insert the mirrors into the holes on the door.



WARNINGS

- This product must be assembled by an adult.
- When unassembled, this product contains small and sharp parts – keep out the reach of small children.
- Do not use in traffic.
- This product is not to be used by children under three years of age.
- The seatbelt must be worn when using this product.
- Adult supervision is required when using this product.
- Battery must be charged by an adult. Charge the product before its first use.
- Keep packaging out the reach of children to avoid suffocation.
- Only use parts provided by the manufacturer.
- Ensure children do not play with the charger.

Note

- Do not use in congested streets, roads, slopes or near drains.
- Do not change the circuit or add electrical devices to the product.
- Do not use the remote control in rain. Keep the car away from water and other liquids to avoid damage.
- The maximum load is 25kg – this product can be used by one child at a time.
- Ensure the power is switched off when not in use. Remove the battery connector when it has not been used for a while.
- Before using and charging, check the plug and other parts for any damage.

Charging:


- Charge the battery for less than 10 hours – charging for longer can cause permanent damage.
- Place the DC plug into the power socket, then put the charger into the plug. Never use the product when charging.
- This product can be used for one hour – the charging time is 8-10 hours.
- It is normal for charger and battery to stay cool when charging.
- Do not use the connector near water to avoid damage.
- Only use the supplied charger. Using a charger not supplied by the manufacturer can damage the product.
- When not in use for a long time, charge the product.

Charging steps:

Step 1: Find the charging hole behind the cover in the left front fender.

Step 2: Insert the plug into the hole.

Step 3: Connect the charger to the power socket.

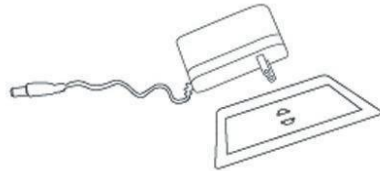

Components: PP plastic, k-carrageenan, generator, battery and iron castings.

Troubleshooting

Problem	Cause	Solution
The car does not start.	<ul style="list-style-type: none"> - The battery is low. - Failure to press the switch button correctly. - Power connector failure. - Battery breakdown. - Electrical devices are damaged. - Generator is faulty. 	<ul style="list-style-type: none"> - Ensure battery is fully charged. - Follow instructions when using this product. - Reinstall the power connector. - Change battery. - Change electrical devices. - Change generator.
The battery does not charge.	<ul style="list-style-type: none"> - Battery connector failure. - Charger doesn't charge. - Faulty charger. 	<ul style="list-style-type: none"> - Reinstall the connector. - Plug in the charger again. - Change the charger.
The car doesn't drive far.	<ul style="list-style-type: none"> - Battery isn't fully charged. - Overused battery. 	<ul style="list-style-type: none"> - Ensure the battery is fully charged. - Change the battery.
There's a slight noise and the car heats when charging.	<ul style="list-style-type: none"> - This is normal. 	<ul style="list-style-type: none"> - Nothing needs to be done.
The car operates at a slow speed.	<ul style="list-style-type: none"> - Overused battery. - The battery is dead. - The product has exceeded its maximum load. - Uneven driving surface. 	<ul style="list-style-type: none"> - Change the battery. - Ensure battery is fully charged. - Ensure the weight is below 25kg. - Drive on a flat and even surface.

Maintenance

- Before using, check the wiring, plug, shell and other parts, ensuring there is no damage.
- When using after a long time, ensure the iron castings are lubricated to avoid rust. When storing, place the product on a flat surface, ensuring it's out of direct sunlight. Keep the product indoors or cover with a water-resistant cloth.
- Keep the product away from stoves, ovens and heaters to avoid plastic from thawing.
- Clean its surface with a dry cloth. Clean plastic parts with non-wax furniture polish.
- Do not clean plastic parts with chemical solutions. Do not clean the car with water.
- Do not drive in wet weather – this could damage the generator, circuit system or battery.
- When not in use, ensure the power is off – the switch should be on 'STOP' or 'OFF'.
- Do not use a fuse that does not conform with the agreed specifications.
- Do not make any modifications to this product or circuit system. Any damages must be fixed by a professional or under the guidance of a professional.

Warning: The remote control is not a toy. It is for the adult use only, and should not be used by a child. A close adult supervision is always required. Reception range may change significantly with weather, battery and other environmental conditions.

Warning: Toys used by children outside of private places may be potentially dangerous.

The package must be retained since it contains important information.

This toy contains battery that is non-replaceable.

The charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toys must not be used with this charger until the damage has been repaired.

Warning. Toys used by children outside of private places may be potentially dangerous.



Trademarks, design patents and copyrights are used with the approval of the owner AUDI AG.

If you have any questions, please contact our customer care center.
Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:
MH STAR UK LTD
Unit 27, Perivale Park,
Horsenden lane South
Perivale, UB6 7RH
MADE IN CHINA