


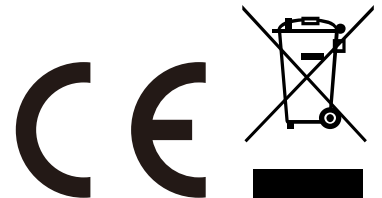

Buffet server



For correct usage, please read these instructions carefully before use and keep them safe for future reference.

General information and safety warnings

- Use this appliance only as instructed.
- Unplug from the mains power supply before cleaning and when not in use.
- Ensure the power cable is not draped over the work top to prevent tripping.
- Place the appliance on a stable, flat surface away from heat sources.
- This appliance is not for use by persons (including children) with reduced capabilities unless supervised or instructed by a responsible person.
- Supervise children to prevent them from playing with the appliance.
- Only qualified electricians should repair this appliance. Do not attempt repairs yourself.
- Do not operate this appliance with an external timer or remote control system.
- Use the original power cable supplied.
- Ensure the voltage matches the mains power supply as indicated on the rating label.
- Unplug the appliance from the mains when not in use.
- Replace damaged power cables at an electrical store to avoid hazards.
- Keep the appliance and power cord away from heat sources, such as cooker tops or open flames.
- Ensure the power cable and plug do not come into contact with water.
- Do not use the appliance outdoors.
- Ensure your hands are dry when touching the appliance, power cable or plug.
- Do not use the appliance in humid rooms.
- Switch off and unplug the appliance if it malfunctions and before cleaning.
- Do not leave the appliance unattended during use.
- Do not move the appliance when it is switched on or hot. Allow it to cool before moving.
- The top stainless steel surfaces and heating elements can become extremely hot and cause burns. Use with care.
- Ensure sufficient space around the appliance for heat to escape – keep it away from flammable materials. Do not cover the appliance.
- Do not place under or near curtains, soft furnishings, wall cabinets or plastic kitchenware.
- Always use the buffet warmer the correct way up.
- Incorrect usage may cause damage to the work surface.
- **WARNING:** This product is for keeping cooked food warm, not for cooking or reheating, as it does not reach temperatures necessary to kill bacteria.

Before first use


- Read all instructions carefully and keep them for future reference.
- Remove all packaging.
- Clean all removable parts with warm, soapy water and dry thoroughly with a soft cloth.

DO NOT USE ABRASIVE CLEANERS AS THEY CAN DAMAGE PARTS.

DO NOT IMMERSE THE BUFFET WARMER IN WATER OR RUN WATER DIRECTLY ONTO IT.

- **Notice:** This buffet warmer may emit slight smoke or odour when first heated. This is normal.

DESCRIPTION OF PARTS:

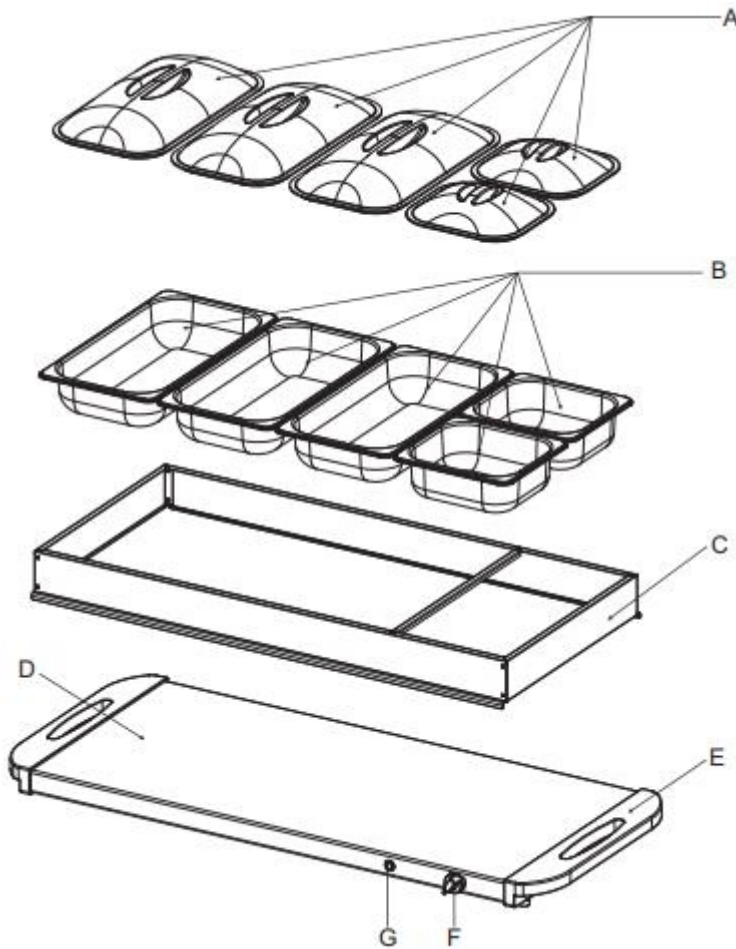

- A: Lid
- E: Handle
- B: Warming tray
- F: Knob
- C: Frame
- G: Indicator light
- D: Warming plate

How to use the food trays

- Place the appliance on a flat, heat-resistant surface.
- Ensure the buffet warmer is the correct way up.
- Plug the appliance into the mains power supply.
- The red heating indicator will light up.
- Adjust the temperature control knob to the desired setting.
- Pre-heat the appliance for ten minutes; the red light will turn off when the desired temperature is reached.
- Place the rectangular frame into position on the tray (take care, the tray will be hot), then position the three serving dishes.
- Place your food items into the individual serving dishes.
- Place the lids onto the serving dishes to retain heat and keep food fresh.
- The indicator light will cycle on and off to maintain the correct temperature.

Note: The serving dishes can keep food hot for long periods. It is not recommended to exceed 6-8 hours.

- Do not leave food in the serving dishes. Remove for easy cleaning and preparation for the next usage.
- Do not place the lids directly onto the hot surface of the warming tray.
- Only use cooked food in the buffet warmer. Never put cold or raw food into the warmers.
- Do not use the warmer to reheat food.

How to use the warming tray

- To use just the warming tray, remove the serving dishes and frame.
- Place the warming tray on a flat surface.
- Ensure it is the correct way up.
- Plug the appliance into the mains power supply.
- The indicator light will illuminate.
- Adjust the temperature control knob to the desired setting.
- Preheat the appliance for ten minutes; the indicator light will turn off once the desired temperature is reached.
- Place heat-resistant casserole dishes or plates of food directly on the warming plate.
- Unplug the appliance when not in use.

NOTE: Always allow the appliance to cool fully before cleaning.

Cleaning your appliance

- Allow the appliance to cool completely before cleaning.
- Once cool, remove all food and liquid from the serving dishes.
- Remove each lid and dish from the frame.
- Clean the frame, dishes and lids in warm, soapy water. Rinse well and dry with a soft cloth.
- DO NOT use abrasive cleaning detergents, cloths or sponges on the appliance, as they can damage the stainless steel.
- Wipe the warming tray clean with a non-abrasive cloth or sponge to remove food and liquid.

If you have any questions, please contact our customer care centre.
Our contact details are below:

 0044-800-240-4004

 enquiries@mhstar.co.uk

IMPORTER ADDRESS:
MH STAR UK LTD
Unit 27, Perivale Park,
Horsenden lane South
Perivale, UB6 7RH
MADE IN CHINA

