



IN240600238V02_UK

800-209V70



TOASTER



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION

IMPORTANT INSTRUCTIONS


1. Please read these instructions before operating and keep for future reference.
2. To prevent electrical hazards, do not immerse any part of the appliance or cord in water or any other liquid.
3. Children must be supervised when near the appliance.
4. Always use the appliance on a dry and level surface.
5. Do not use this appliance outdoors.
6. Always unplug from the plug socket when not in use and before cleaning.
7. Do not operate the appliance if it malfunctions or is damaged. Return to an authorised service engineer for repair. Special tools are required.
8. Regularly check the supply cord, ensuring there is no damage. If any signs of damage are found, the appliance must be returned to an authorised service centre.
9. Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Allow the unit to cool before wrapping cord around base for storage.
10. Surfaces get hot during use – do not touch to avoid scalding. Before storing or covering, ensure the appliance has cooled down completely.
11. Keep this appliance away from hot gas, electric burners, heated ovens and open microwaves.
12. Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
13. When using this appliance, ensure there is enough space above and all sides of the appliance, so there is proper air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, cloths or other flammable materials during use. CAUTION is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
14. This appliance is for household use.
15. When using the toaster, ensure the slide out crumb tray is in place. The tray should be cleaned regularly – do not allow crumbs to build up.
16. Do not use this appliance for food containing sugar, jam or preserves.
17. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
18. The temperature of accessible surfaces may be high when the appliance is operating.
19. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
20. Never use the device unsupervised! Switch off the device whenever you are not using it, even if is only for a moment.
21. The appliance must not be used with an external timer or separate remote control system.

WARNING!

Never attempt to extract Jammed toast, muffins, bagels or any other item with a knife or any other object – contact with live elements is an electrocution hazard. Let the appliance cool down, unplug the toaster, then carefully remove the bread.

FEATURES OF TOASTER

1. Crumb tray
2. Stop button with indicator light
3. Defrost button with indicator light
4. Defrost button
5. Electronic variable browning control
6. High lift bread release

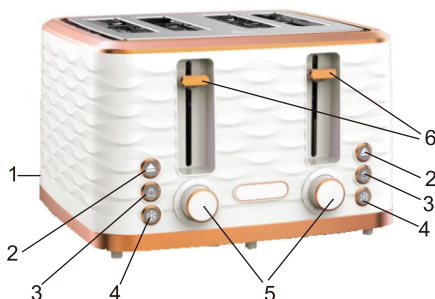

OPERATION TOASTER

1. Insert the plug into a suitable mains supply socket and turn the power on.
2. Place two slices of bread, muffins or bagels into the slots.
3. Select the desired browning setting on the control knob (No.1- lightest & No.7- darkest). When using the toaster for the first time, we suggest you toast on No.3. Due to different types of bread and personal preference, you may want to use a different browning setting.
4. Press the carriage control lever down until it clicks into place. Toasting cycle will automatically commence. Please note: if the toaster is not plugged in and switched on, the carriage control lever will not click into place.
5. When the toast reaches the desired colour, the appliance will turn off – the toast will automatically pop up. Stop the process at any time by pressing the stop button.

TOASTING FROZEN BREAD: Place the bread into the slots and select the desired browning setting. Press the carriage control lever down until it clicks into place, then press the frozen button.

CLEANING THE TOASTER

Your toaster comes with a removable crumb tray. This is a quick and convenient way to remove crumbs. Always ensure the toaster is unplugged and has cooled down before removing and emptying the crumb tray. Clean the tray with a damp cloth. Before putting the tray back in to the toaster, ensure it is completely dry.

Use a stiff brush to remove any burnt-on crumbs.

Wipe the outside of the toaster with a damp cloth.

Do not use sharp objects or abrasive substances to clean the toaster.

Slide the crumb tray out of the toaster and remove the crumbs, wipe it with a clean, dry cloth and put it back in place. Clean the crumb tray after each use of the toaster. Make sure that crumbs do not accumulate in it. Otherwise, they could burst into flames.

CAUTION

To prevent an electric shock, disconnect from the mains before removing the cover.

No user-serviceable parts inside.

Refer servicing to qualified personnel.

The appliance must not be used with an external timer or separate remote control system.

Technical details

Model No.: 800-162V70

Mains Voltage: 220-240V ~ 50Hz

Power consumption: 1350-1600W

If you have any questions, please contact our customer care center.

Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:

MH STAR UK LTD

Unit 27, Perivale Park,

Horsenden lane South

Perivale, UB6 7RH

MADE IN CHINA

