


JT62135

KE82109A



**Kettle and Toaster Set**

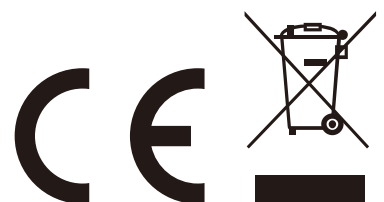

**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

**KETTLE****SAFETY INSTRUCTIONS****General**

- Please read these instructions carefully. Retain this manual for future use.
- Use this appliance by following these instructions.
- This appliance is not for use by children or individuals with limited physical, sensory or mental capabilities unless they have received proper supervision or instructions for safe usage.
- Children must be supervised when near this appliance.
- Any repairs must be carried out by a qualified electrician. Never try to repair the appliance yourself.

**Electricity and heat**

- Before use, ensure the mains voltage matches the rating plate on the appliance.
- Make sure that you always use an earthed wall socket to connect the appliance.
- Before moving the appliance or if it is not in use, remove the plug from the mains socket.
- Remove the plug from the wall socket by pulling the plug, not the power cord.
- Check the appliance's power cord regularly, ensuring it is not damaged. Do not use the appliance if the power cord is damaged. Damaged power cords must be replaced by a qualified repair service.
- Some parts of the appliance may get hot. To prevent burning yourself, do not touch these parts.
- The appliance needs space for heat to escape, preventing the risk of a fire. Ensure the appliance has sufficient space around it. Keep this appliance away from flammable materials. Never cover this appliance.
- Keep the appliance, its power cord and plug away from hot surfaces, such as hobs and naked flames.
- Keep the appliance, its power cord and plug away from water and other liquids.

**During use**

- Never use the appliance outdoors.
- Place the appliance on a flat, stable surface.
- When not in use and before cleaning, remove the plug from the wall socket.
- Ensure the power cord does not hang over the edge of any surface.
- Ensure the power cord does not hang over the edge of any surface.
- Never use the appliance in a humid room.
- Never immerse the appliance, the plug or the power cord in water or other liquid.
- Never reach for the appliance if it falls into water. Immediately remove the plug from the wall socket - do not use the appliance again.

- Only use the base supplied with the kettle. Never use the base for other purposes.
- Remove the kettle from the base, then fill with water from the tap. Never fill the kettle above the 'max' level.
- Only switch on the appliance after it has been filled with water. Only use cold water to fill.
- Whilst the appliance is in use, ensure the lid is securely closed.
- Never open the lid when the water is still boiling.
- Only water must be used in this appliance-do not use for other liquids.
- Fill the kettle with at least 0.5 liter of water.
- Before storing the appliance, allow it to cool to room temperature.
- Never use the appliance through an external timer or remote control.

## OPERATION

**This appliance is for domestic use only. It is not intended for commercial use.**

### Feature

1. Spout
2. Top lid
3. Lid release button
4. Handle
5. Body
6. Water-level indicator
7. On/Off switch
8. LED strip light when boiling
9. Base



### Before use for the first time

- Remove all packing material.
- Clean the kettle by filling it with water and bringing to a boil - do this three times, disposing of the water each time.
- **Tip:** When boiling for the first time, you can use vinegar or special descaling agents

### Use

1. Make sure the spout is facing away from you.
2. Press the button (3) to open the lid (2).
3. Fill the kettle with the required quantity of water (at least 0.5 liters, and a maximum of 1.7 liters). Never fill water above the 'max' limit - hot water could spatter out.

**ATTENTION: Do not spill water on the base.**

4. Release the button to open the lid.
5. Place the kettle on the base, and insert the plug in the wall socket. Push down the On/Off switch. The LED strip light around the kettle base will illuminate.
6. The kettle is now switched on, and the water will now begin to heat. The kettle switches off automatically a few seconds after the water has come to the boil. The LED strip light will now extinguish.
7. Remove the kettle from the base by the handle, and pour the water out.

**ATTENTION: To prevent scalding, do not touch the hot water.**

8. If you want to heat water without boiling it, you can switch the kettle off at any time.
9. Remove the plug from the wall socket when you have finished using the kettle.

### Overheating safeguard

The kettle is fitted with an overheating safeguard. This will switch off the kettle if it is operated without (sufficient) water. Before using the kettle again, allow it to cool down for at least 10 minutes.

## CLEANING AND MAINTENANCE

- Remove the plug from the wall socket, and allow it cool down.
- Clean the kettle with a damp cloth. Never immerse the appliance in water. Never put the appliance in a dishwasher. Make sure that the electrical connections do not become damp.
- If the interior of the kettle has become severely discolored, then the best way to clean it is with a damp cloth and a little washing soda. After cleaning, rinse the kettle very thoroughly.

### ATTENTION:

- **Never use corrosive or scouring cleaning agents or sharp objects (such as knives or hard brushes) to clean the appliance.**
- **Before cleaning, unplug the appliance and wait for it to cool down.**

## DESCALING

- This appliance has an integral heating element, which means limescale will not form. You do not need to descale this appliance.
- If you still wish to descale this appliance, follow these steps:
  1. Unplug the appliance and wait for it to cool down.
  2. Fill the kettle with a vinegar solution to the MAX level, and bring to the boil.
  3. Leave the kettle with the vinegar solution to stand for a couple of hours.
  4. Empty the kettle, fill with clean water to the MAX level, and bring to the boil. Empty the kettle. Repeat this process twice.
- **Never use ammonia or other products to descale the appliance. These can be injurious to your health. Only use a vinegar solution, or special descaling agents.**

**SPECIFICATION**

Product: Kettle

Model: 800-290V70 (KE82109A)

Power consumption: 2500-3000W

Mains Voltage: 220-240V 50/60Hz

Made in China

**TOASTER****IMPORTANT INSTRUCTIONS**

1. Before using this appliance, read all instructions. Retain this manual for future reference.
2. To prevent electrical hazards, do not immerse any part of the appliance or cord in water or other liquid.
3. Children must be supervised when near the appliance.
4. Always use the appliance on a dry and level surface.
5. Do not use this appliance outdoors.
6. When not in use and before cleaning, unplug the appliance from the socket.
7. If the appliance is damaged or malfunctions in any way, do not use it. Return the appliance to an authorised service engineer for repair, as special tools are required.
8. Regularly check the supply cord, ensuring there are no damages. If signs of damage occur, return the entire appliance to an authorised service engineer.
9. Ensure the cord does not hang over a table or counter or touch hot surfaces. Let the unit cool before wrapping the cord around the base for storage.
10. Parts of this appliance can become hot - do not touch to avoid burns. Do not store or cover the appliance until it has cooled down completely.
11. Keep this appliance away from hot gas, electric burners, heated ovens and other heat sources.
12. When cleaning this appliance, do not use harsh abrasives, caustic cleaners or oven cleaners.
13. When using this appliance, ensure there is enough space on all sides, allowing air to circulate. Keep the appliance away from curtains, wall coverings, clothing, cloths and other flammable materials. Extra caution is required for surfaces that are not heat resistant – an insulated heat pad is recommended.
14. This appliance is for household use only. Do not use for commercial purposes.
15. When using the toaster, ensure the slide-out crumb tray is in place. Clean the crumb tray regularly – do not allow crumbs to build up.
16. Do not use this appliance with ingredients containing sugar, jam or preserves.
17. This appliance is not for use by children or individuals with limited physical, sensory or mental capabilities unless they have received proper supervision or instructions for safe usage.
18. Children must be supervised when near the appliance.
19. Whilst this appliance is in use, the temperature of surrounding surfaces may be high.
20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
21. Keep this appliance away from curtains, clothes and other flammable materials.

22. When in use, do not leave this appliance unattended. Ensure it is switched off when not in use.
23. Do not use this appliance through an external timer or separate remote control system.
24. Incorrect operation and improper handling can lead to malfunction of the appliance and injuries to the user.
25. Before the first connecting of the appliance check that voltage indicated on the rating label corresponds to the mains voltage in your home.
26. Do not leave the appliance switched on when not in use.
27. Do not use other attachments than those supplied.
28. Do not operate after malfunction or cord damage.
29. Do not attempt to repair, adjust, or replace parts in the appliance. Check and repair the malfunctioning appliance in the nearest service center only.
30. Keep the cord away from sharp edges and hot surfaces.
31. Do not pull, twist, or wrap the power cord around appliance.
32. Do not move the appliance until it cools down completely.
33. Never use sharp objects to take out sliced bread! When taking out sliced bread, be careful not to damage the heating wires.
34. Do not touch any metal part of the outer surface of the appliance as it may reach a very high temperature.
35. Do not insert bread slices that are too thick or wrapped in aluminum foil to avoid electric shock or fire.


**ATTENTION: TOO LONG TOASTING MAY CAUSE FIRE.**

36. Do not cover the toaster during operation.
37. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains. They must be watched.
38. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person to avoid a hazard.
39. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
40. The surfaces are liable to get hot during use.
41. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## OPERATION

### Features

1. Body
2. Slide-out crumb tray
3. Bread slot
4. Sliding lever
5. 7- Settings timer
6. Cancel button with indicator light
7. Reheat button with indicator light
8. Defrost button with indicator light
9. LED strip lights illuminate when toasting

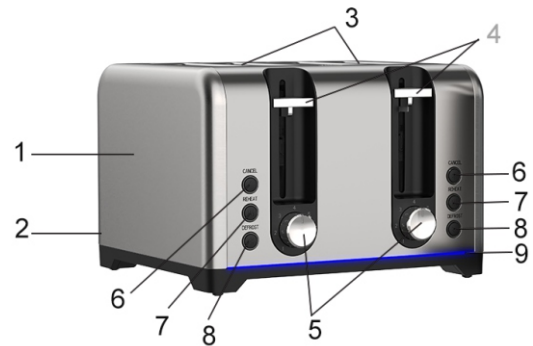

### BEFORE THE FIRST USE

- Remove all packing material.
- Before using the toaster for the first time clean your toaster (see Chapter “**CARE AND CLEANING**”). Operate the toaster at least two times without bread but on the highest setting. Ventilate the room during this period.
- As all new electric heating elements, your toaster creates a new smell when it is first switched on. This is quite normal and not a cause for concern.
- If the power cord is damaged, to avoid danger, please do not repair or replace it by yourself, please contact the after-sales service personnel directly.
- Please check that the crumb tray is placed in the correct position.

### TOASTING

- Plug the toaster to the power supply and place 1 to 4 slices of bread into the bread slots of the appliance.
- Using the control knob, select the desired browning (No.1 is the lightest and No.7 is the darkest). For first-time use, it is suggested to use No.3. Different types of bread and personal preference may require a different browning setting.
- Press the button until it sucks in the power to start toasting the bread. If you press the left button, the left LED strip light will be illuminating when toasting. If you press the right button, the right LED strip light will be illuminating when toasting. If you press both buttons, both LED strip lights will be illuminating when toasting.
- After the machine starts working, do not touch the top of the machine with your hands, be careful of burns.
- After the bread is baked, the press brake will automatically jump off and rise, and the LED strip light will automatically extinguish. Please use bread clips to clip the bread out to prevent burning your hands.
- After the bread has been baked, wait for the machine to cool, pull out the bread crumb tray from the back of the machine, clean the crumb tray, clean it out and reinsert it into the machine.
- Put the machine away after cleaning it.

**REHEAT FUNCTION:**

- You can use reheat facility if ready bread got cold.
- Insert bread into the toaster and pull down the sliding lever. Set the knob to the reheat function setting on **REHEAT**. The indicator will light up.
- The cold bread can be reheated in short time without over browning.

**DEFROST FUNCTION**

- Press defrost function button **DEFROST** to prolong toasting time of frozen bread, thus the indicator light should light up.

**CANCEL BUTTON**

- Toasting can be reset anytime during toasting by pressing **CANCEL** button, thus the indicator light will shut down.

**CRUMB TRAY**

- The crumb tray is intended for collecting the crumbs, which fall on the base of the toaster while toasting.
- Pull the crumb tray out, empty and place it back.

**CARE AND CLEANING**

- Ensure that the appliance is unplugged before cleaning.
- Let the unit completely cool down.
- Do not use abrasive detergents, any organic solvents or aggressive chemicals.
- Clean off crumbs of bread.

**STORAGE**

- Switch off and unplug the appliance; let it completely cool.
- Complete all requirements of chapter **CARE AND CLEANING**.
- Reel on the power cord.
- Keep the appliance in a dry cool place.

**SPECIFICATION**

Product: Toaster

Model : 800-290V70 (JT62135)

Power consumption: 1560-1860W

Mains Voltage: 220-240V 50/60Hz

Made In China

If you have any questions, please contact our customer care center.

Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:

MH STAR UK LTD

Unit 27, Perivale Park,

Horsenden lane South

Perivale, UB6 7RH

MADE IN CHINA

