

 





Radiator Name: Flat Panel Single

This product must be fitted only by a fully qualified installer

Description	Illustration	Qty
Radiator		
Bracket		4
Fixing Screw		4
Spacer		4
Air Vent		1
End Plug		

GENERAL RECOMMENDATION

 Before fitting the radiator, it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil etc...


When the system water PH is outside the 5.5 - 8.5 range and/or when the dissolved is above 0.1mg/litre, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (Silicon rubber too).

In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.


If the system water exceeds 50 degrees Celsius, please install a warning mark near the radiator to avoid any accidental scald. Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemicals against during cleaning operations.

It is prohibited to climb onto the radiator.


Maximum working temperature is 95 centigrad degree. Maximum working pressure is 6 bar.

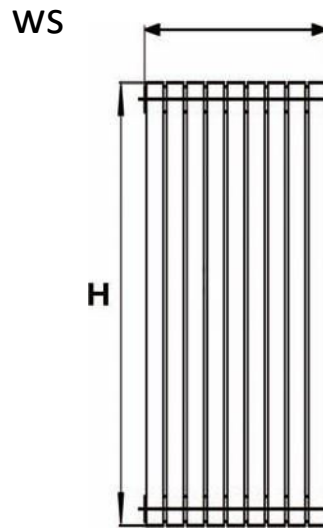


Front View

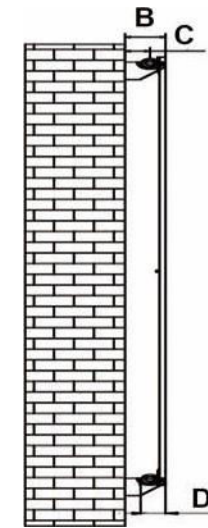


Side View

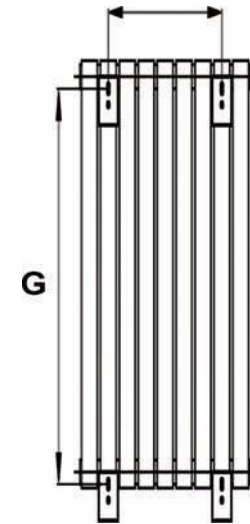

Back View

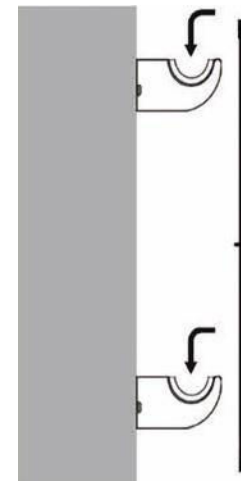

Hang fre radiator on the brackets.

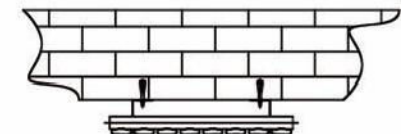

Top view

Product Code	Product Name	Pipe number	Height	Width	Thickness	Hanger Axes Horizontal	Wall to front face of the bracket	Hanger Axes vertical	Wall to pipe center distance	Empty Weight	Water volume
			mm	mm	mm	mm	mm	mm	mm		
RV-HRH066AS/WS	Flat 600 x 420	6	600	420	48	210	79	555	50	6.1	2.51
RV-HRH069AS/WS	Flat 600 X 630	9	600	630	48	420	79	555	50	9.0	3.77
RV_HRH611 AS/WS	Flat 600 X 770	11	600	770	48	560	79	555	50	10.9	4.66
<u>RV-HRH614AS/WS</u>	Flat 600 X 980	14	600	980	48	770	79	555	50	13.8	5.86
RV-HRH617AS/WS	Flat 600 X 1190	17	600	1190	48	980	79	555	50	16.7	7.11
RV-HRH621ASM/S	Flat 600 X 1470	21	600	1470	48	1260	79	555	50	20.5	8.79
RV-HRV166AS/WS	Flat 1600 X 420	6	1600	420	48	210	79	1555	50	14.2	5.64
RV-HRV167AS/WS	Flat 1600 X 490	7	1600	490	48	280	79	1555	50	16.4	6.58
RV-HRV168AS/WS	Flat 1600 X 560	8	1600	560	48	350	79	1555	50	18.7	7.51
RV-HRV185AS/WS	Flat 1800 X 350	5	1800	350	48	140	79	1755	50	13.3	5.22
RV-HRV186AS/WS	Flat 1800 X 420	6	1800	420	48	210	79	1755	50	15.7	6.26
RV-HRV187AS/WS	Flat 1800 X 490	7	1800	490	48	280	79	1755	50	18.2	7.30
RV-HRV188AS/WS	Flat 1800 X 560	8	1800	560	48	350	79	1755	50	20.9	8.35
RV-HRV189AS/WS	Flat 1800 X 630	9	1800	630	48	420	79	1755	50	23.5	9.39