



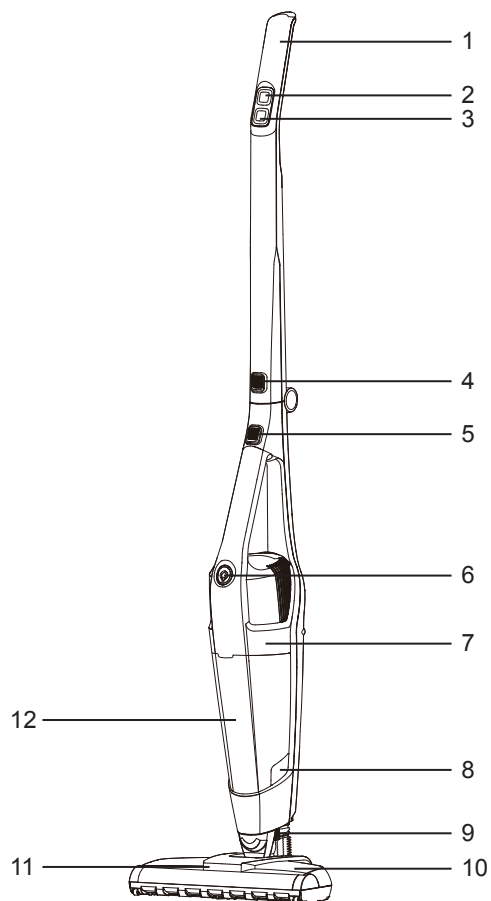

13

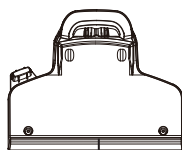

14



15



16



17



18

TABLE OF CONTENTS

SECTION	PAGE
Symbols	4
Safety Information	5
Unpacking and Product Features	7
Assembly	7
Operation	8
Maintenance	10
Troubleshooting	12
Technical Data	14
Recycling and Disposal	14

Thank you for choosing our JOEY™ Compact cordless vacuum cleaner. This is a cordless vacuum cleaner intended for domestic use only and suitable for indoor use within a normal household environment for light, dry dust and debris.

FOR YOUR SAFETY: CAREFULLY READ AND UNDERSTAND ALL INSTRUCTIONS.

SYMBOLS

	Caution.
	Read instruction manual before any installation or operation.
	For indoor use only.
	Protection Class II.
	Do not dispose of electrical equipment in domestic waste.
	Batteries contain Lithium-ion. Do not dispose of batteries in household waste.

SAFETY INFORMATION

This appliance can be used by children aged from 8 years and above. Persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge can operate this appliance providing they have been given adequate supervision or instruction concerning use of the appliance and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance shall not be carried out by children without supervision.

- This appliance should only be used for normal vacuuming in a domestic household environment.
- Make sure the vacuum cleaner is stored in a cool, dry place.
- Unplug the vacuum cleaner from the charger before cleaning or maintenance.
- Children should be supervised to ensure that they do not play with the appliance.
- Packaging material, including plastic bags should not be accessible to children to avoid suffocation.
- Check that your supply voltage is the same as that stated on the rating plate on the charging adapter.
- Each vacuum cleaner is designed for a specific charging voltage, use only the original charging adapter supplied with this vacuum cleaner.
- There is no shock hazard from electrical terminals located on the vacuum. A burn could result from metal objects being inserted into the terminal areas. Vacuum cleaner terminals should always be kept free of hard or sharp objects, such as glass, nails, screws or coins that could damage the vacuum.
- Leaks from battery cells can occur under extreme usage or temperature conditions. If the liquid from the battery comes into contact with skin, rinse immediately with water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention.
- Do not mutilate or incinerate batteries as they will explode at high temperatures.



WARNING: For the purposes of recharging the battery, only use the charging adapter (561047107) provided with this appliance.

PROPER USE

- The appliance must only be stored and charged indoors.
- Do not leave the vacuum cleaner in direct sunlight.
- Avoid exposing the vacuum cleaner to excessive heat sources.
- Do not expose the appliance to temperatures below 4°C or above 40°C.
- Keep the vacuum cleaner away from your body when using nozzles and tubes.
- Do not use a damaged charging adapter, charging base or cable.
- When disconnecting the charging cable from the charging base, pull the plug itself to remove it; do not pull on the power cord.
- Do not pull the charging cable over sharp edges or allow it to become trapped.
- For safety reasons, only manufacturer, its service agent or suitably qualified persons are permitted to carry out repairs.
- Do not try to touch the brush roll while the vacuum cleaner is switched on and the brush roll is spinning.
- Switch off the appliance when it is not in use.
- The battery packs must not be dismantled and short circuited.

NEVER USE THIS VACUUM CLEANER

- In wet areas.
- On building rubble.
- Close to flammable gases, etc.
- When the product shows visible signs of damage.
- On sharp objects or fluids.
- On hot or cold cinders, lighted cigarette butts, etc.
- On fine dust, for instance from plaster, concrete, flour, hot or cold ashes.
- Without its filters.

Using the vacuum cleaner in the above circumstances may cause serious personal injury or damage to the product. Such injury or damage is not covered by the warranty or by the manufacturer.

UNPACKING AND PRODUCT FEATURES

1	Handle	10	Motorised Floor Head
2	Power Switch	11	LED Task Lights
3	Speed Switch	12	Dust Bin
4	Folding Handle Release Button	13	Filter (x2) (x1 pre-installed)
5	Handheld Vacuum Cleaner Release Button	14	Filter Basket (pre-installed)
6	Power Switch & Battery Charging Indicator	15	Charging Base
7	Handheld Vacuum Cleaner	16	Charging Adapter
8	Dust Bin Release Button	17	Combination Tool
9	Motorised Floor Head Release Button	18	Instruction Manual

ASSEMBLY

1. Remove all the contents from the packaging; make sure you have all contents as listed on page 7.
2. This vacuum cleaner features a foldable handle for easy storage. Unfold the upper section of the handle until it securely clicks into position. Make sure the handle is locked into place (Fig. 1).
3. Position the neck of the floor head into the upright position. Insert the complete handle assembly onto the neck of the motorised floor head ensuring that there is nothing trapped between the unit connections. Check that both security latches on the motorised floor head are clicked into place (Fig. 2).
4. Place the handheld unit into the docking bay on the main body. Ensure the suction port of the handheld unit is positioned into place first and that the dust bin is securely fitted before pressing the handle into the locking position (Fig. 3).
5. Insert the vacuum cleaner support onto the charging base and click into place (Fig. 4).

OPERATION



CAUTION: Moving parts! To reduce the risk of personal injury, DO NOT touch the brush roll when the vacuum cleaner is operating. Touching the brush roll while it is rotating can cause personal injuries. Use caution when operating near children or pets (Fig. 5).



WARNING: Do not operate the vacuum cleaner without a filter in place.

1. Charging

NOTE: To optimise the battery longevity, ensure the vacuum cleaner is fully charged before first use. Charge the vacuum cleaner for at least 5 hours before using for the first time. Never charge the batteries in temperatures above 40°C or below 4°C. It is normal for the charger to become warm when charging.

NOTE: Only recharge your vacuum cleaner with the supplied charger.

- 1) Before charging, make sure the cordless vacuum is turned OFF and the handheld vacuum cleaner unit is installed in the main body.
- 2) Insert the charging adapter into the charging port located on the side of the charging base and secure the cord.
- 3) Insert the vacuum cleaner onto the charging base. Ensure all connections are clean and free of dirt (Fig. 6).
- 4) Plug the charging adapter into a suitable power supply (Fig. 7).

NOTE: The vacuum cleaner sits against the charging pins on the base station to make the vacuum always available for use. As a result, it does not lock into place during charging. Make sure that there is nothing obstructing the connections which may prevent charging.

- 5) The handheld vacuum cleaner power switch will show the progress during charging. Whilst the vacuum is being charged, the battery charging indicator will flash. Once fully charged, the battery charging indicator will automatically turn off.

Battery charging indicator	Status
Flashing light	Charging
No light	Fully charged



Power Switch
& Battery
Charging
Indicator

- 6) When fully charged, unplug the charging adapter from the power supply and remove the vacuum cleaner from the charging base.

NOTE: If the battery charging indicator does not illuminate when charging, ensure that:

- The vacuum cleaner is seated properly onto the charging base.


- The charging plug is plugged into the power supply properly.
- The power supply is switched on.
- The charging connector is fully inserted in the charging base.

2. Using Your Vacuum Cleaner

Before vacuuming, check that the brush roll is clear from any obstructions such as hair or sharp objects to avoid scratching floors, and that the dust bin is empty.

NOTE: Use the low-speed setting for cleaning of hard floors, and low pile rugs, or when an increased run time is needed. The high-speed setting should be used for cleaning plush rugs and carpets or when additional cleaning power is required.

- 1) To start the vacuum cleaner, press the power switch. The vacuum cleaner will start in the high speed mode.
- 2) To switch to the low-speed setting, press the speed switch once. Press the speed switch again to switch back to high speed.
- 3) To stop the vacuum, press the power switch once.

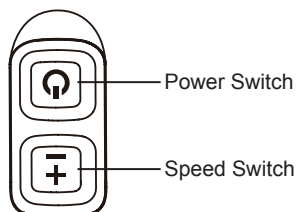

3. Using Your Handheld Vacuum Cleaner

- 1) To remove the handheld vacuum cleaner, press the handheld vacuum cleaner release button and detach from the main body (Fig. 8).
- 2) To turn on, press the power switch located on the handle. To turn off, press the power switch located on the handle again.
- 3) To clean areas that are difficult to reach, use the combination tool provided by inserting one end of the tool into the handheld vacuum cleaner suction port (Fig. 9).
- 4) The combination tool can be used as a crevice tool or a dusting brush. To transition from crevice tool to dusting brush, disengage the latch located on the back of the tool, and slide the brush to the top. Ensure it clicks into place to secure for operation (Fig. 10).
- 5) To return the combination tool back to the crevice function, press the latch release button once more and slide the brush back into the bottom position. Ensure it is securely locked into place.



4. Storing Your Vacuum

- 1) Fold the upper handle section by pressing the handle release button located on the main body and pulling the handle backwards into the storage position.
- 2) Insert the combination tool onto the accessory storage slot on the charging base for convenient storage.

MAINTENANCE



CAUTION: To reduce the risk of an electric shock, remove the vacuum cleaner from the charging base, and ensure the machine is turned off before performing any maintenance.

1. Emptying the Dust Bin

NOTE: For the best performance, empty the dust bin after every use. Never operate the vacuum cleaner without the dust bin and filter in place.

- 1) Remove the handheld vacuum cleaner from the main body by pressing the handheld vacuum cleaner release button and detaching the handheld unit.
- 2) Hold the unit over a suitable household waste bin, and use one hand to press the two dust bin release buttons (Fig. 11).
- 3) To separate the dust bin from the handheld vacuum cleaner body, lift the released end first and pivot the dust bin upwards to detach the unit from the holding clip at the filter end of the unit.
- 4) Remove the filter basket from the dust bin. Empty the contents into a waste bin (Fig. 12).

2. Cleaning the Filter

NOTE: The key to maximum performance is having a clean filter. Cleaning the filter frequently will help your vacuum cleaner operate at peak efficiency. A spare filter is provided with your vacuum cleaner to allow you to dry one filter properly while using the other. Additional filters can be purchased from www.cleva-europe.com.

- 1) Remove the filter from the filter basket. With a soft, dry brush, clean any accumulated debris from the side screens of the filter and the filter basket (Fig. 13).
- 2) After repeated use, it may be necessary to wash the filter basket and filter. Hand wash in warm water. After washing, set aside and allow to air dry for 24 hours.

IMPORTANT: Ensure the filter and filter basket are completely dry before reinstalling.

- 3) Insert the clean and dry filter into the basket and fit the basket into the dust bin ensuring an air tight seal is formed around the dust bin opening.
- 4) Reconnect the dust bin to the handheld vacuum cleaner. To do so, insert the filter end of the dust bin into the holder first and ensure the holding clip is securely located into the dust bin lid. Press the other end of the dust bin into position until you hear a 'click' (Fig. 14).

3. Cleaning the Motorised Floor Head and Removing Blockages

The brush roll may accumulate debris such as strings, hair and fibres. This type of debris can wrap around the brush and diminish its ability to clean effectively.

Remove Brush Roll for Cleaning

- 1) Make sure the vacuum cleaner is turned OFF, then remove the handheld vacuum cleaner and set aside.
- 2) You can remove the motorised floor head for easy maintenance by pressing the two motorised floor head release buttons located on either side of the unit neck. Press the two release buttons and simultaneously pull the motorised floor head from the main body.
- 3) Turn the unit over to access the brush roll.
- 4) Locate the release lever on the right side of the brush roll. Apply pressure to the bottom of the tab and slide the tab to the right to unlock. Lift the brush roll out of housing (Fig. 15).
- 5) Clean off debris and anything wrapped around the brush. Use a pair of scissors to remove threads, hair etc. If you see any hair stuck in the end cap area, remove the end cap from the brush roll to remove the hair (Fig. 16). Then reinstall the end cap.
- 6) Reinsert the brush roll back into the housing by aligning the hexagon end of the brush roll into the motorised floor head unit first, ensuring it is fully and securely placed onto the mounting bracket. Then, insert the octagon end correctly into place and lock the securing tab back into position (Fig. 17 & 18).

NOTE: When inserted correctly the brush roll should be able to rotate.

Remove Motorised Floor Head Blockages

- 1) To clean out the motorised floor head, press the two release buttons, and pull the head away from the main body (Fig. 19).
- 2) Flex the connection hose to ensure you can see straight through the other end. If you can see any blockages in this area, carefully remove them.
- 3) Reattach the motorised floor head onto the vacuum body.

NOTE: Do not damage the connection pins; do not use scissors or other sharp objects to remove a blockage from the head.

TROUBLESHOOTING



WARNING

Disconnect electrical supply before performing maintenance to the vacuum cleaner. Failure to do so could result in electrical shock or personal injury. Remove the handheld unit from the main body if performing maintenance on the brush roll or motorised floor head.

Cleaning Performance

Vacmaster vacuum cleaners are tested for endurance. If your motor is operating, then the most likely cause for a loss in suction is a blockage or an opening in the vacuum.

To maintain a high cleaning performance from your machine, it is important to replace or clean filters as necessary. Empty full dust bin to prevent performance drops. A performance drop with clean filters can only be caused by a blockage in the tools or the hose connections.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Vacuum will not power on.	Battery may be depleted.	Charge the battery as instructed on page 8.
	Wrong charger being used.	Be sure to use only the charger supplied with your product.
	Handheld vacuum cleaner is not installed properly.	Remove handheld vacuum cleaner and reattach ensuring that it is securely in place.
	Charging connector is not fully plugged into the charging base.	Be sure the charging connector is fully inserted in the charging base.
	Charging plug is not fully plugged into outlet.	Be sure charging plug is fully plugged into outlet.
Battery charge indicator does not illuminate.	Charging adapter is not plugged in.	Be sure the charging adapter is plugged in properly to the power supply and to the charging port on the side of the charging base.
	Debris accumulated on the metal charge contacts on the handheld vacuum cleaner, main body and charging adapter.	Be sure no debris is accumulated on the metal charger contacts on the handheld vacuum cleaner, main body and charging adapter.
Motorised brush not turning.	Brush roll is jammed.	Remove obstruction. Follow instructions on page 11.
	Brush roll needs to be reset.	Turn the unit off and remove the obstruction, then turn back on.
	Brush roll is not installed correctly.	Remove brush roll and reinstall following instructions on page 11.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Dirt pick-up is poor or suction power is weak.	Dust bin is full.	Empty dust bin.
	Filter needs cleaning.	Follow filter cleaning instructions on page 10.
	Filter needs to be replaced.	Replace the filter. To purchase online at www.cleva-europe.com .
	Battery may be depleted.	Charge the battery as instructed on page 8.
	Dust bin is not installed correctly.	Check dust bin for correct installation and ensure it is snapped firmly in place.
Dust escapes from vacuum.	Filter is missing or installed incorrectly.	Check filter for correct installation.
	Filter is damaged and needs to be replaced.	Replace the filter. To purchase online at www.cleva-europe.com .
	Dust bin installed incorrectly.	Position dust bin correctly and snap firmly into place.
Vacuum turns off on its own.	Battery may be depleted.	Charge the battery as instructed on page 8.
	Brush roll is jammed causing motor protection system activated.	While off, remove obstruction and then turn unit on.

TECHNICAL DATA

Model Number	VSD1801UK
Battery Power	18 V  2.2 Ah
Nominal Rated Voltage of Battery Pack	18 V  Li-ion
Max Rated Voltage of Battery Pack	20 V MAX  Li-ion
Max Running Time	30 mins
Speed Settings	2 speeds
Dust Capacity	0.5 L
The Whole Unit Weight	2.0 kg
Charger Input	100-240 V ~ 50/60 Hz
Charger Output	21.2 V  470 mA
Battery Full Charge Time	5 hours

















RECYCLING AND DISPOSAL






This marking indicates that this product should not be disposed with other household wastes throughout the EU. The machine must be delivered in rigid packaging to avoid damage during transportation. The packaging and the machine itself are manufactured from recyclable materials and should be disposed of accordingly.



This vacuum cleaner contains Lithium-ion battery. Do not dispose of batteries in household waste, fire or water. Dispose of batteries in accordance with the local regulations where they will be recycled in an environmentally friendly manner.

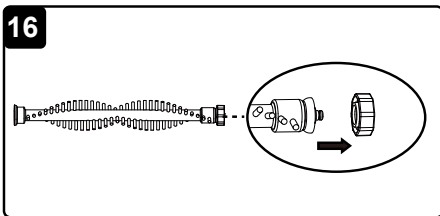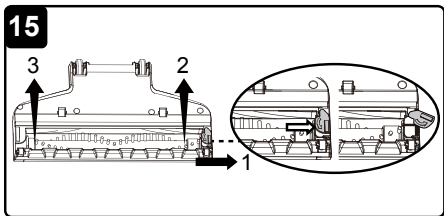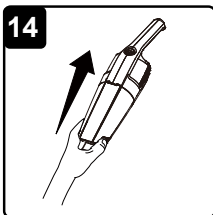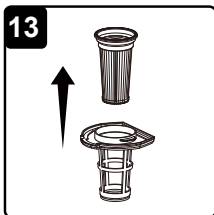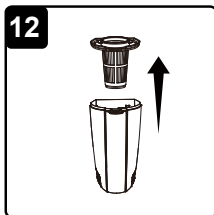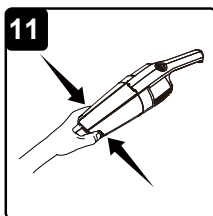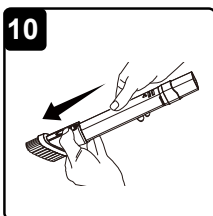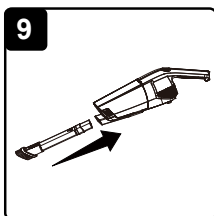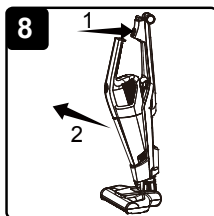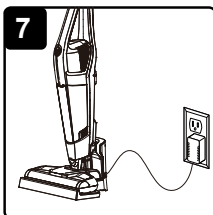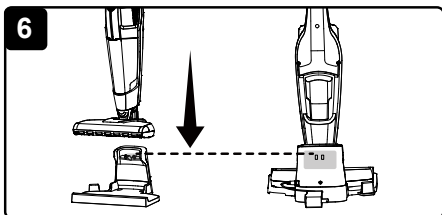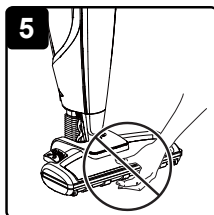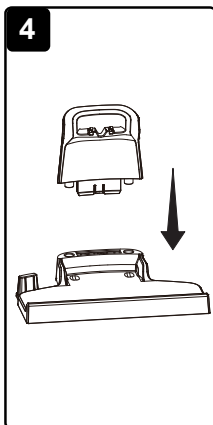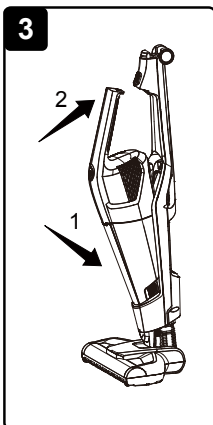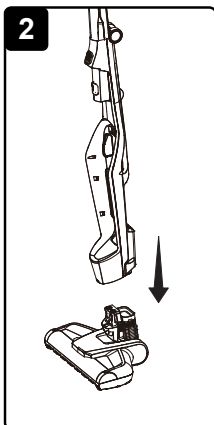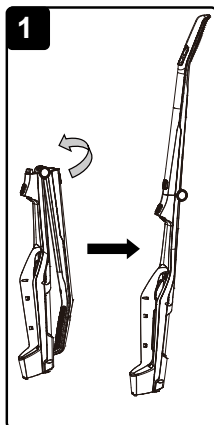

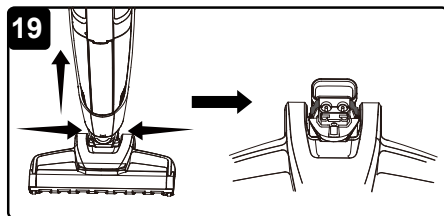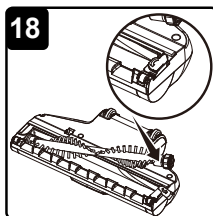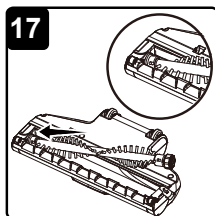

VSD1801UK

Suzhou Cleva Electric Appliance Co., Ltd.

No.8 Ting Rong Street

Suzhou Industrial Park, Suzhou

Jiangsu Province, China

www.cleva-europe.com

Made in P.R.C