


Tent Setup Instructions

1. Confirm the contents

Please make sure that the contents are complete

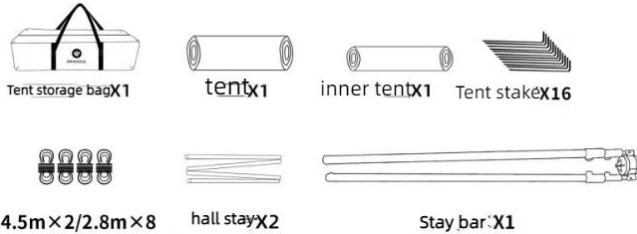

2. Spread out the inner tent

Flatten and straighten the inner tent

3. Fix the tent with tent stakes

Take out the pegs and fix the tent, the second peg needs to be fixed to the rope buckle on the opposite side of the first peg to make it easier to straighten the tent mat, and the rest of the rope buckles are fixed in the same way as before.


Number of tent stakes and wind ropes



4. Connect the camping pole

Take out the camping pole and connect it

④ Camp pillar

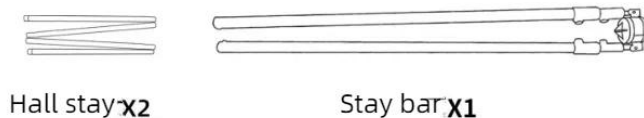

5. Connect the camping pole with the inner tent

Open the curtain of the inner tent, open the poles, connect the tips of the poles with the roof of the tent, expand the telescopic part of the poles and hold the bottom of the poles to the bottom

of the center line of the inner tent, and pull out all the telescopic poles.



6. Connect the outer tent with the inner tent

Flatten and straighten the outer tent, the inner side of the outer tent door has side curtains as the main door, the outer tent covers the inner tent, organize and straighten it, the bottom rope buckle of the outer tent connects with the ground nail.



7. Foyer pole connecting outer tent

Open the curtain of the outer tent, connect the foyer pole with the curtain of the outer tent and fix it with the ground nail, use the wind rope to connect the side curtain and fix it with the ground nail.

8. Connect the wind rope to the outer tent

Connect the wind rope to the outer tent and fix it with floor spikes, the construction is finished.

